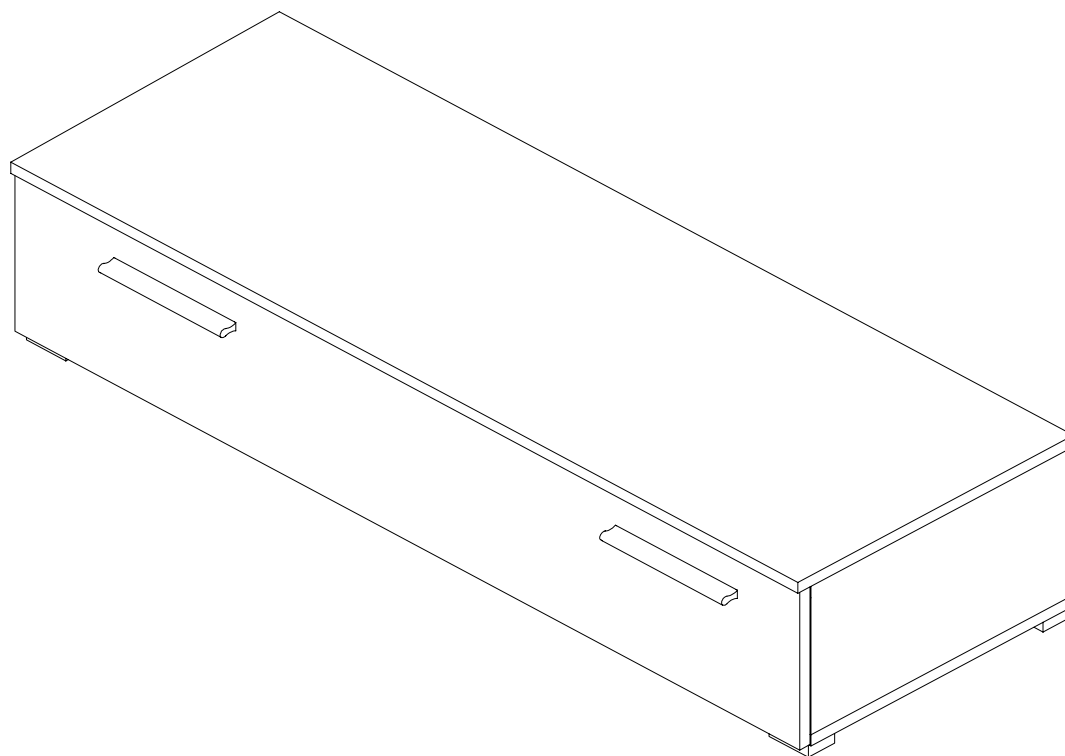 


"FLAME" Unterteil 120



(D)

Montageanleitung

(GB)

Assembly instructions

(NL)

Handleiding voor de montage

(PL)

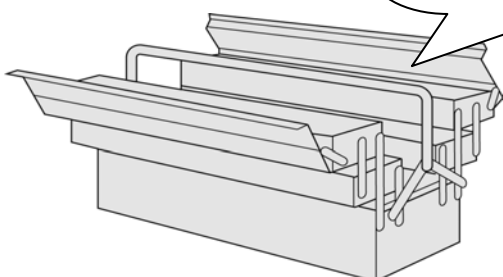 
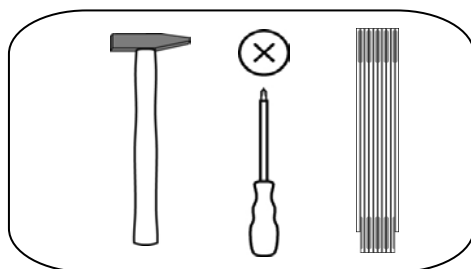 
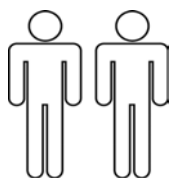 
Instrukcja montazu

(TR)

Montaj talimati

(RU)

Инструкция по сборке



Service • Dienstverlening • Serwis • Servis • Сервисная служба

Name • Naam • Nazwa • Isim • Название

FLAME

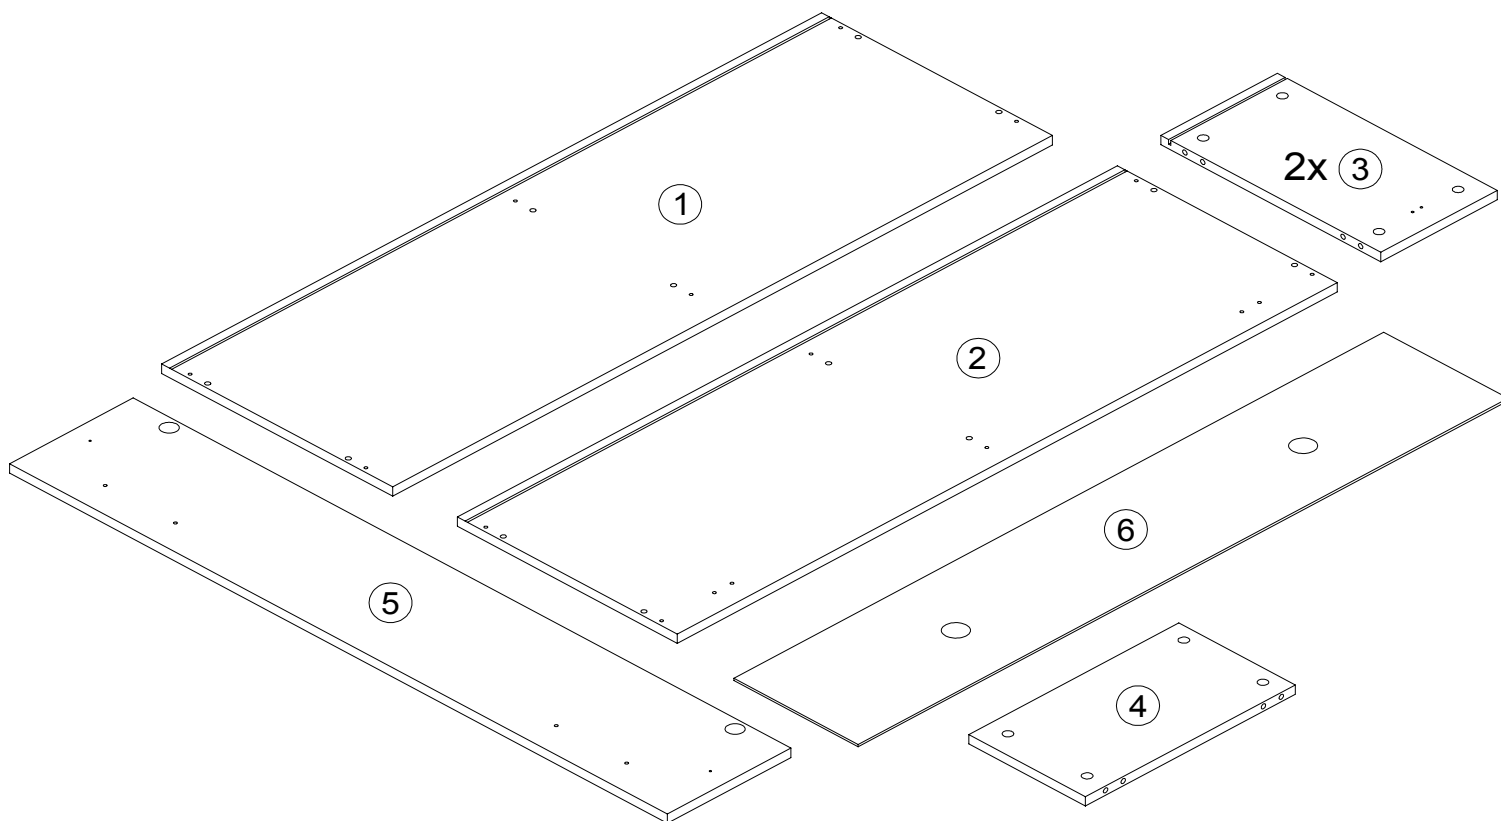 
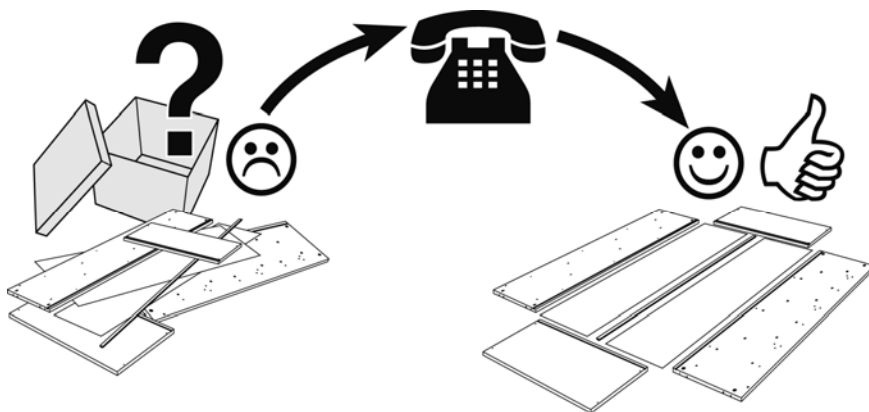 
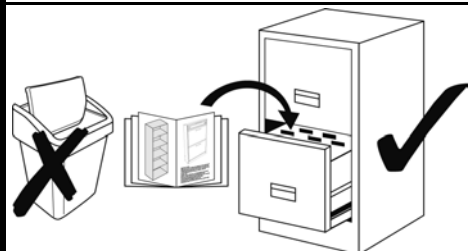 
Typ • Type • Тір • Тип

 
 
 
 
 
 
 
 
 
 
 
 
 
 
TV-Unterteil 120cm

Nr. • No. • Номер

779 807 / 781 406

Schwarz / Weiß



A1  12	B1  12	C1  8x30 12	E10  2 mm 2	F16  Kr.0 mm 2	K11  60x40x20 5	L1  4	M4  BA 128mm 2	N1  4,0 x 30 6
N2  2,7 x 20 3	P2  3,5 x 13 6	P9  3,5 x 25 10	P10  3,5 x 13 kl. Kopf 8	S1  12	W4  2			

