


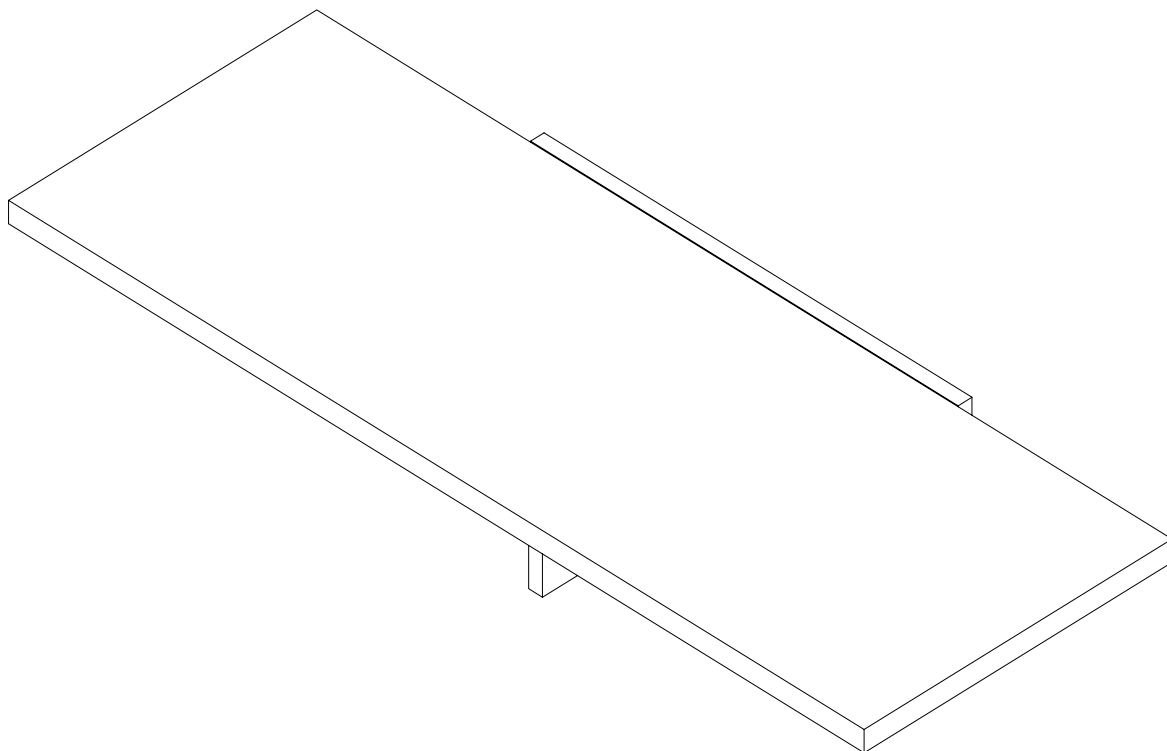

"HAPPY" TV-Bühne



Montageanleitung



Handleiding voor de montage



Montaj talimati



Istruzioni di montaggio



Montážní návod



Instrucțiuni de montaj



Assembly instructions



Instrukcja montazu



Инструкция по сборке






Notice de montage



Szerelési útmutató



Návod na montáž

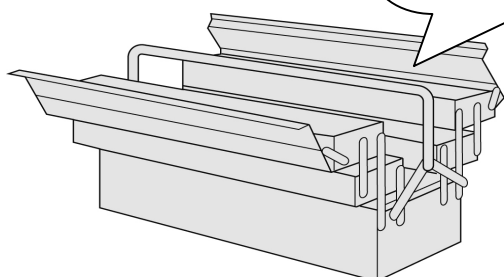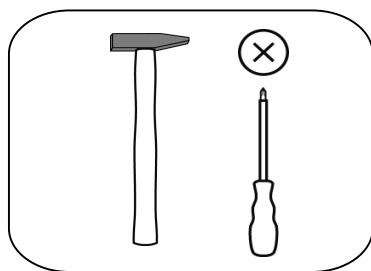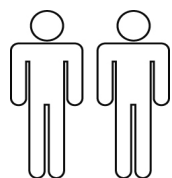

Name • Nom • Nome • Naam • Nazwa • Jméno • Názov • Név • Denumire • Isim • Название

HAPPY



Typ • Type • Tip • Típus • Тіро • Тип

 

 
TV-Bühne

Nr. • No. • N° • Номер • Ć • Sz

885 744 / 885 835

 **Walnuss / Weiß**

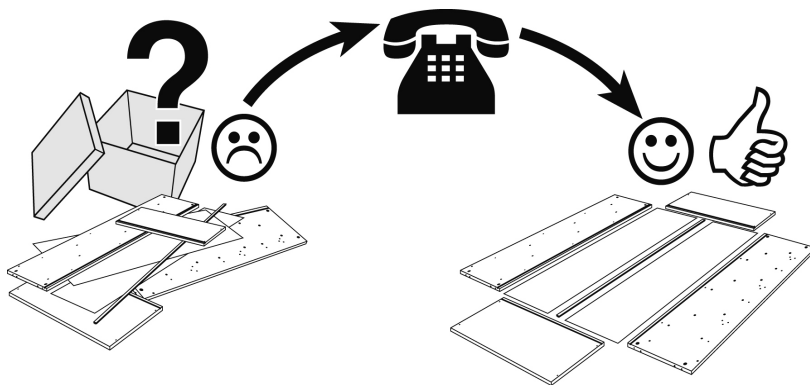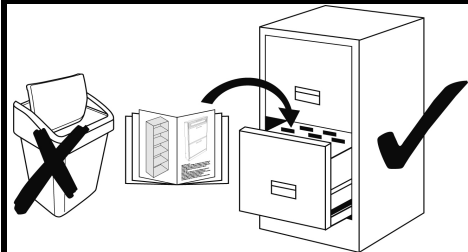

- C1**

Ø8x30
- 6**
- P4**

4,0 x 40
- 2**
- T1**

7,7 x 45
- 6**
- 