

SINCE 1908

Solis

SANDWICH TOASTER

Type 8003

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	6
APPLIANCE DESCRIPTION	6
CONTROL BUTTONS	8
BEFORE FIRST USE	8
INSTALLATION	8
TOASTING BREAD	9
TOASTING SANDWICHES	10
TOASTING BAGELS	10
USING THE REHEAT FUNCTION	11
USING THE DEFROST FUNCTION	11
CLEANING AND CARE	12
STORAGE	12
TECHNICAL SPECIFICATIONS	12
TROUBLESHOOTING	13
DISPOSAL	13
2 YEAR GUARANTEE	14
SOLIS CUSTOMER SERVICE	14

▲ INTENDED USE

- This appliance is intended to toast or heat different types of bread.
- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance is intended for indoor use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.

▲ IMPORTANT SAFETY PRECAUTIONS

GENERAL SAFETY INSTRUCTIONS

▲ WARNING

- Ensure you have fully read and understood the instructions in this user manual before you install or use the appliance. Keep this document for future reference.
- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- If the power cable is damaged, replace it with an original special cable or assembly available from the manufacturer or its service agent.

SAFETY INSTRUCTIONS REGARDING INSTALLATION

▲ WARNING

- Do not drop the appliance and avoid bumping.

- Place the appliance on a stable, flat, heat and moisture resistant surface.
- Keep a minimum safety distance of 20 cm between the appliance and walls, curtains or other materials and objects and make sure that the air around the appliance can circulate freely.
- Do not place the appliance in direct sunlight.
- Do not use a timer or a separate remote-control system that switches on the device automatically.
- Do not leave the power cable hanging over table edges to prevent the appliance from being pulled down. Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.
- Never place the appliance in such a way that it is at risk of falling into water or coming into contact with water resp. other liquids (e.g. in or near a sink).
- Never reach for an appliance that has fallen into water or other liquids:
 - Always wear dry rubber gloves to unplug the appliance before taking it out of the water.
 - Do not start using the appliance again before having it checked for functionality and safety by Solis or a service center authorized by Solis.
- Do not place the appliance directly under a power outlet.
- Unplug the appliance before moving the appliance.
- Fully unwind the power cable before use.

SAFETY INSTRUCTIONS REGARDING USE

⚠ WARNING

- Children must be supervised to ensure that they not play with the appliance.
- Do not operate the appliance with wet hands.
- Only use the appliance with the provided accessories or accessories recommended by Solis. Incorrect accessories or misuse can lead to damage to the appliance.
- Parts of the appliance may get hot during use. When the appliance is operating, only touch the buttons, the activation handle, and the bun warmer slider.
- Do not move the appliance when in use.
- Do not cover the air vents when the appliance is in use.
- Do not switch on the appliance when it is empty.
- Unplug the appliance when it is not in use.
- Let the appliance cool down before storage.
- Do not use cutlery or another metal object to remove a stuck piece of bread when the appliance is switched on. First disconnect the appliance.

SAFETY INSTRUCTIONS REGARDING MAINTENANCE

⚠ WARNING

- Disconnect the appliance from the power source before service and when replacing parts.
- Let the appliance cool down before cleaning.
- Never immerse the appliance in water or place it in a dishwasher.

- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.

▲ CONTENTS

 
Please check the contents of the package:

1x SANDWICH TOASTER

2x Sandwich tong

▲ APPLIANCE DESCRIPTION

This SANDWICH TOASTER is an appliance that is used to toast your bread, bagels and sandwiches perfectly. Thanks to the sandwich mode the cheese melts while the bread is toasted without burning. The bagel mode heats up your sliced bagels on one side so they still stay nice and soft on the other side. The appliance is equipped with a reheat function, a defrost function and a turbo function for toasting bread. The turbo function can only be used in the normal toasting mode. The built-in bun warmer allows you to heat bigger types of bread too!

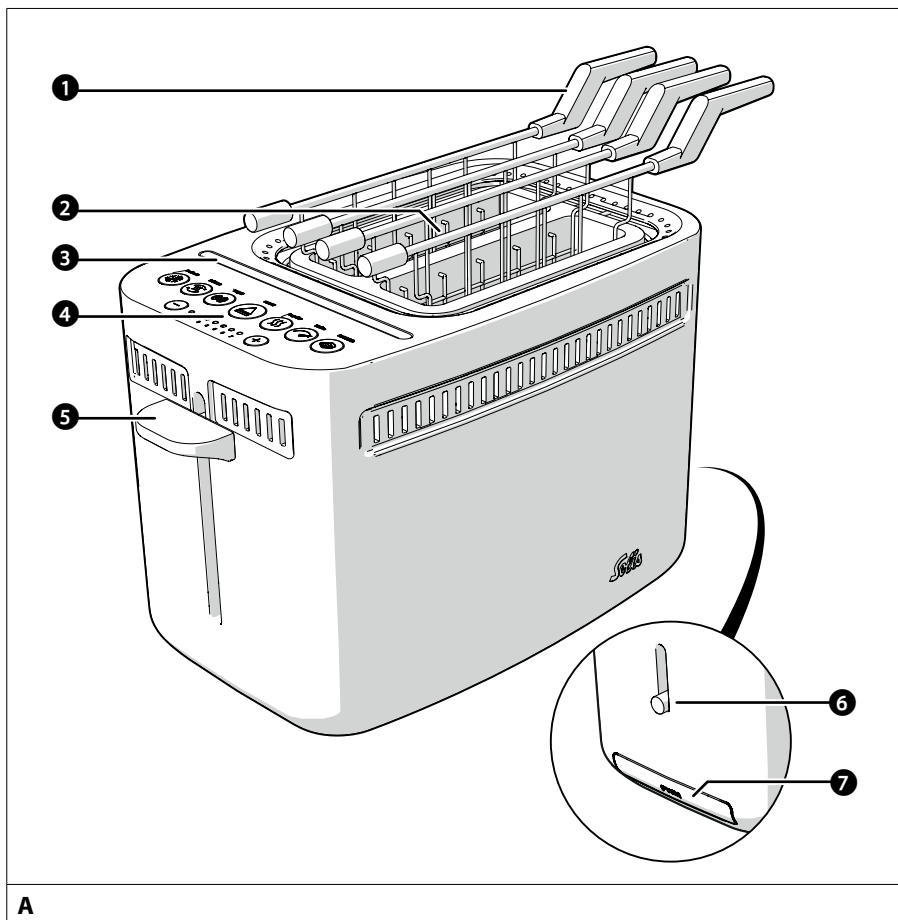


A

- 1 Sandwich tongs (2x)
- 2 Bread slots
- 3 LED strip
- 4 Control buttons

- 5 Activation handle
- 6 Bun warmer slider
- 7 Crumb tray

 ▲ CONTROL BUTTONS

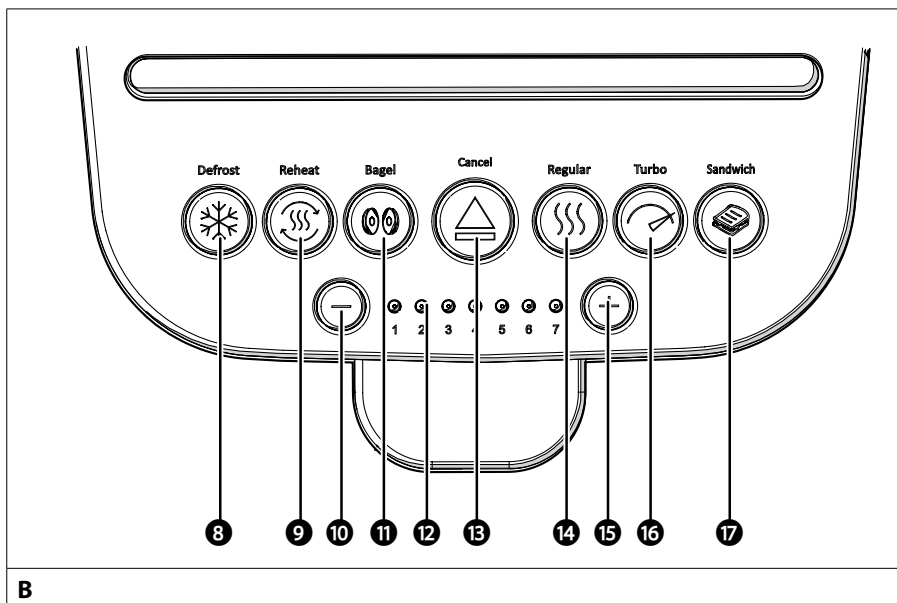

B

- | | | | |
|----|----------------------------------|----|----------------------------------|
| 8 | Defrost button | 13 | Cancel button |
| 9 | Reheat button | 14 | Regular toasting button |
| 10 | Decrease browning setting button | 15 | Increase browning setting button |
| 11 | Bagel toasting button | 16 | Turbo toasting button |
| 12 | Browning indicator LEDs | 17 | Sandwich toasting button |

▲ BEFORE FIRST USE

To prepare the appliance before first use:

1. Rinse the **sandwich tongs** 1 with hot water.

▲ INSTALLATION

To install the appliance:

 
1. Place the appliance on a stable, flat, and heat and moisture resistant surface.
2. Insert the power plug into a power outlet. The appliance switches on and beeps once. The LED strip lights up blue.

The appliance is now ready for use.

▲ TOASTING BREAD

To toast bread:

1. Place one slice of bread in each **bread slot** 2.

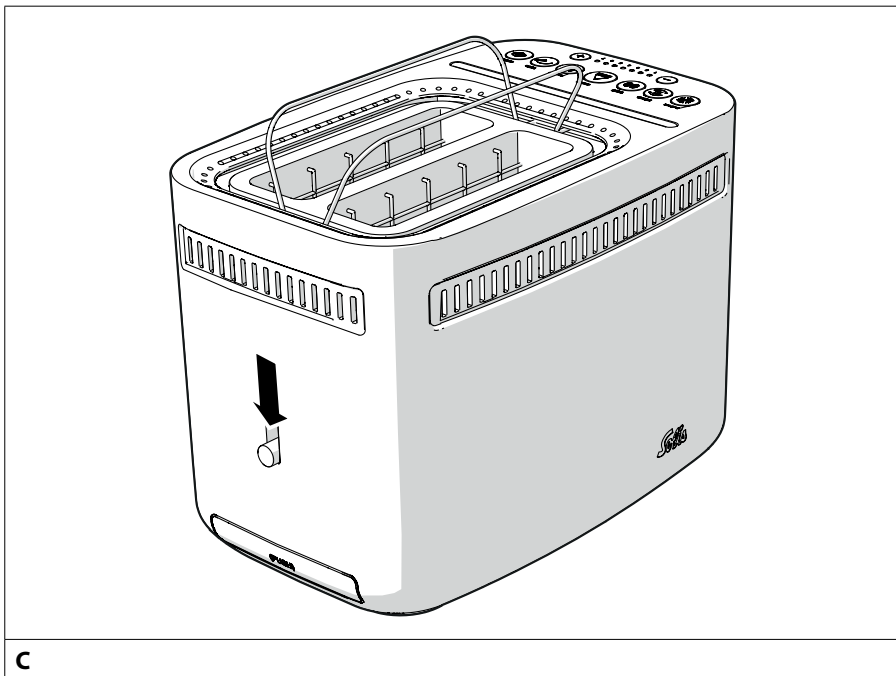

- i** When you want to heat bread that does not fit in the bread slots, fold out the bun warmer with the bun warmer slider and place the bread on top (C).
2. Press the **regular toasting button** 14 to activate the regular toasting mode.
3. Use the **browning setting buttons** 10 15 to select the desired browning level. The selected browning level is shown with the **browning indicator LEDs** 12.
- i** You can also use the setting buttons to change the browning setting.
4. Push down the **activation handle** 5 to start toasting.

The LED strip lights up red. When the bread is toasted, the activation handle jumps up.

- i** During the toasting process, the LED of the selected browning setting stays on. The remaining LEDs count down the toasting process.

- i** Press the turbo button to toast bread quickly. Turbo function is available for regular toast mode only.
 - i** Press the cancel button to stop the toasting process.
5. If you need to toast or heat more bread, repeat the steps in this chapter.
- i** The appliance switches off automatically when not in use for 5 minutes. Press any button to re-activate the appliance.

▲ TOASTING SANDWICHES

To toast sandwiches:

1. Place one sandwich in each **sandwich tong** **1**.
 2. Place one filled **sandwich tong** **1** in each **bread slot** **2**.
 3. Press the **sandwich toasting button** **17**. The sandwich toasting button lights up blue.
- i** Press the Cancel button to delete all selected settings.
4. Push down the **activation handle** **5** to start toasting.

The LED strip lights up red. When the grilled sandwiches are ready, the activation handle jumps up and the LED strip lights up blue.

- i** The appliance switches off automatically when not in use for 5 minutes. Press any button to re-activate the appliance.

▲ TOASTING BAGELS

To toast bagels:

1. Slice your bagel in half to toast it.
2. Place one half of the bagel in each **bread slot** **2**. Make sure the cut side of the bagel faces the center heating elements. Only these two heating elements are activated in bagel mode.
3. Press the **regular toasting button** **14** or the **turbo toasting button** **16**. The selected button lights up blue.
4. Press the **bagel toasting button** **11**. The bagel toasting button lights up blue.
5. Push down the **activation handle** **5** to start toasting.

The LED strip lights up red. When the grilled sandwiches are ready, the activation handle jumps up and the LED strip lights up blue.

▲ USING THE REHEAT FUNCTION

To reheat toast:

1. Press the **regular toasting button** 14, **turbo toasting button** 16, or the **sandwich toasting button** 17. The selected button lights up blue.
2. Press the **reheat button** 9 to activate the reheating function. The reheat button lights up blue.
3. Push down the **activation handle** 5 to start toasting.

The LED strip lights up red. When the grilled sandwiches are ready, the activation handle jumps up and the LED strip lights up blue.

- i When the reheat function is activated, it stays on when the toasting process is finished.
4. Press the **cancel button** 13 to switch off all functions.
- i The appliance switches off automatically when not in use for 5 minutes. Press any button to re-activate the appliance.

▲ USING THE DEFROST FUNCTION

If your bread is still frozen, use the defrost function. To use the defrost function:

1. Press the **regular toasting button** 14, **turbo toasting button** 16, or the **sandwich toasting button** 17. The selected button lights up blue.
2. Press the **defrost button** 8. The defrost button lights up blue.
3. Push down the **activation handle** 5 to start toasting. The activation handle springs back up once the bread is toasted.

- i When the defrosting function is activated, it stays on when the toasting process is finished.
4. Press the **cancel button** 13 to switch off all functions.
- i The appliance switches off automatically when not in use for 5 minutes. Press any button to re-activate the appliance.

▲ **CLEANING AND CARE**

⚠ Do not put any part of the appliance in a dishwasher.

We recommend cleaning the appliance after use. To clean the appliance:

1. Unplug the appliance.
2. Let the appliance cool down.
3. Push on the **crumb tray** 7. The crumb tray unlocks.
4. Pull out the **crumb tray** 7.
5. Empty the **crumb tray** 7 in a bin.
6. Place back the **crumb tray** 7.
7. Clean the **sandwich tongs** 1 with a damp cloth.
8. Clean the appliance with a slightly damp cloth.

▲ **STORAGE**

Store the appliance in the original packaging in a dry and enclosed space.

▲ **TECHNICAL SPECIFICATIONS**

Model-No.	Type 8003
Voltage / frequency	220–240 V~ / 50 – 60 Hz
Output	1375 - 1635 W
Dimensions (W x D x H)	18 x 29 x 21 cm
Weight	2.0 kg (without sandwich tongs)
Browning settings	7

Technical changes reserved.

▲ TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not function.	The power connection is not working.	Make sure the power cable is connected to a working power source.
	The appliance is damaged.	Press any button. If the appliance doesn't switch on, the appliance is damaged. Contact Solis or a Solis authorized service center.

▲ DISPOSAL



EU 2012/19/EU

Information for correct disposal of the product in accordance with the European Directive EU 2012/19/EU.

At the end of its working life this equipment must not be disposed of as an household waste. It must be taken to special local community waste collection centres or to a dealer providing this service. Disposing of electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.

Solis of Switzerland Ltd reserves the right to carry out technical and visual changes and modifications to improve the product at any time.

SOLIS HELPLINE

This item stands out due to its long-life cycle and reliability. Despite this though, if a malfunction ever occurs, simply give us a call. Often a breakdown can be easily and quickly remedied with the right tip or technique without having to straight away send off the device for repair. We will give you all the advice and practical support you require. The contact addresses can be found at the end of this manual.

Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

▲ 2 YEAR GUARANTEE

i Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE

It is always worth calling us before sending in the appliance, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. Please visit us at www.solis.com for countryspecific contact details. Naturally, we would also be pleased to provide you with information over the phone. Please contact us via the following telephone numbers:

For Switzerland:	+41 91 802 90 10
For Germany:	0800 724 0702
For Austria:	0800 22 03 92
For the Netherlands:	+31 85 4010 722
For Belgium:	+32 2 808 35 82
For the other countries:	+41 44 874 64 84

CH**Schweiz / Suisse / Svizzera**

✉ Solis Produzione SA
Centro Solis
Via Penate 4
CH – 6850 Mendrisio

Adresse für Warenretouren abweichend – siehe:

Adresse différente pour les retours de produit – voir:

Indirizzo differente per resi di merce - vedi:

www.solis.com

☎ 091 – 802 90 10
@ support.ch@solis.com
🌐 www.solis.ch

D**Deutschland**

✉ Solis Deutschland GmbH
Marienstrasse 10
D – 78054 Villingen-
Schwenningen

Adresse für Warenretouren abweichend – siehe:

www.solis.com

☎ 0800 – 724 07 02
@ info.de@solis.com
🌐 www.solis.de

AT**Österreich**

✉ Solis Austria
Bruderhofstrasse 10
A – 6800 Feldkirch

Adresse für Warenretouren abweichend – siehe:

www.solis.com

☎ 0800 – 22 03 92
@ info.at@solis.com
🌐 www.solis.at

NL**Nederland**

✉ Solis Benelux BV
Stadskade 318
NL – 7311 XX Apeldoorn

Afwijkend adres voor productretouren – zie:

www.solis.com

☎ 085 – 4010 722
@ info.nl@solis.com
🌐 www.solisonline.nl

B**LU****België / Belgique
Belgien / Luxembourg**

✉ Solis Benelux BV
Stadskade 318
NL – 7311 XX Apeldoorn

Address for return shipment of goods differs – please refer to:

Afwijkend adres voor productretouren – zie:

Adresse différente pour les retours de produit – voir:

www.solis.com

☎ +32 – (0)2 – 808 35 82
@ info.be@solis.com
🌐 www.solis.be

INT**International**

✉ Solis Produzione SA
Centro Solis
Via Penate 4
CH – 6850 Mendrisio
Switzerland

Address for return shipment of goods differs – please

refer to www.solis.com

☎ +41 – 91 – 802 90 10
@ support.ch@solis.com
🌐 www.solis.com

SINCE 1908

Solis

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg-Zurich • Switzerland
www.solis.ch • www.solis.com

Please visit us at

www.solis.com