



Lotus

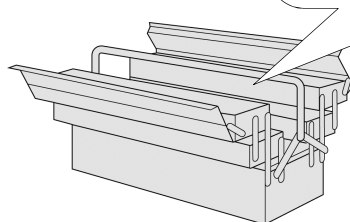


- | | |
|-----------------------------|----------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (NL) Handleiding voor de montage |
| (CZ) Montážní návod | (IT) Istruzioni di montaggio |
| (RO) Instrucțiuni de montaj | (RU) инструкция по сборке |
| (PL) Instrukcja montażu | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (TR) Montaj talimati |

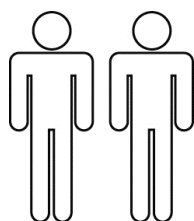

Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба


Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	Lotus EB	
Nr. • No. • N° • Номер • Č • Sz	SH55	
Typ • Type • Tip • Típus • Tipo Тип	OHNE	

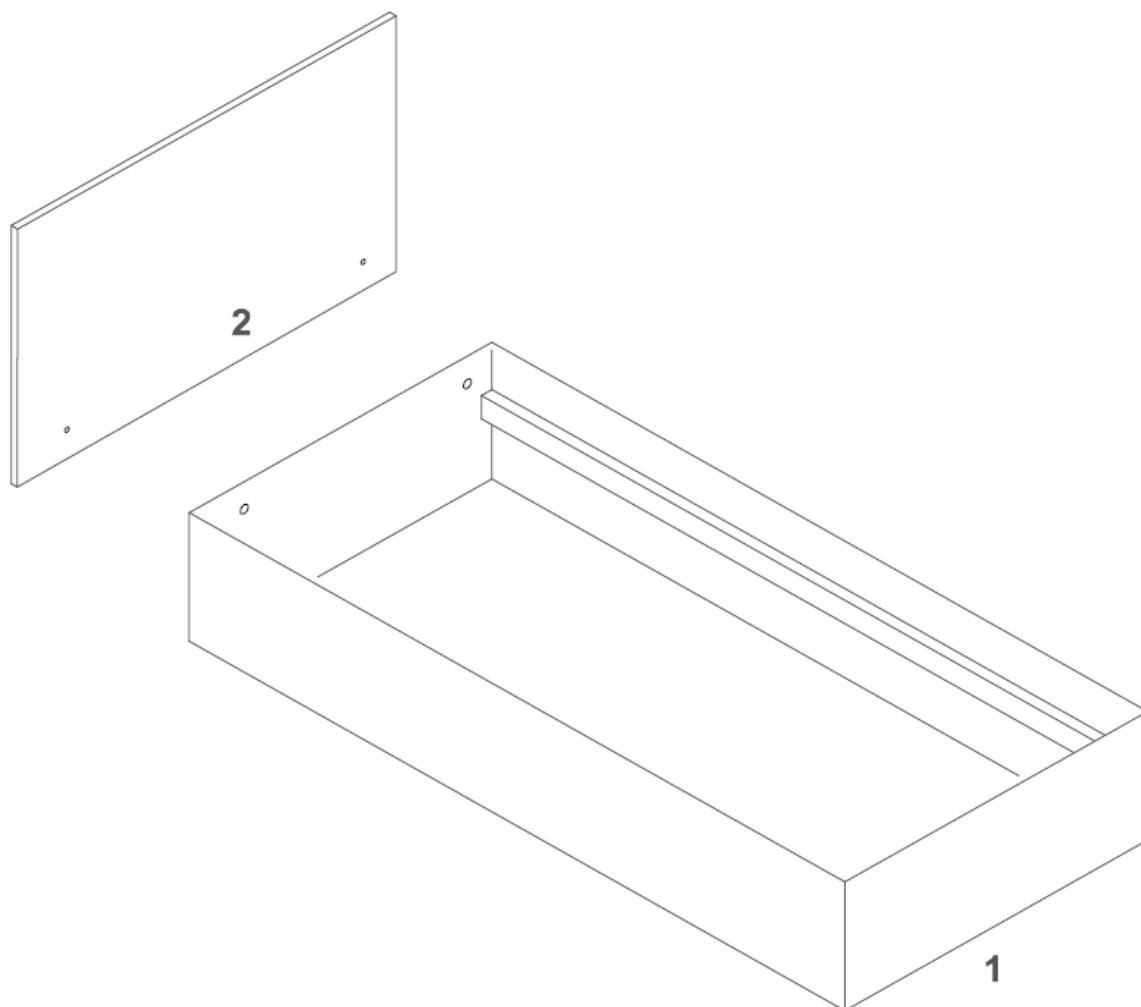



A	B	C	D
4x	4x 8x60	4x M8	4x M8

Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба


Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	Lotus EB	
Nr. • No. • N° • Номер • Č • Sz	SH55	
Typ • Type • Tip • Típus • Tipo Тип	LARO	

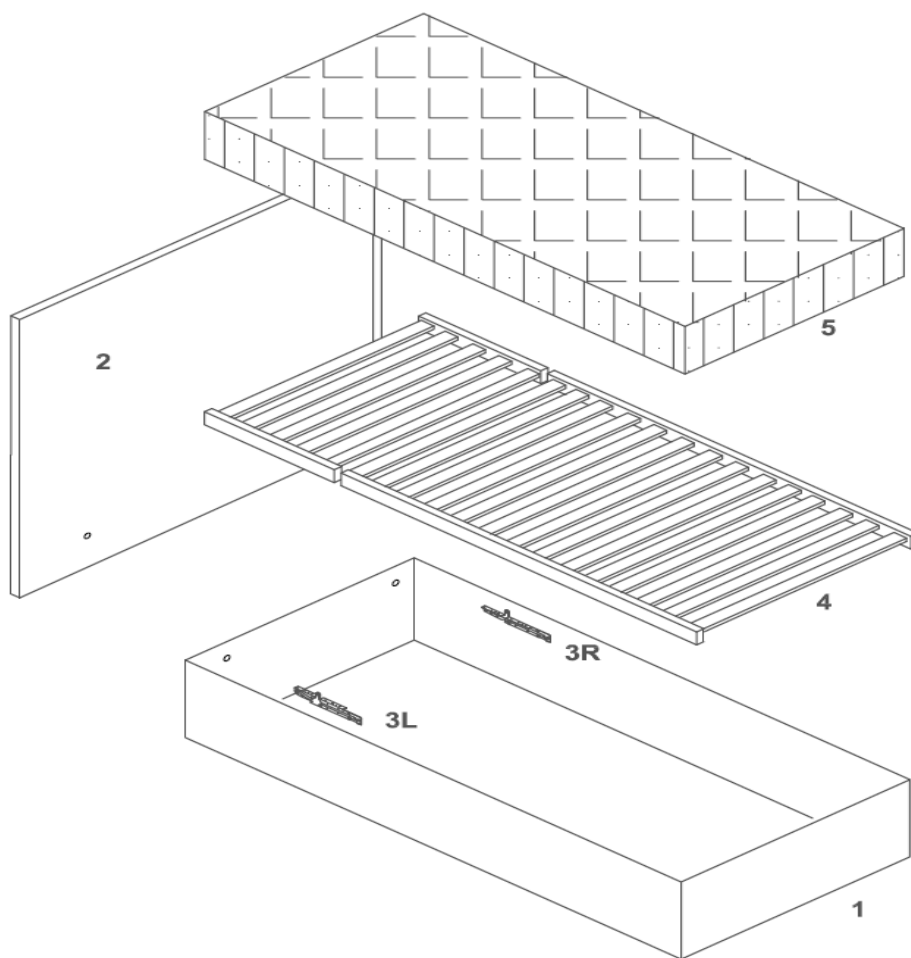


A	B	C	D
4x	4x 8x60	4x M8	4x M8

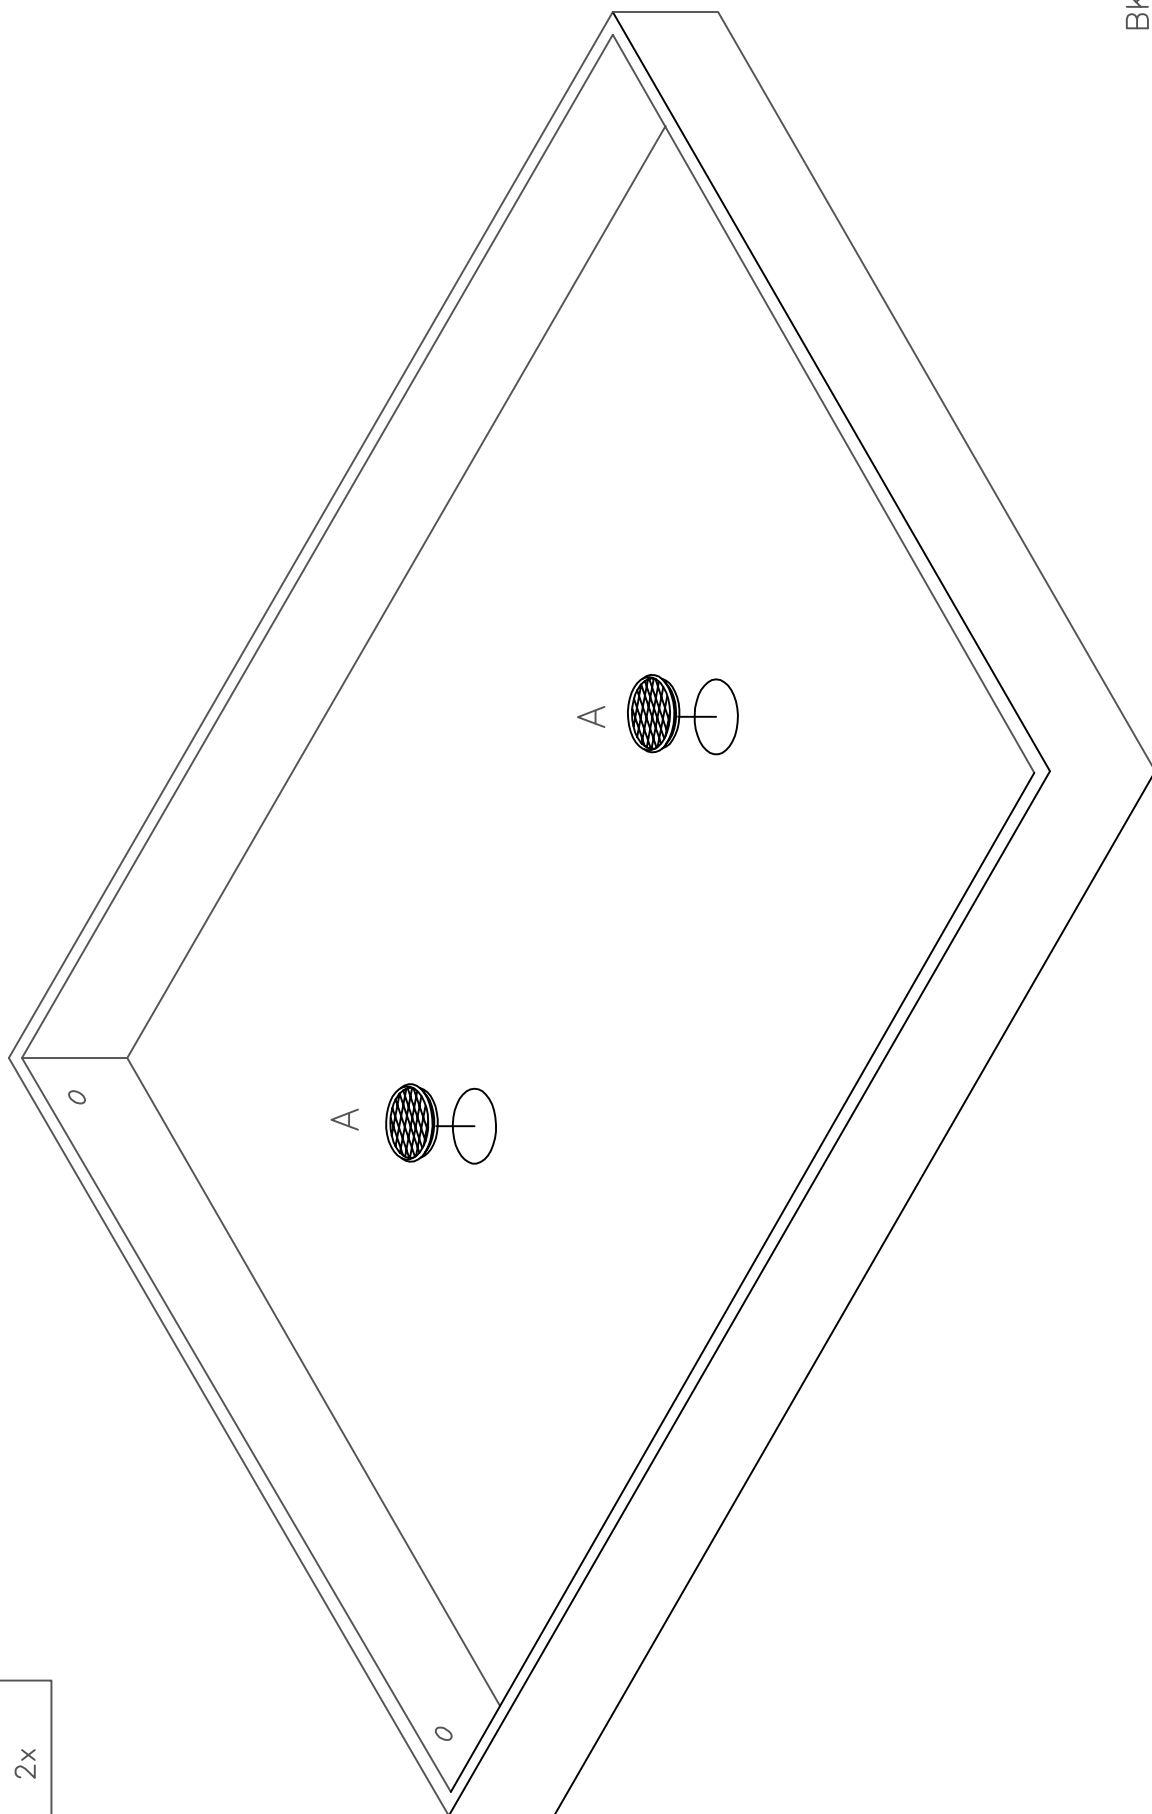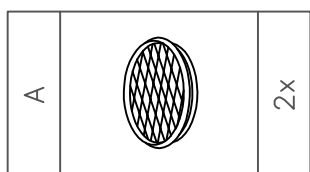

 

B		D	
		C	
4x 8x60		4x M8	
		4x M8	

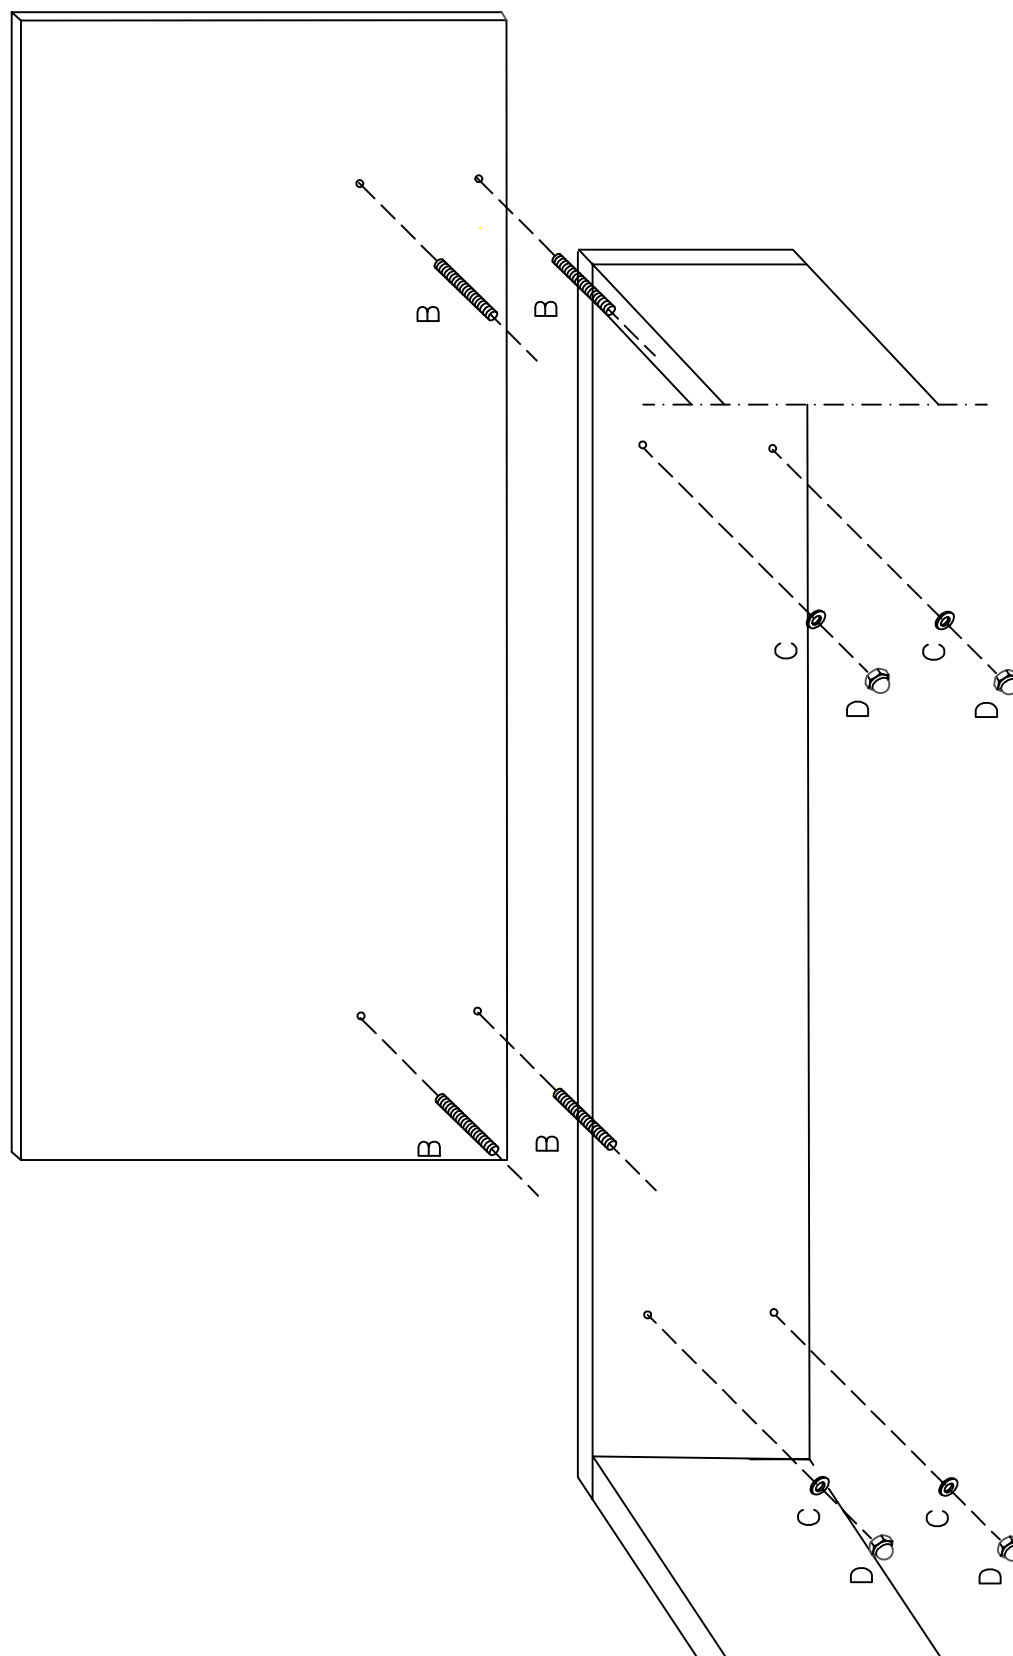

KT_4xGEW_8x60