 
 
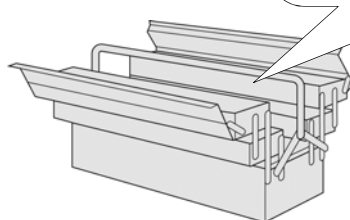


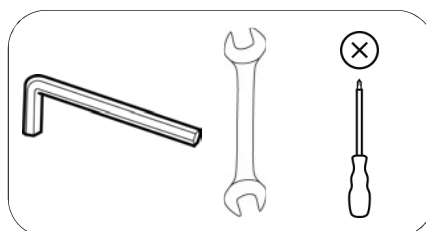



- | | |
|----------------------------------|---------------------------------------|
| D Montageanleitung | GB Assembly instructions |
| FR Notice de montage | NL Handleiding voor de montage |
| CZ Montážní návod | IT Istruzioni di montaggio |
| RO Instrucțiuni de montaj | RU инструкция по сборке |
| PL Instrukcja montażu | SK Návod na montáž |
| HU Szerelési útmutató | TR Montaj talimatı |

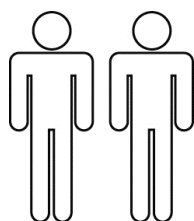

Service • Assistenza • Dienstverlening • Serwis

Servis • Szerviz • Сервисная служба


Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	Tom DB
Nr. • No. • N° • Номер • Č • Sz	SH51
Typ • Type • Tip • Típus • Tipo Тип	BK zerl. OHNE

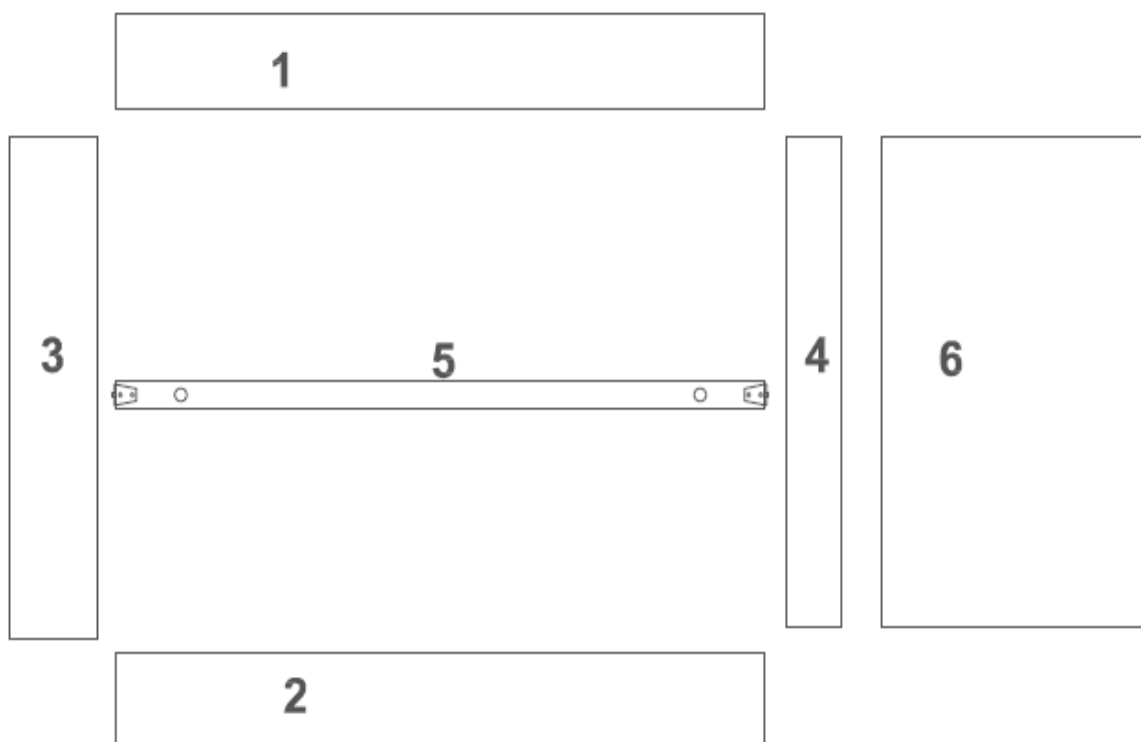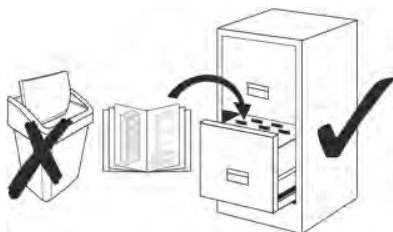  


A	B	C	D	E	F	G	H	I	J	K
2x	6x	24x 3,5x20	4x	16x 6x25	4x	4x	4x 8x20	4x 8x70	4x 8x40	4x M8


Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	Tom DB
Nr. • No. • N° • Номер • Č • Sz	SH51
Typ • Type • Tip • Típus • Tipo Тип	BK zerl. LARO

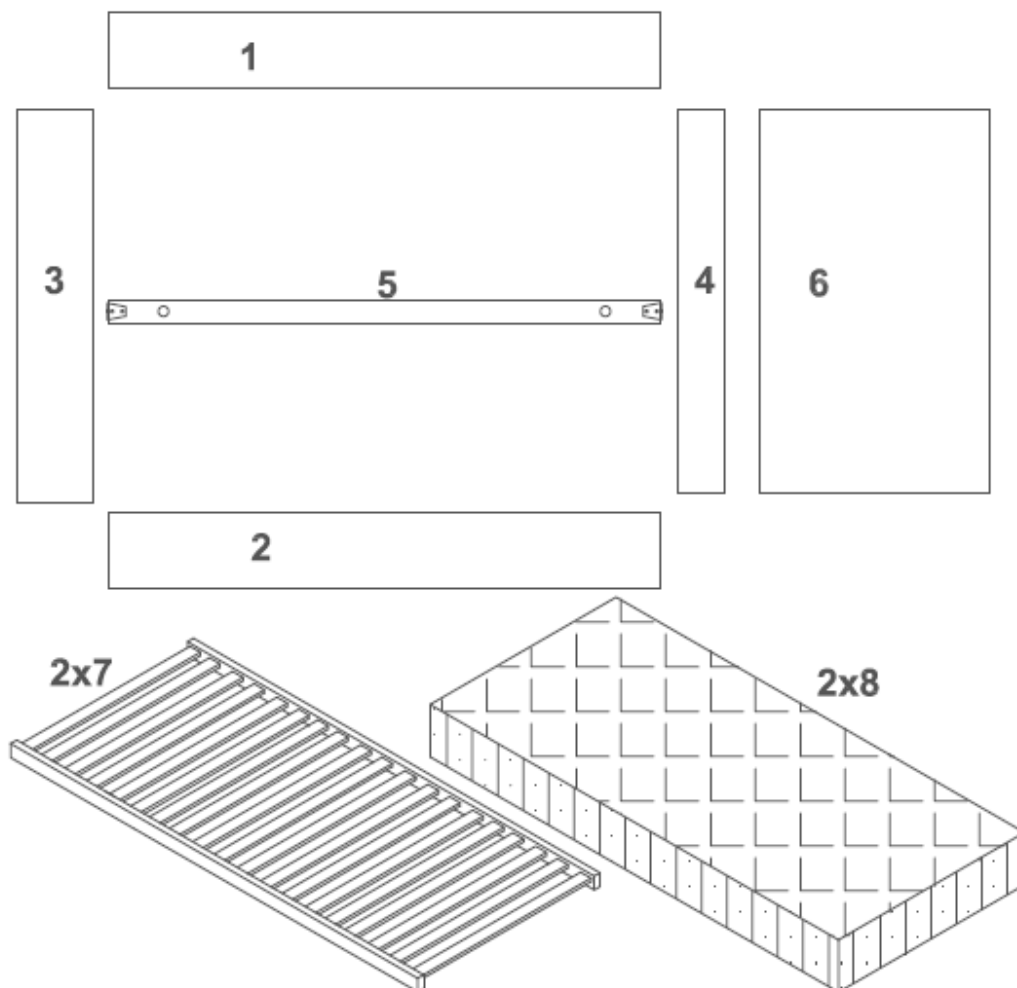 


A	B	C	D	E	F	G	H	I	J	K
2x	6x	24x 3,5x20	4x	16x 6x25	4x	4x	4x 8x20	4x 8x70	4x 8x40	4x M8


 
A	B	C
		
2x	6x	24x 3,5x20

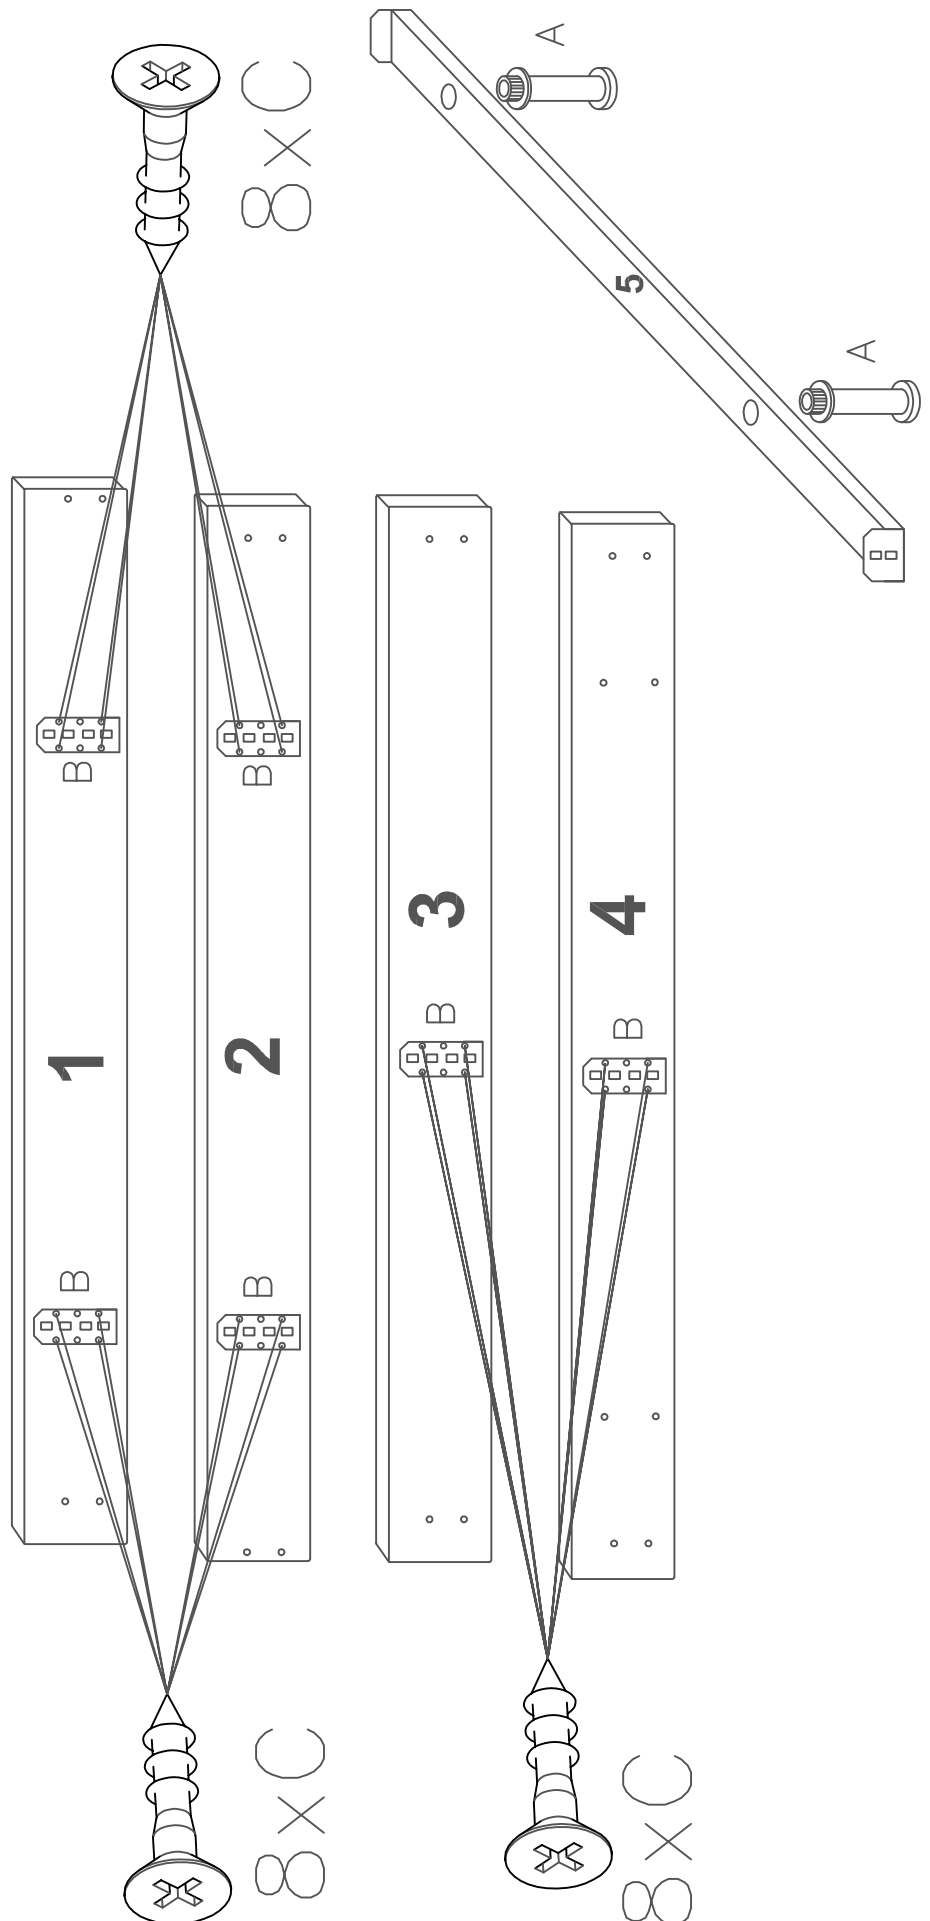 

BKU-4S-4x-ALP-ML-LS-QFT-QKT

 



D		4x
E		16x 6x25
F		4x

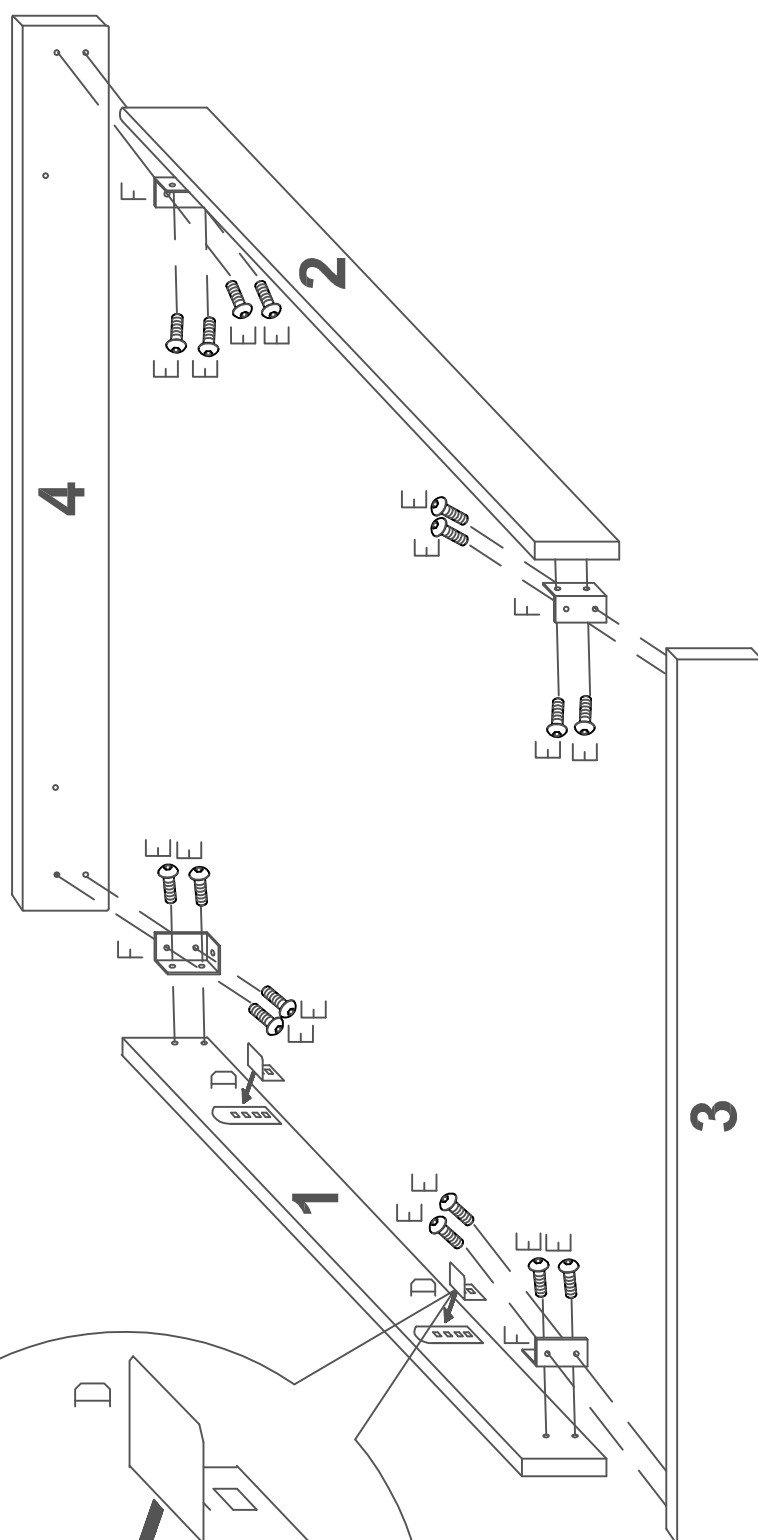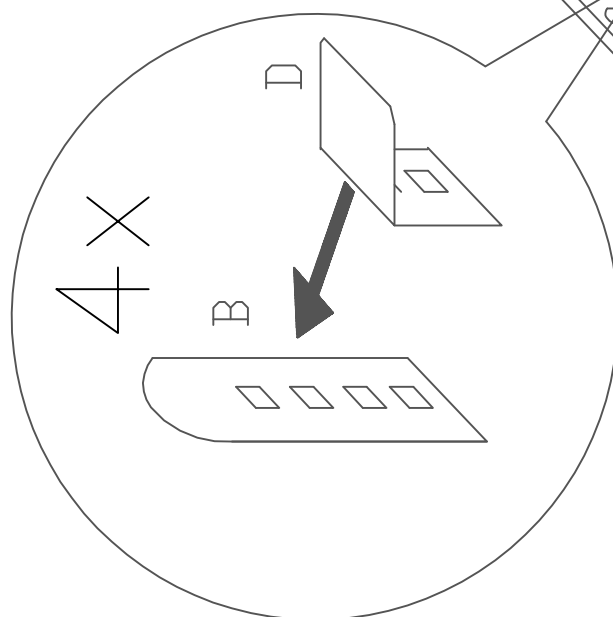  




BKU-4S-WI-ML-4x-FUSS

 G		4x
H		4x 8x20

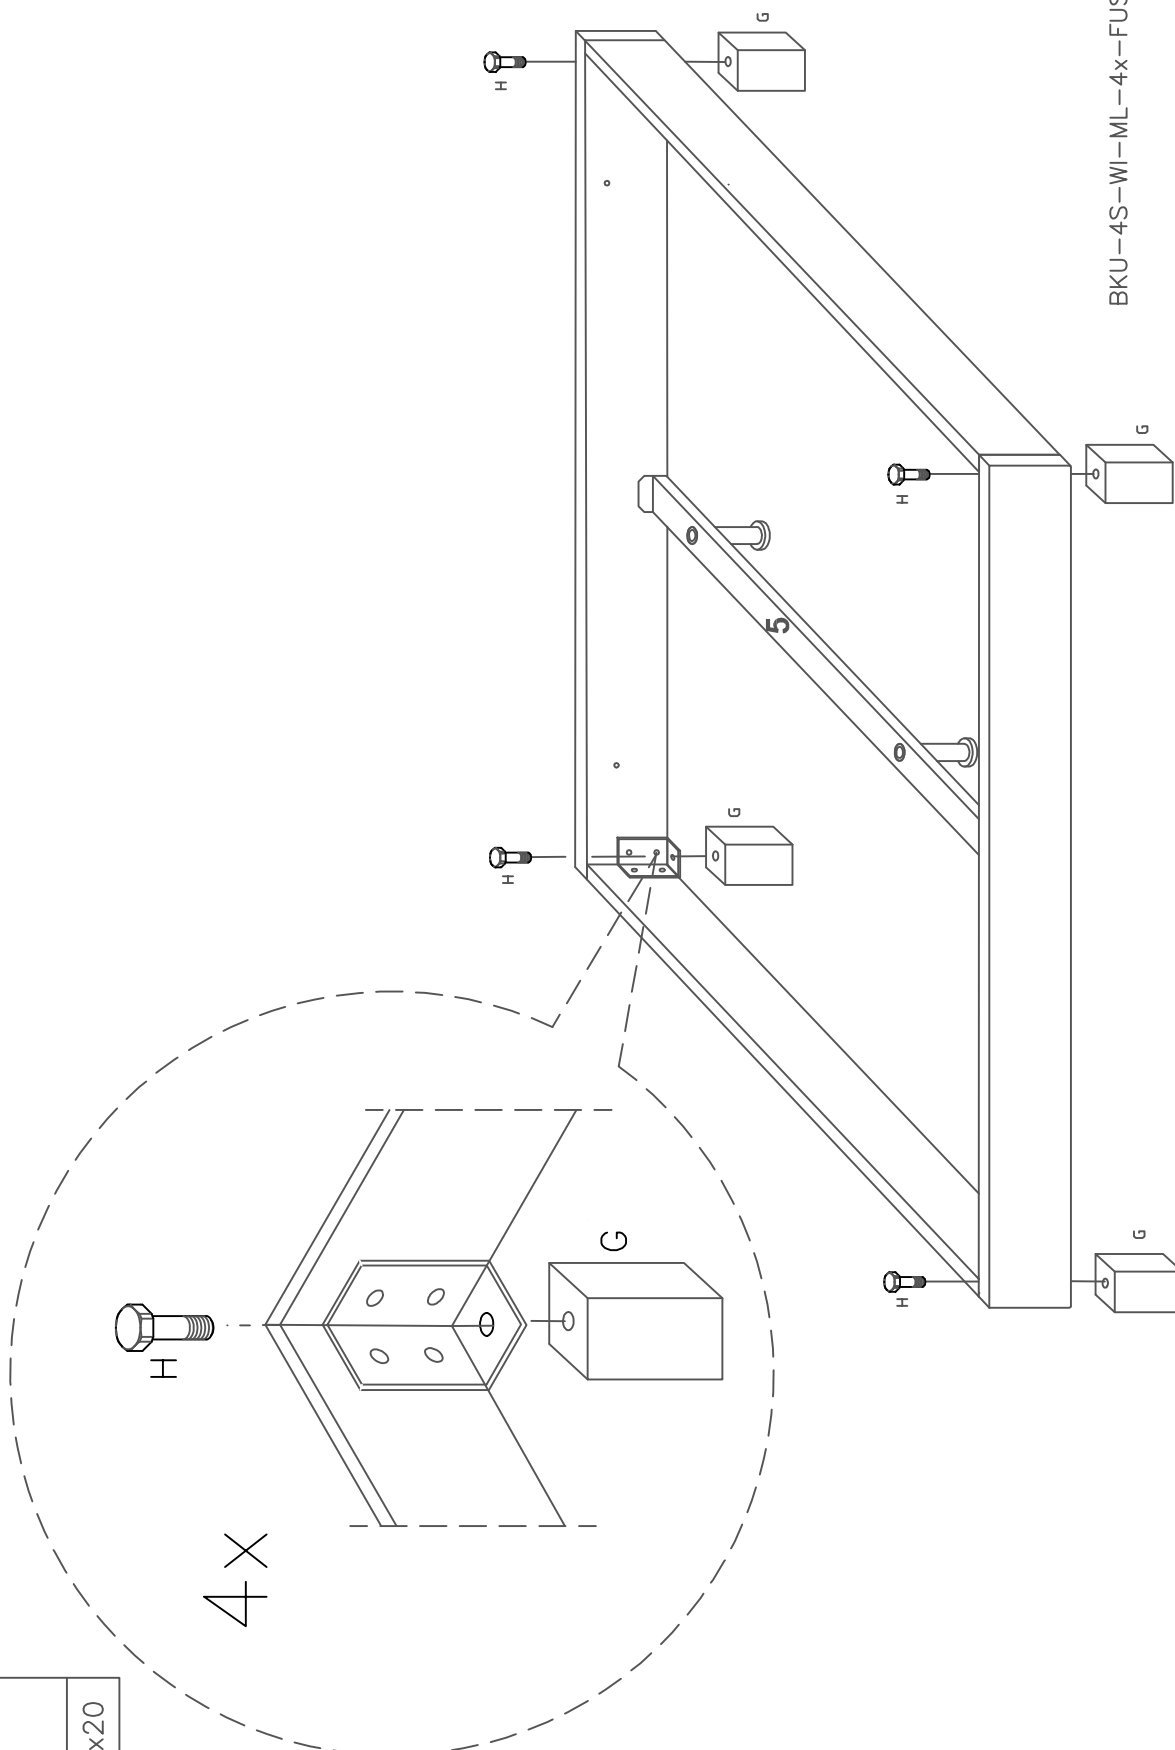 

 I	J	K	Achtung! Schrauben nicht überdrehen	GB Watch Out! Do not over tighten
			FR Attention! Ne serrez pas trop CZ Dávej Pozor! Nepřetahujte RO Ai Grijă! Nu strângeți PL Uważaj! Nie dokręcać zbyt mocno HU Vigyázz! Ne húzza túl	NL Let Op! Niet te vast IT Attento! Non stringere RU Осторожно! Не затягивайте SK Dávaj Pozor! Nepreťahujte TR Dikkat! Üzerinde sıkmayın

