 





- | | | | |
|----|-----------------------------|----|-------------------------|
| Ⓓ | Montageanleitung | ⒼⒷ | Assembly instructions |
| ⒻⓇ | Notice de montage | ⒾⓉ | Istruzioni di montaggio |
| ⒸⓏ | Handleiding voor de montage | Ⓟ | Instrukcja montażu |
| ⒸⓏ | Montážní návod | ⓈⓀ | Návod na montáž |
| ⒽⓊ | Szerelési utmutató | Ⓡⓞ | Instrucțiuni de montaj |
| ⓉⓇ | Montaj talimatı | ⓇⓊ | Инструкция по монтажу |



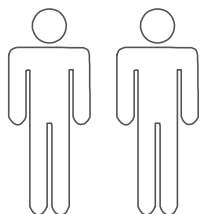

   
Ausgabe:20210719




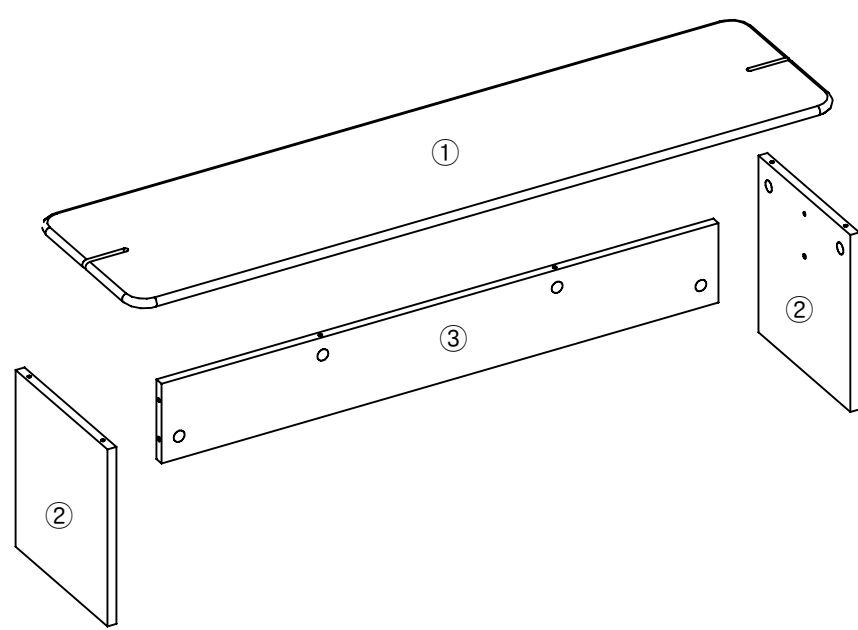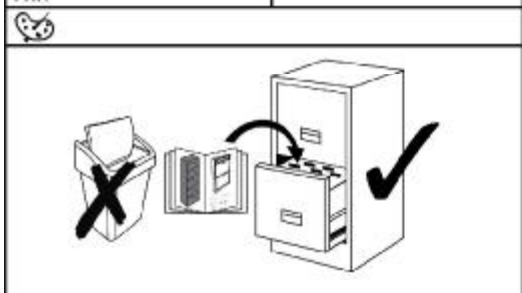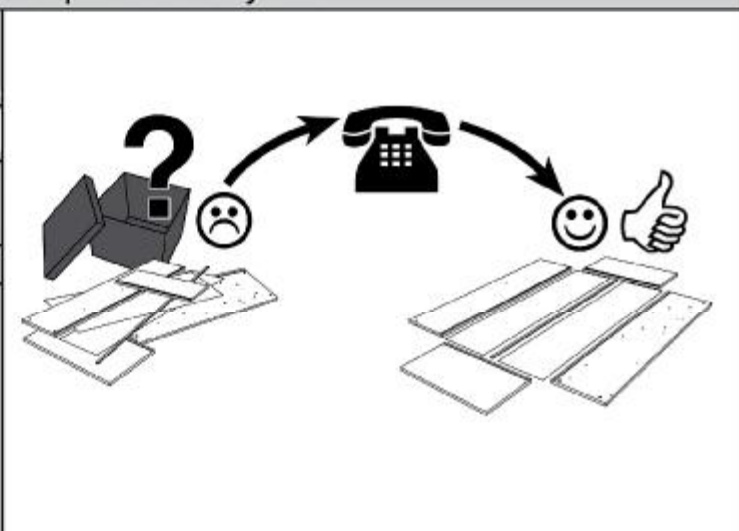Service • Assistenza • Dienstverlening • Serwis
 Servis • Szerviz • Сервисная служба






Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • Isim • Название	RIANABA
Nr. • No. • N° • Номер • Č. Sz	2495 6469 / 9054 4950 4625 5713 / 7516 0929
Typ • Type • Tip • Típus Тип Тип	3227 5245 YS-BE6643C





- | | | | | | | | | | |
|----------|--|----------|--|----------|--|----------|--|----------|--|
| A |  X8 | B |  X8 | C |  X1 | D |  X2 | E |  X4 |
|----------|--|----------|--|----------|--|----------|--|----------|--|

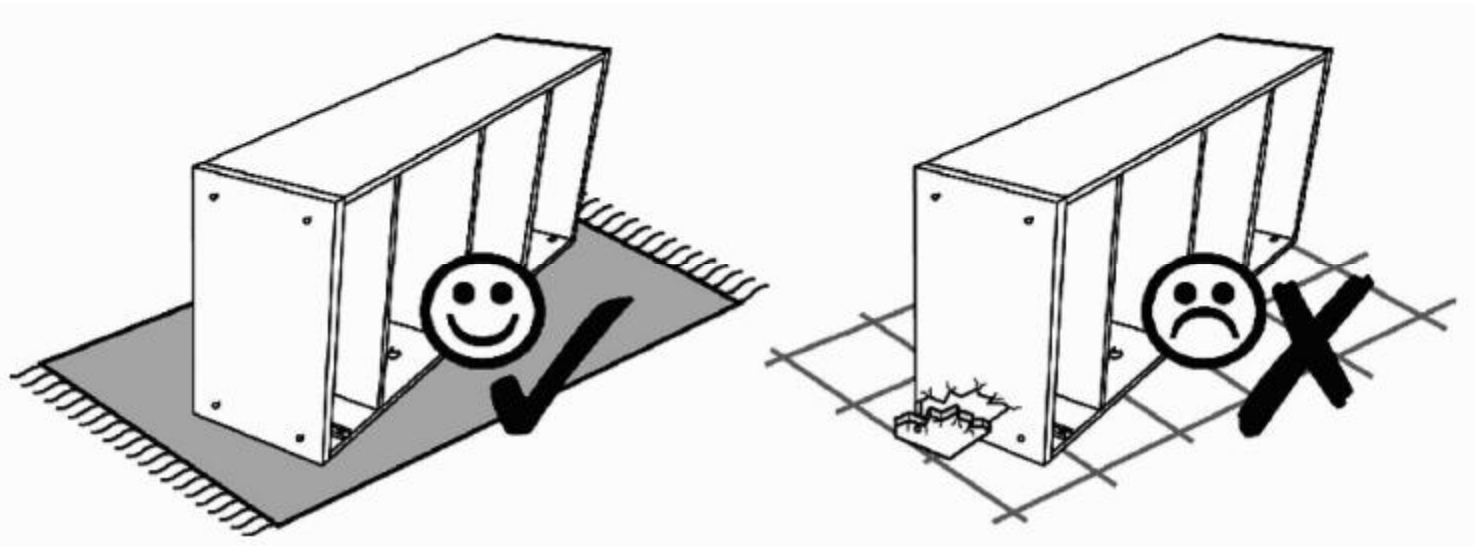 

1

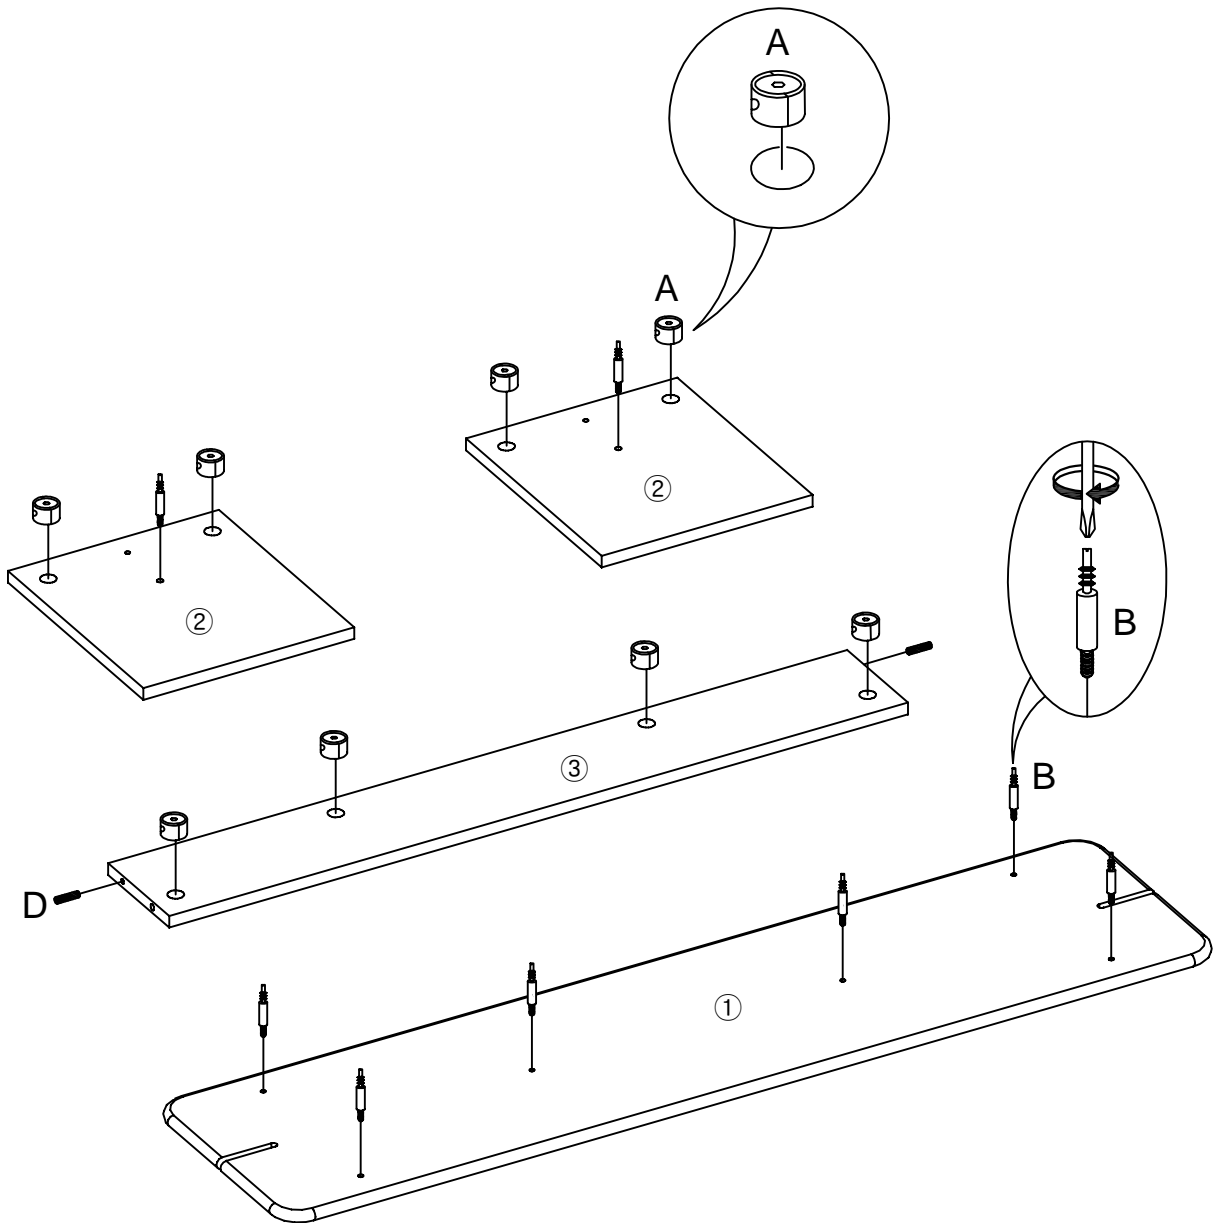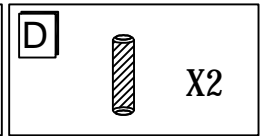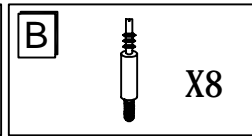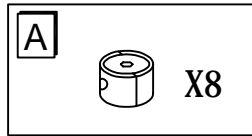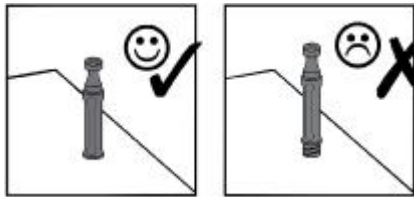     

2

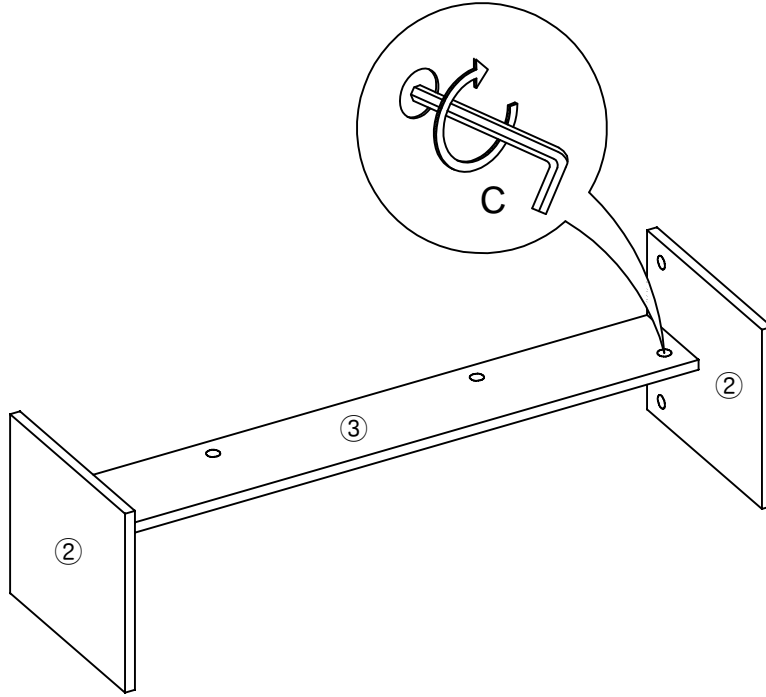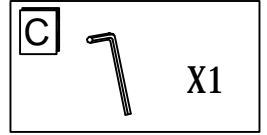  

3

