



DE Ersatzfilter für Heißwasserspender

(1841 & 1861)

COSO[®]
DESIGN

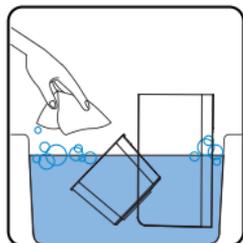


1. Waschen Sie Ihre Hände und reinigen Sie den Wassertank und den Filterbehälter.

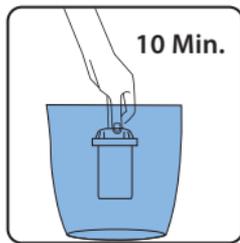


2. Entnehmen Sie den Wasserfilter aus der Verpackung und lassen Sie ihn in frischem Leitungswasser einweichen.



3. Spülen Sie den Filter unter fließendem Wasser ab.

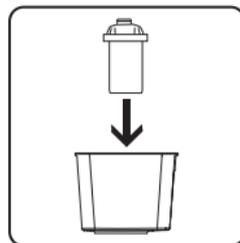

4. Setzen Sie den Filter in den Filterbehälter ein, sodass er fest sitzt. Ziehen Sie ihn dafür mit einer leichten Drehbewegung und etwas Druck nach unten.

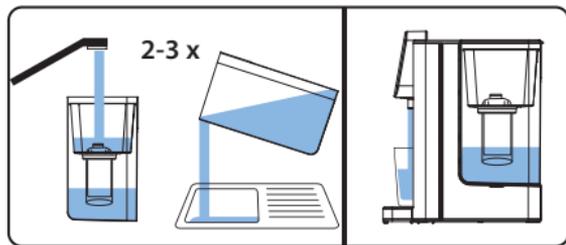


5. Setzen Sie den Filterbehälter in den Wassertank. Lassen Sie 2-3 Mal jeweils 1 Liter Wasser durch den Filter laufen, bevor Sie das Wasser trinken.


- ▶ Sie können mit dem Filter 160 Liter Wasser filtern.
- ▶ Erneuern Sie den Filter alle 4-6 Wochen.
- ▶ Trotz vorherigem Einweichen können während der Verwendung wenige schwarze Aktivkohle-Partikel aus dem Filter austreten. Diese sind unbedenklich.
- ▶ Achten Sie darauf, dass der Filterboden stets in Kontakt mit Wasser bleibt und nicht austrocknet. Wenn der Filter austrocknet, weichen Sie ihn erneut für 10 Minuten ein.
- ▶ Lassen Sie das Wasser nicht länger als 48 Stunden im Wassertank stehen. Befüllen Sie den Wassertank neu.
- ▶ Bewahren Sie den Wassertank mit Filter an einem kühlen Ort auf und halten Sie diese aus direktem Sonnenlicht fern.

EN Replacement filter for boiling water dispenser (1841 & 1861)


COSO[®]
DESIGN

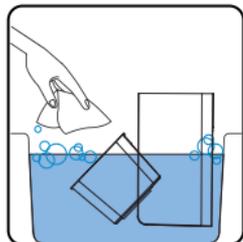


1. Wash your hands and clean the water tank and the filter box.

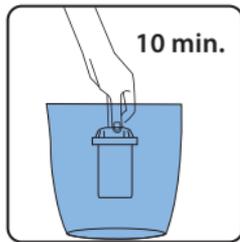


2. Remove the filter from the packaging and soak it in fresh tap water.

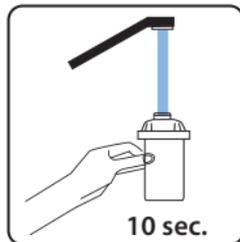

3. Rinse the filter under running water.

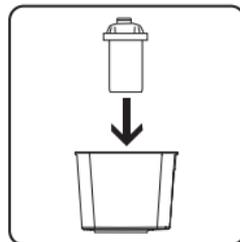

4. Insert the filter into the filter box so that it is securely in place. To do this, pull it down with a slight twisting motion and a little pressure.

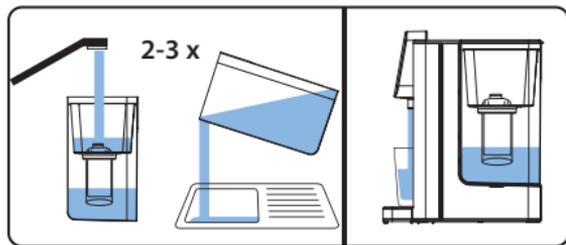

5. Place the filter box in the water tank. Run 1 litre of water through the filter 2-3 times before drinking the water.

- ▶ You can filter 160 litres of water with the filter.
- ▶ Replace the filter every 4-6 weeks.
- ▶ Despite previous soaking, a few black activated carbon particles may escape from the filter during use. These are harmless.
- ▶ Make sure that the filter bottom always remains in contact with water and does not dry out. If the filter dries out, soak it again for 10 minutes.
- ▶ Do not leave the water in the water tank for more than 48 hours. Refill the water tank.
- ▶ Store the water tank with filter in a cool place and keep it out of direct sunlight. Keep them out of direct sunlight.