


(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SLO) ASSEMBLY INSTRUCTIONS
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS

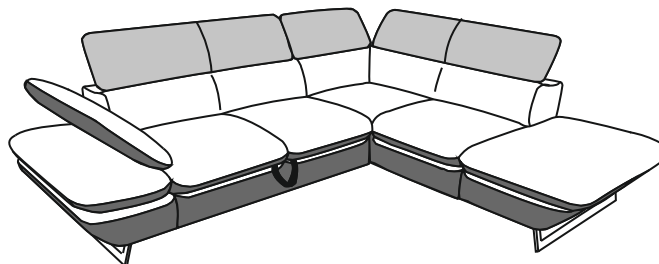



“PRESTIGE” 2F-OTM/KLEIN
“PRESTIGE” OTM/KLEIN-2F






2/2



6

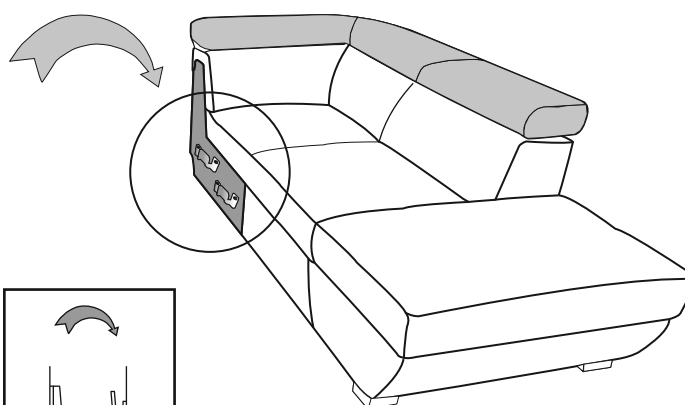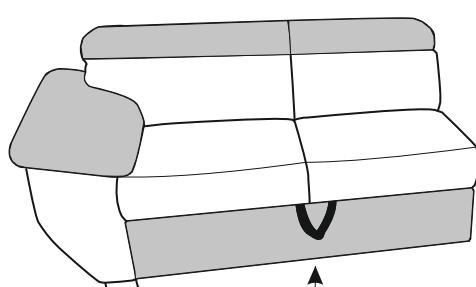

2x

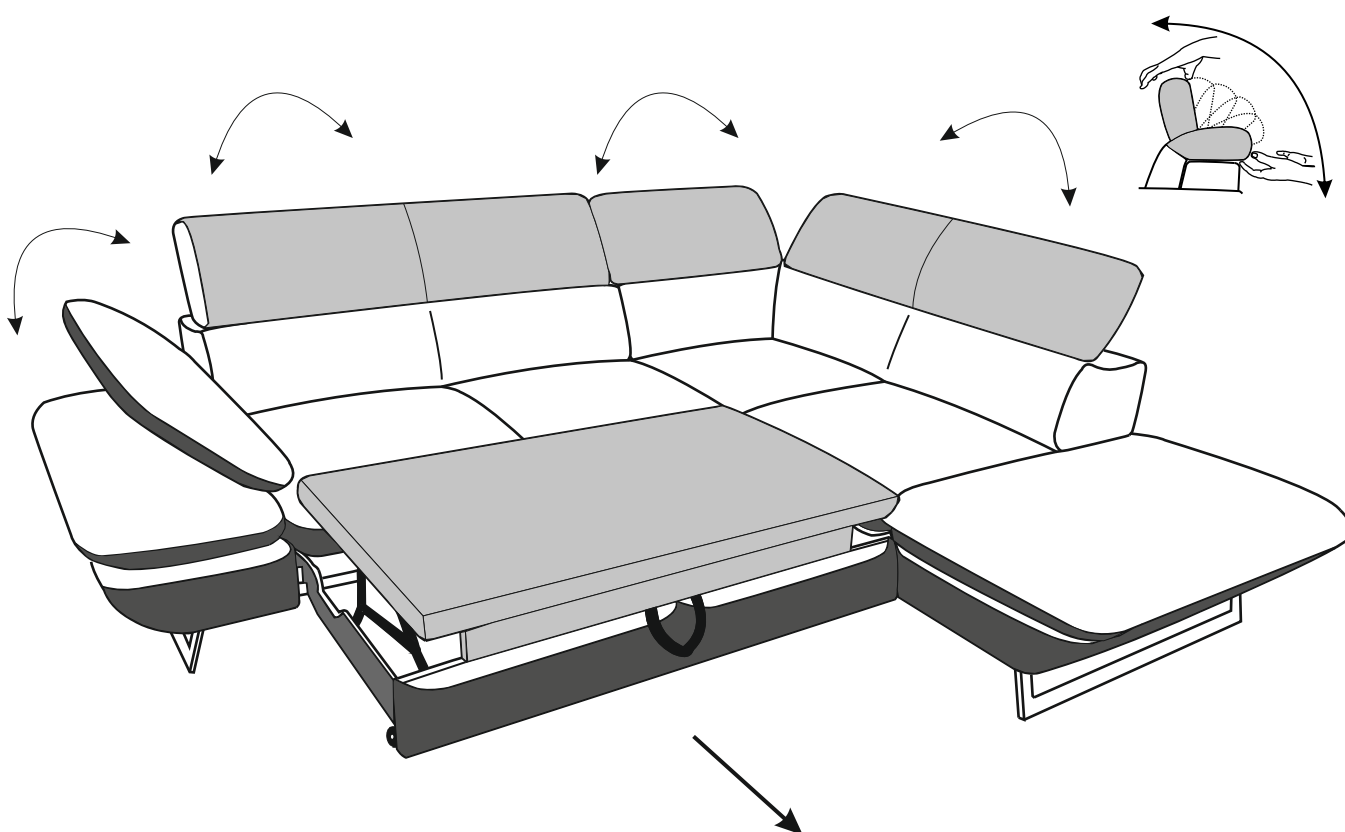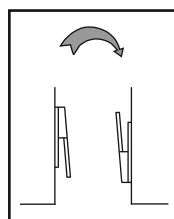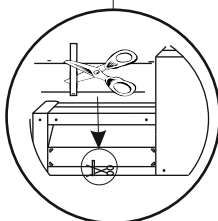

2 X




(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SLO) ASSEMBLY INSTRUCTIONS
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS



“PRESTIGE” 2F-OTM/KLEIN
“PRESTIGE” OTM/KLEIN-2F

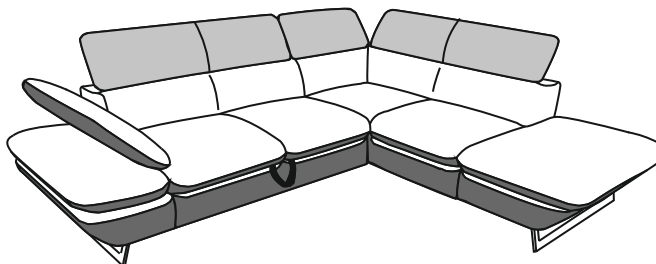

1/2

