

2 X




- (D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE


- (GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SLO) ASSEMBLY INSTRUCTIONS
(S) MONTERINGSANVISNING






“SPEEDWAY” 2-OTM/KLEIN

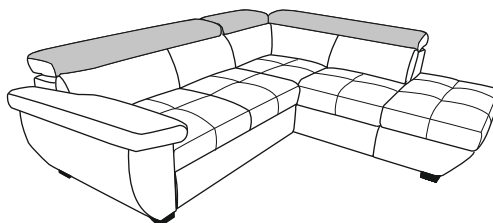

2/2

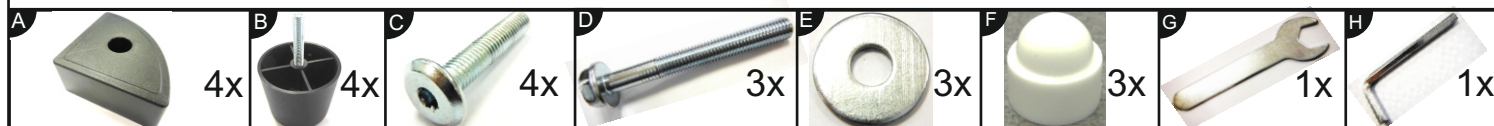


3

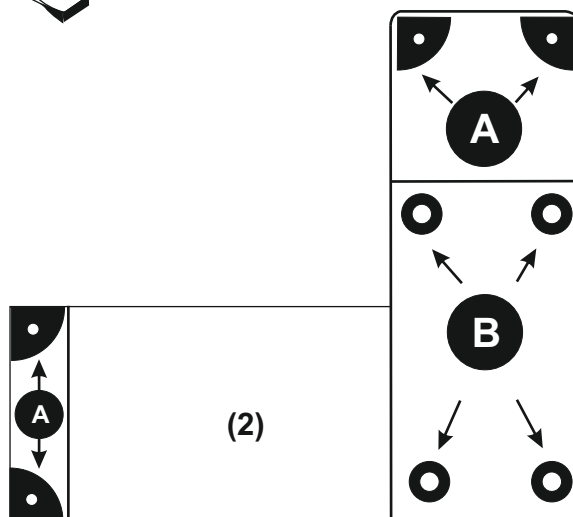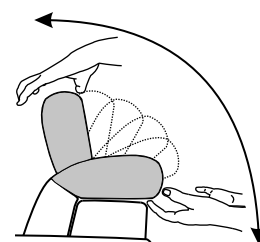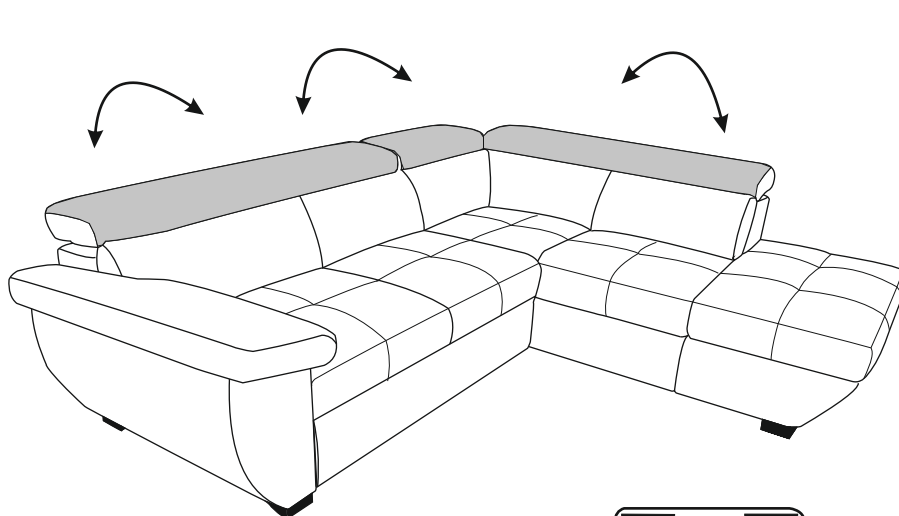


A


1

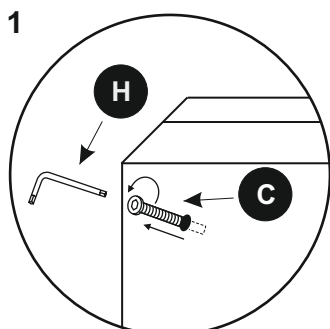


2

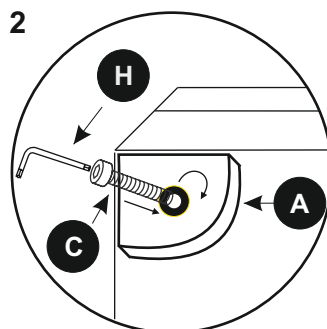

B

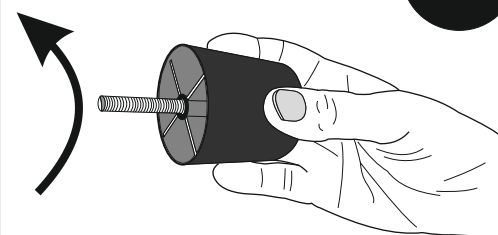

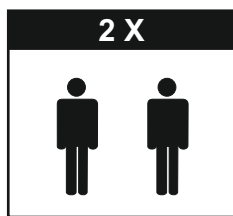


(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SLO) ASSEMBLY INSTRUCTIONS
(S) MONTERINGSANVISNING



“SPEEDWAY” OTM/KLEIN-2

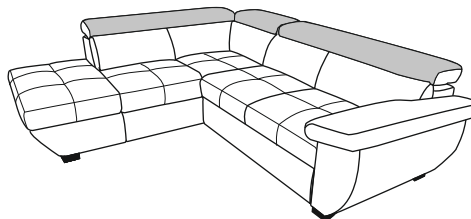

1/2

