



(D) Montageanleitung

(F) Notice de montage

(NL) Handleiding voor de montage

(CZ) Monážní návod

(HU) Szerelési útmutató

(TR) Montaj talimatı

(GB) Assembly instructions

(I) Istruzione di montaggio


(PL) Instrukcja montażu

(SK) Návod na montáž






(RO) Instrucțiuni de montaj

(RU) ИНСТРУКЦИЯ ПО МОНТАЖУ




Art. Nr. 1039

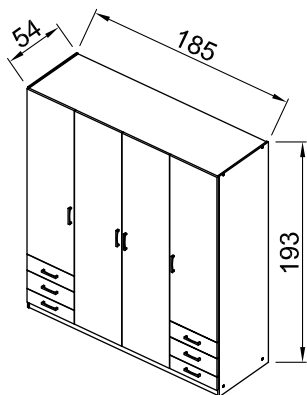






Art. Nr. 1039

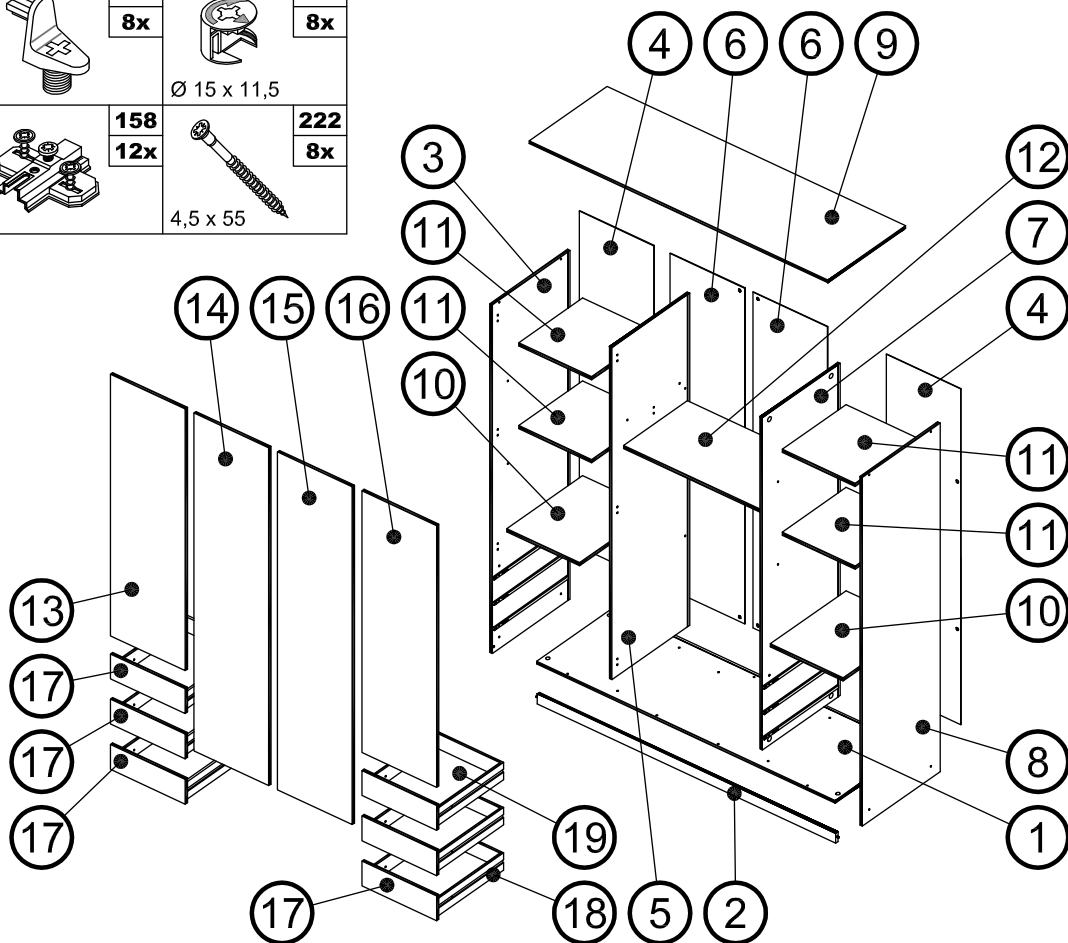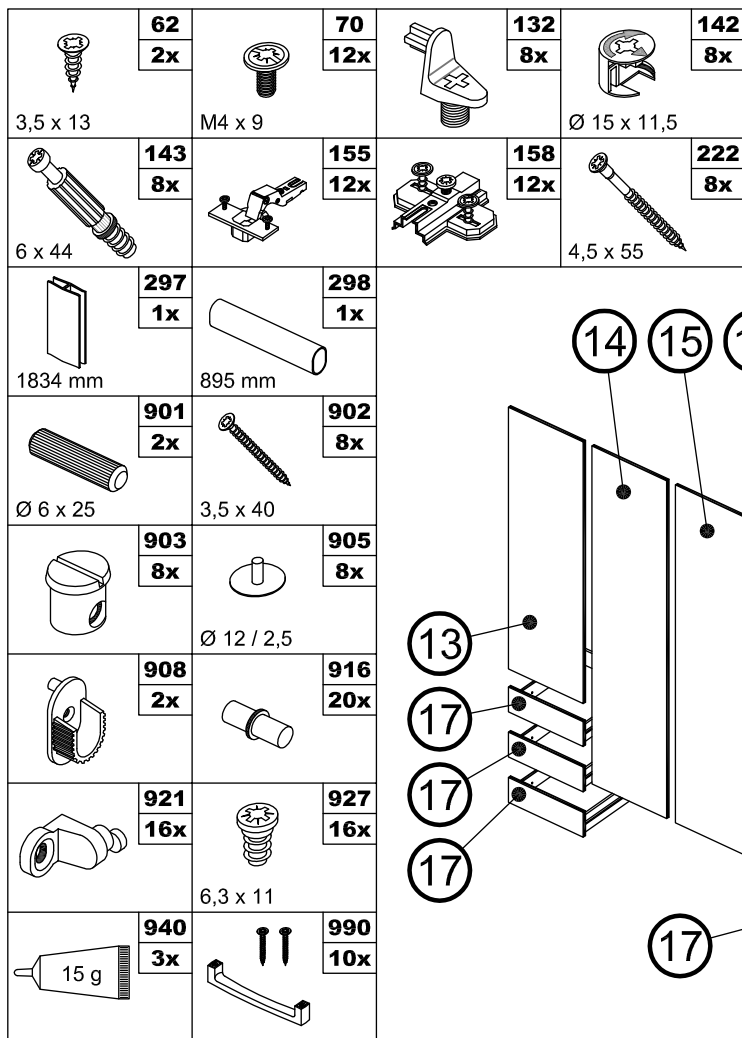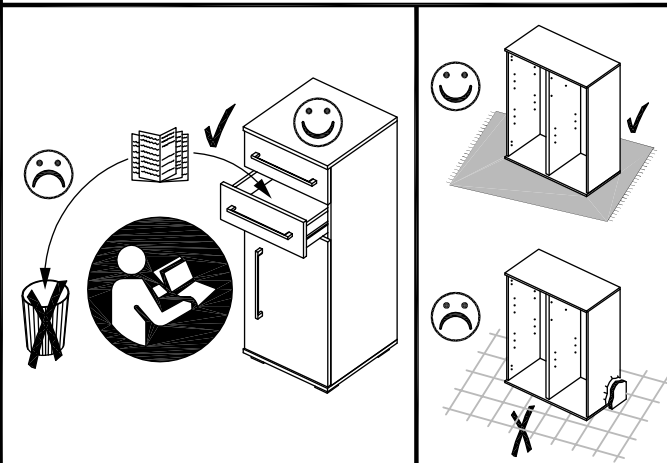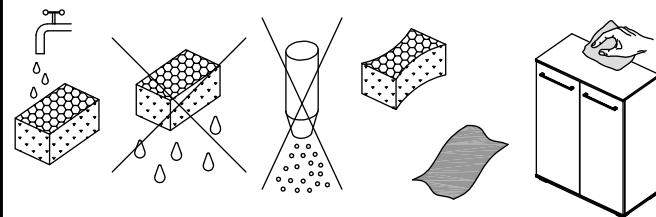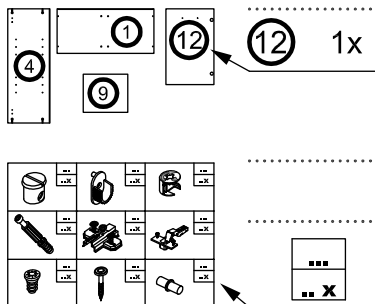

1

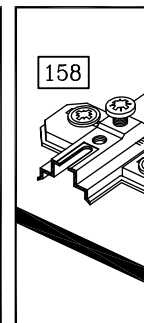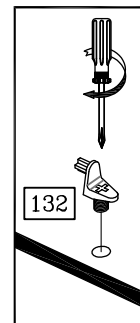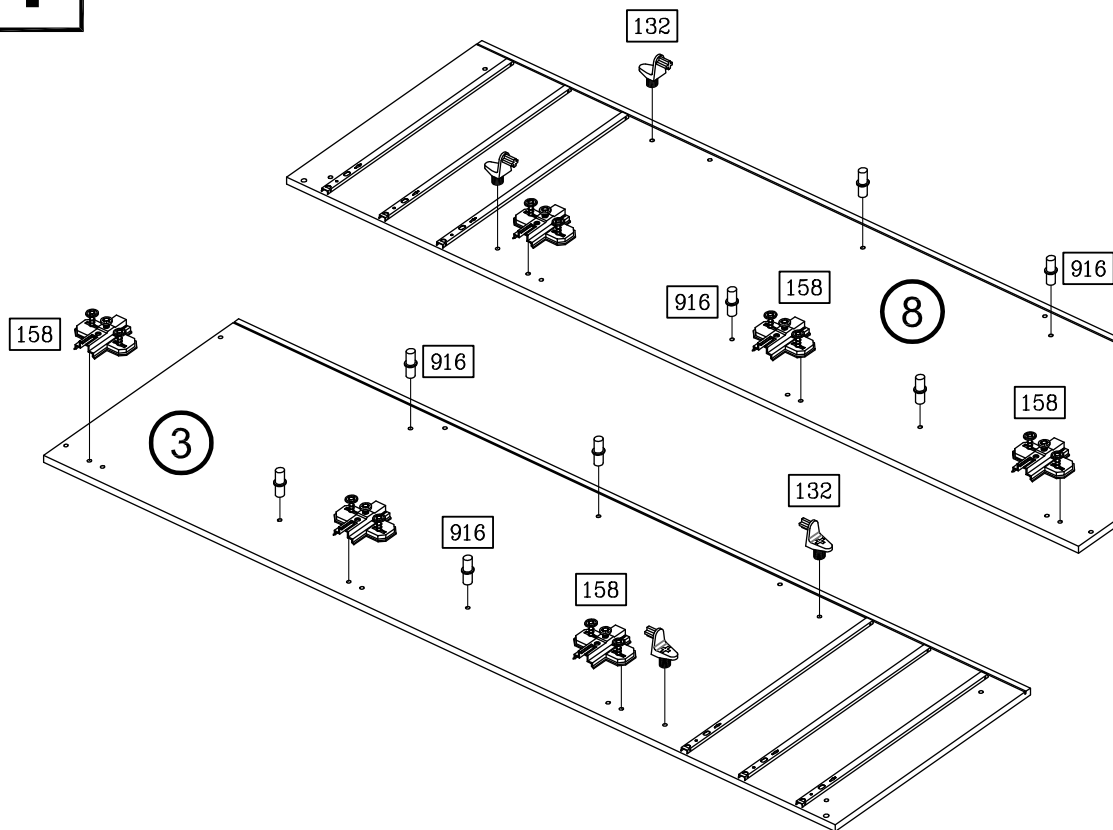

2

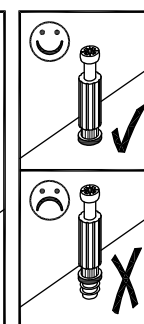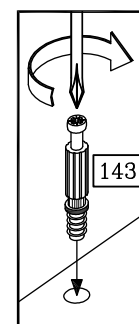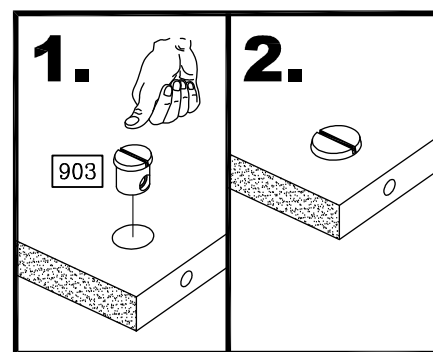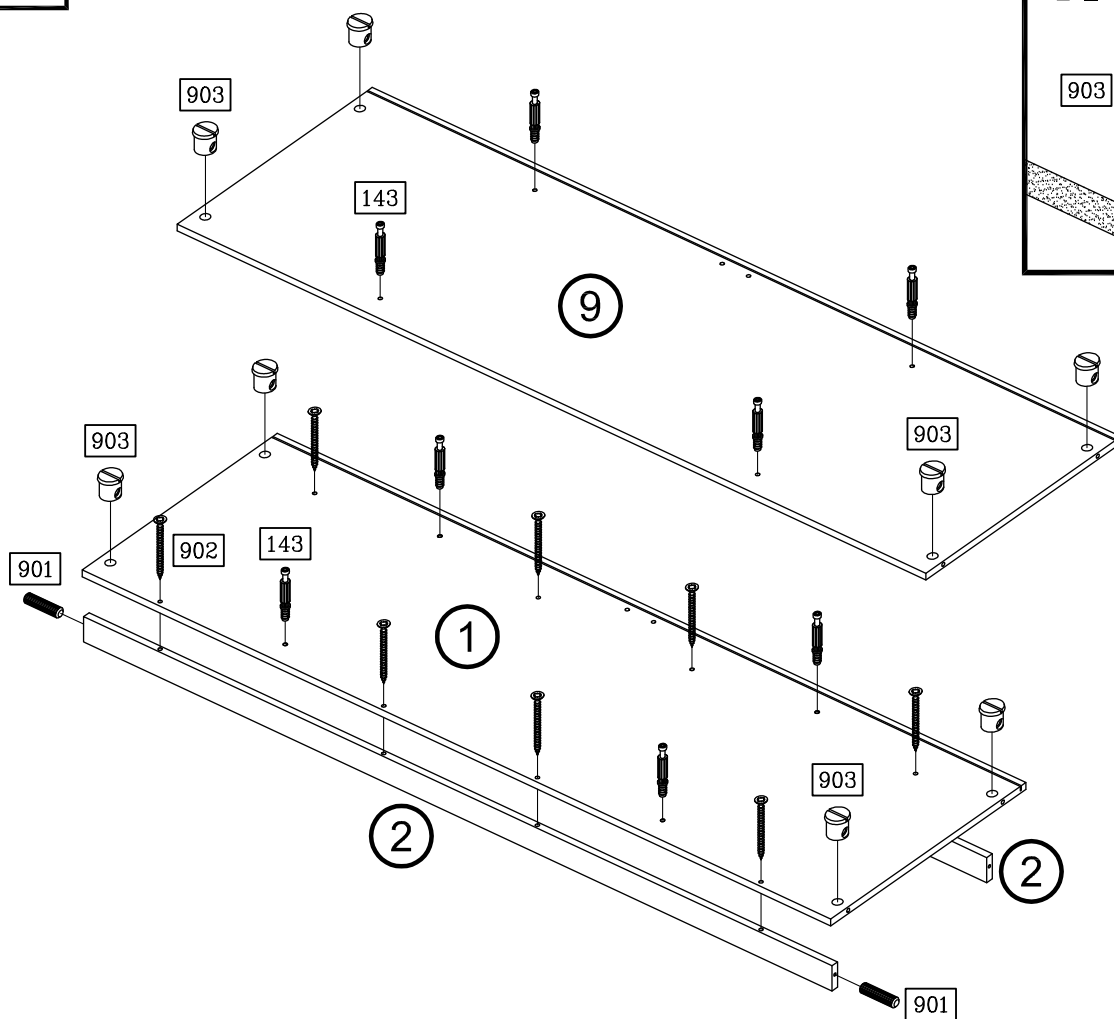

1039-1

2/6

3

3

Diagram illustrating the assembly of the side rails (5 and 7) using the provided hardware.

Hardware List:

- 132: Screws for securing the side rails to the frame.
- 142: Corner brackets for reinforcing the corners.
- 158: L-brackets for securing the side rails to the frame.
- 916: Screws for securing the side rails to the frame.
- 908: Screws for securing the side rails to the frame.
- 62: Screws for securing the side rails to the frame.

Assembly Steps:

- Attach the side rail (5) to the frame using screws (132) and L-brackets (158).
- Attach the side rail (7) to the frame using screws (132) and L-brackets (158).
- Secure the corners using corner brackets (142) and screws (132).
- Secure the side rails to the frame using screws (916) and L-brackets (158).
- Secure the side rails to the frame using screws (908) and L-brackets (158).
- Secure the side rails to the frame using screws (62) and L-brackets (158).

Inset Diagrams:

- Top right inset: Shows the installation of a corner bracket (142) using a screw (132).
- Bottom right inset: Shows the installation of a corner bracket (142) using a screw (132).

4

Diagram illustrating the assembly of the back panel (19) and the top panel (17) onto the main frame (18).


The diagram shows the back panel (19) being attached to the main frame (18) using two 15 g adhesive tubes (940). The top panel (17) is shown separately, with two 15 g adhesive tubes (940) applied to its bottom edge. A circular inset shows a close-up of the adhesive application to the joint between the back panel and the main frame.

The top panel (17) is then shown being attached to the main frame (18) using two screws (990). A clock icon indicates a 3-hour drying time.


1039-1

3/6



5

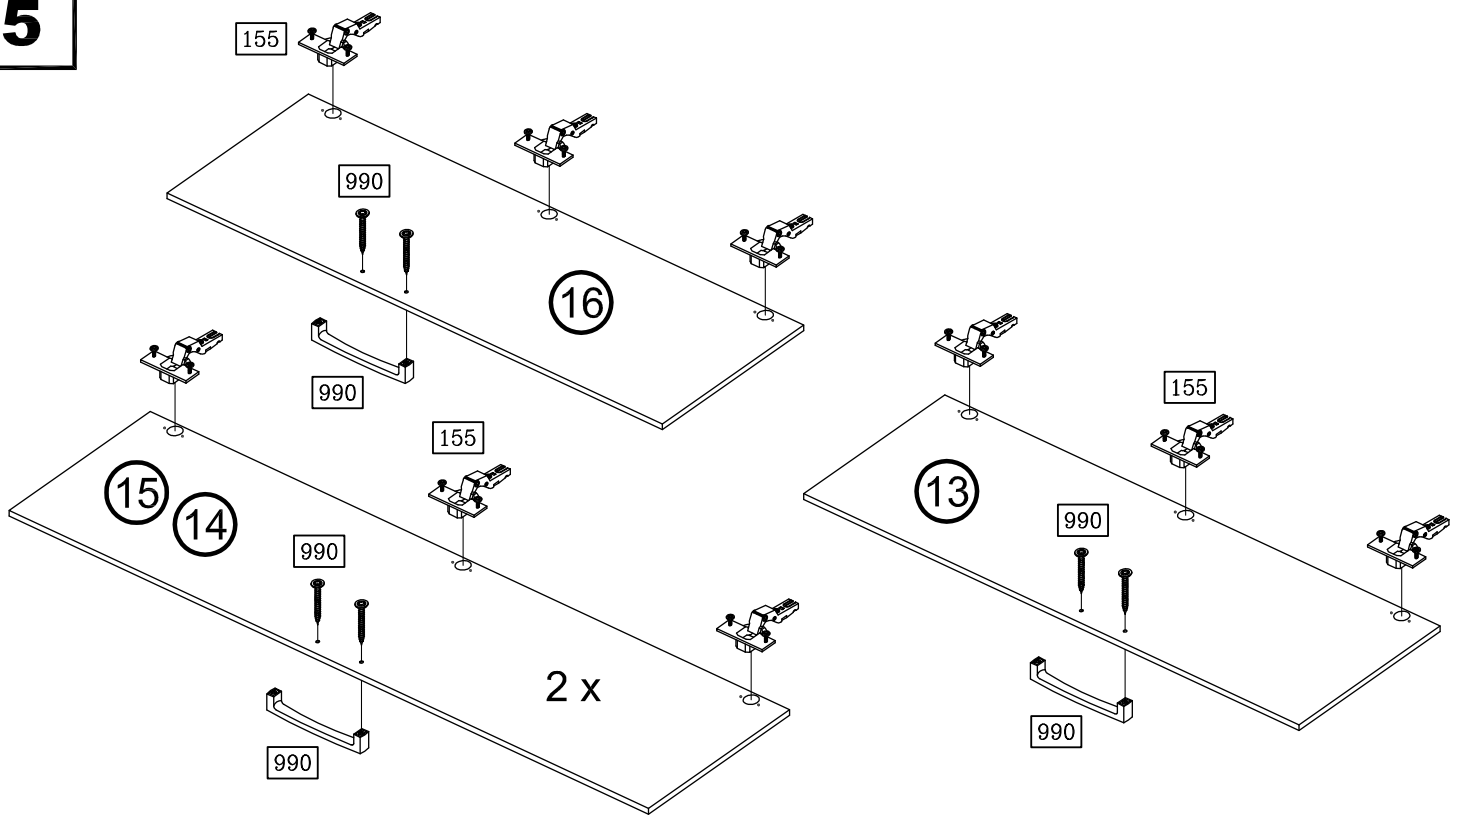


6

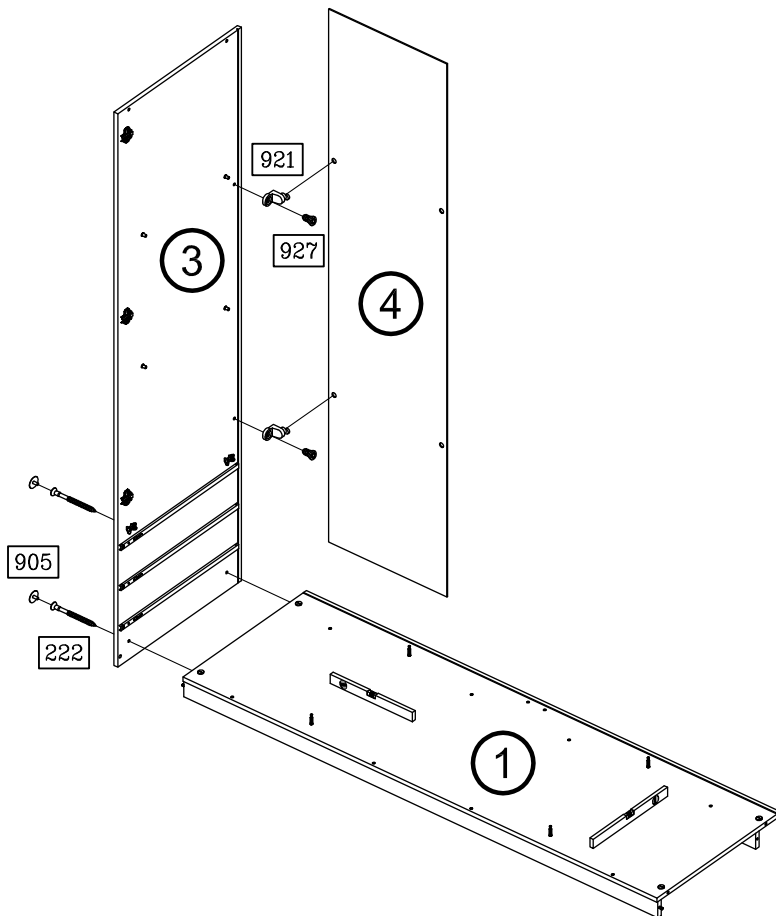


7

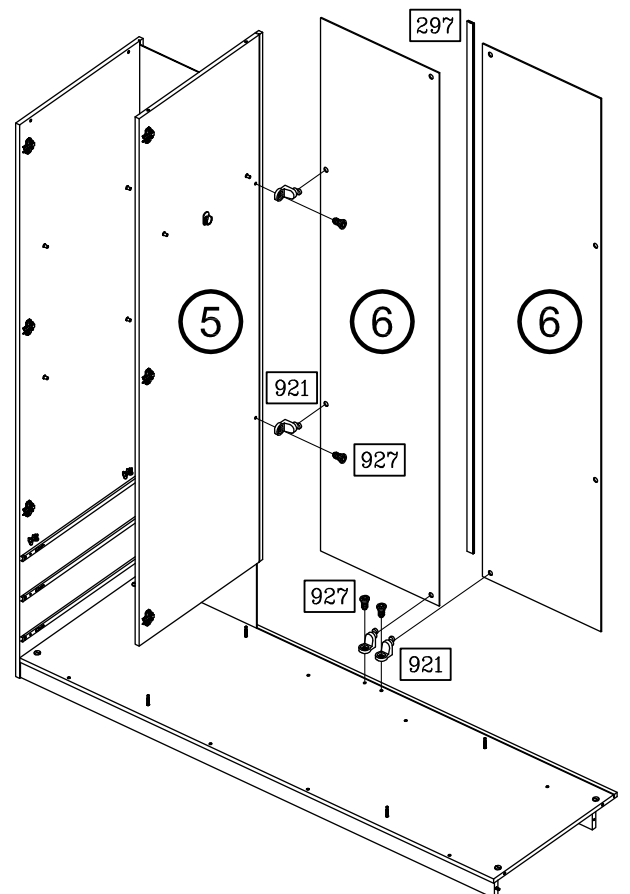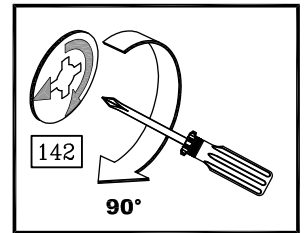


8


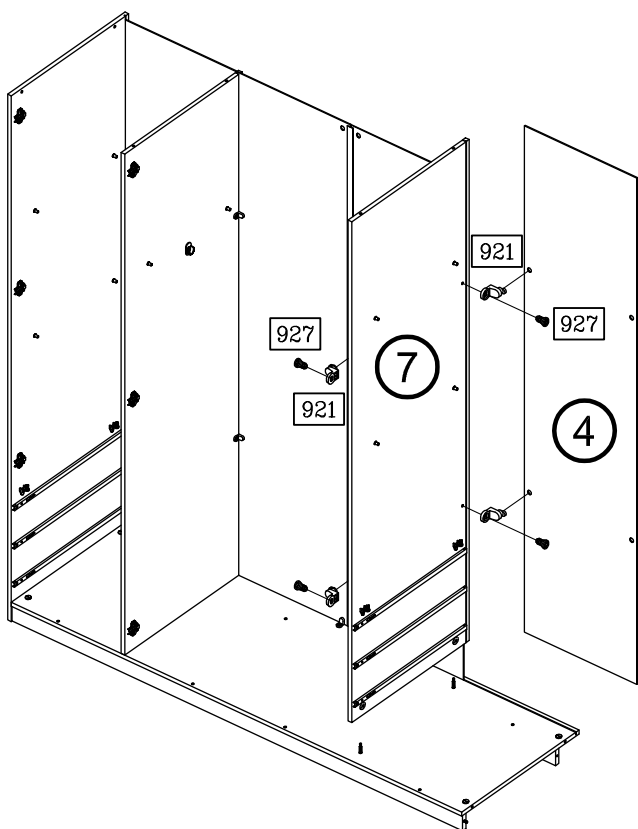


9

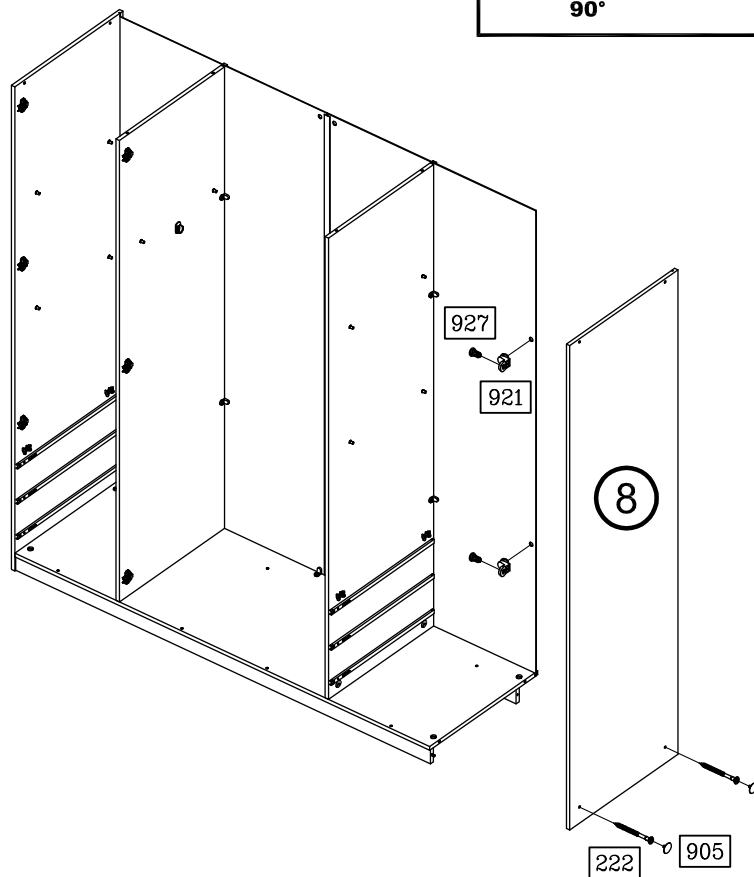


10

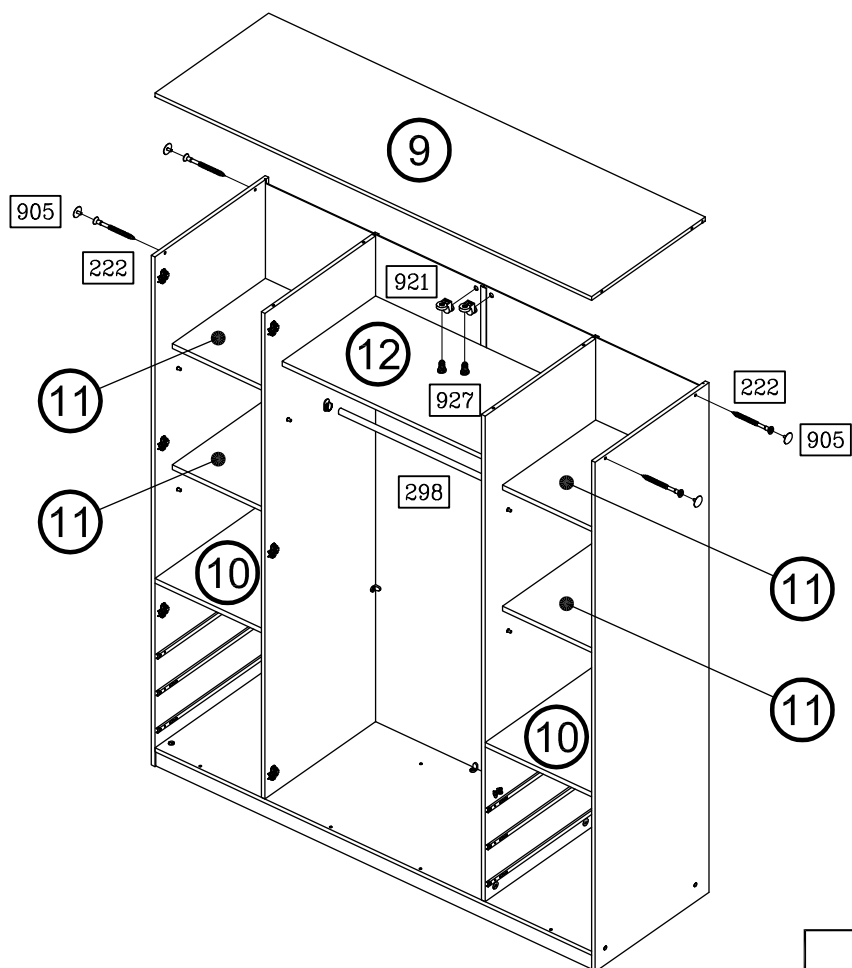

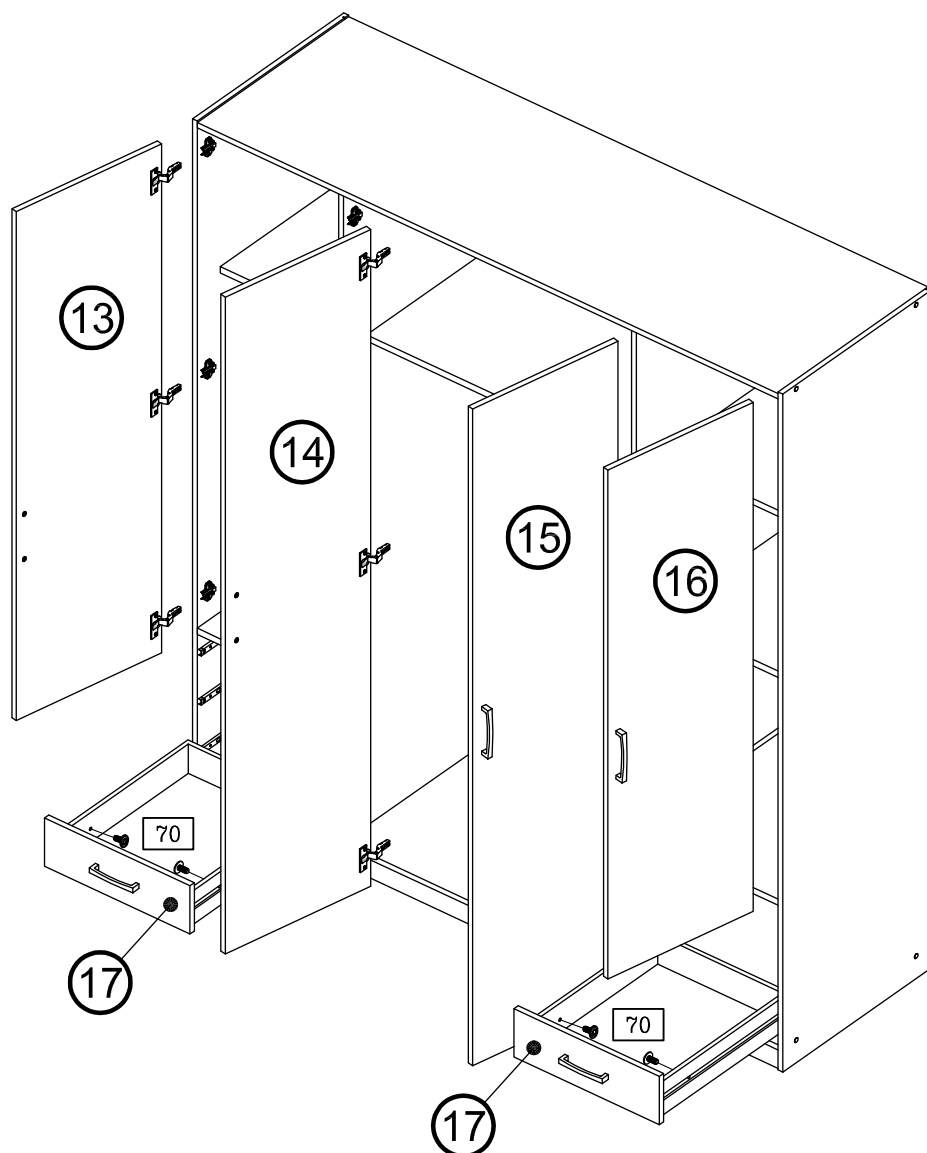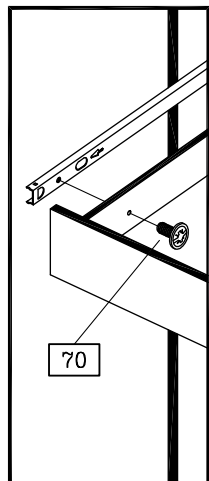

1.

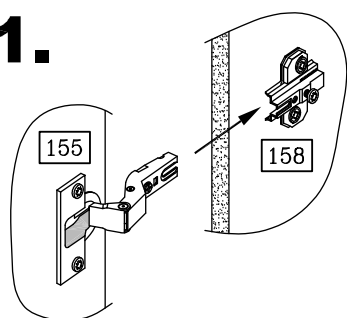

2.

