

Loana



D Montageanleitung

GB Assembly instructions

FR Notice de montage

NL Handleiding voor de montage

CZ Montážní návod

IT Istruzioni di montaggio

RO Instrucțiuni de montaj




RU инструкция по сборке

PL Instrukcja montażu

SK Návod na montáž


HU Szerelési útmutató

TR Montaj talimatı

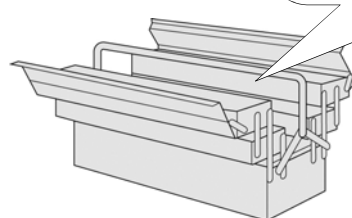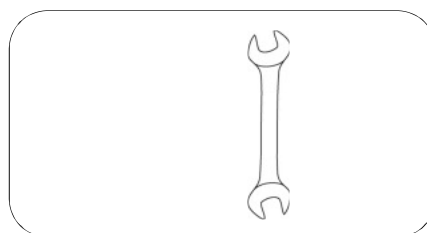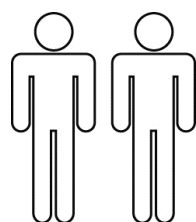

0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200


Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба	
Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	Loana DB
Nr. • No. • N° • Номер • Č • Sz	SH55
Typ • Type • Tip • Típus • Tipo Тип	OHNE

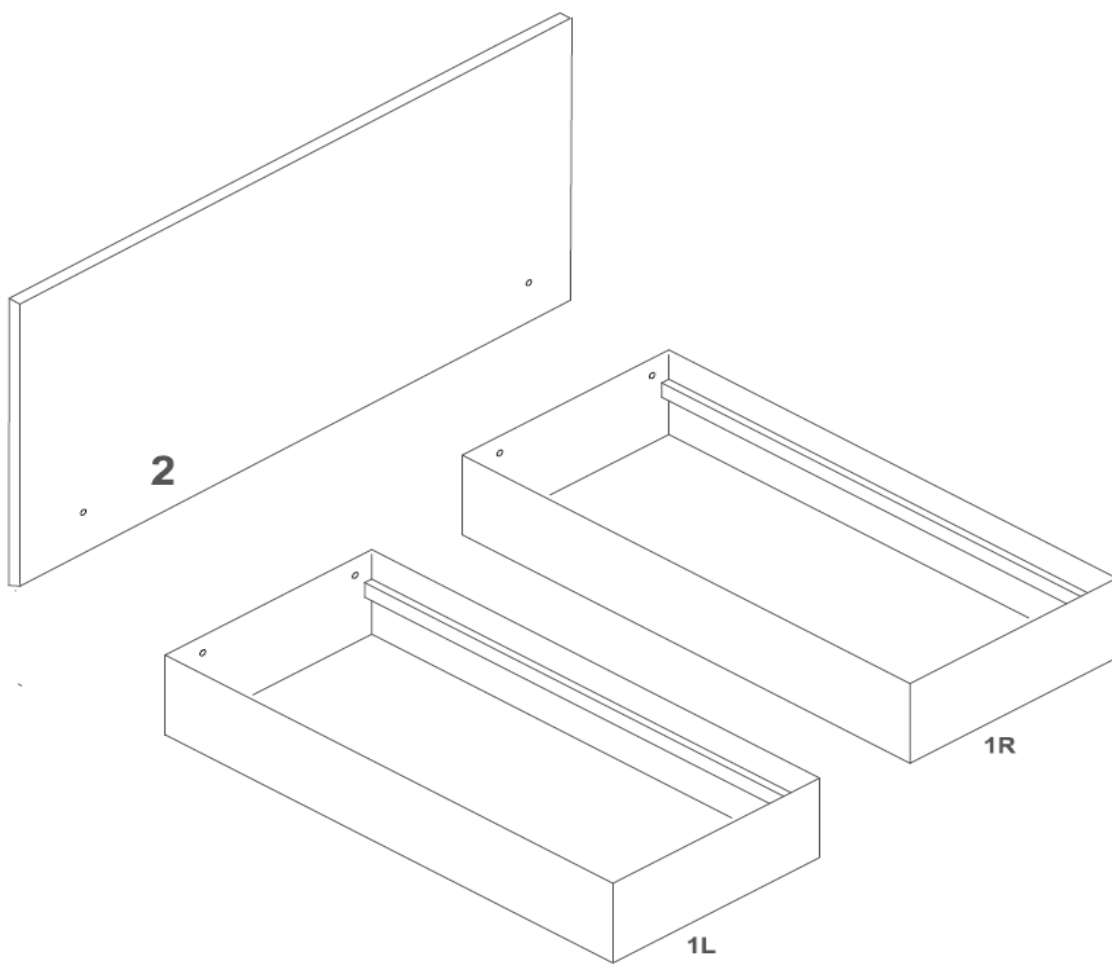

A	B	C	D	E	F	G	H
1x 6x45	1x M6	1x M6	1x M6	4x	4x 8x60	4x 8x30	4x M8






0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200

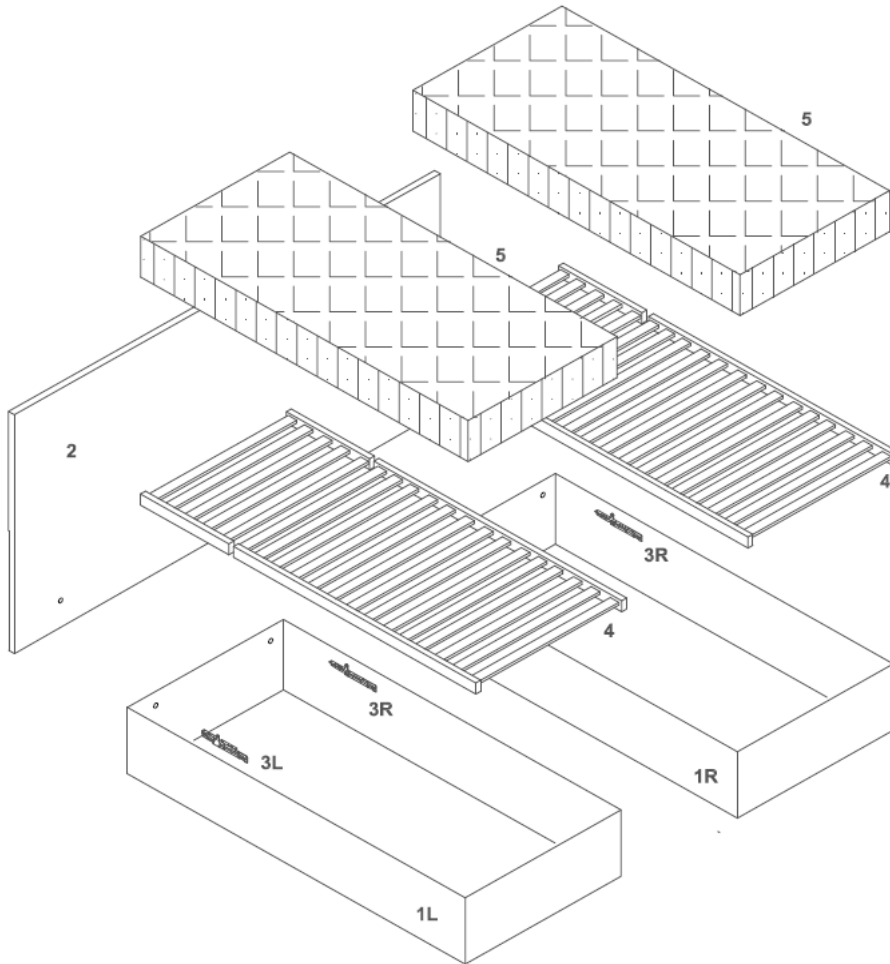
Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба	
Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	Loana DB
Nr. • No. • N° • Номер • Č • Sz	SH55
Typ • Type • Tip • Típus • Tipo Тип	LARO





A	B	C	D	E	F	G	H
1x 6x45	1x M6	1x M6	1x M6	4x	4x 8x60	4x 8x30	4x M8



A		1 x M6	1 x M6	1 x M6	E
B		1 x M6	1 x M6		
C		1 x M6	1 x M6		
D		1 x M6			
E		4 x			

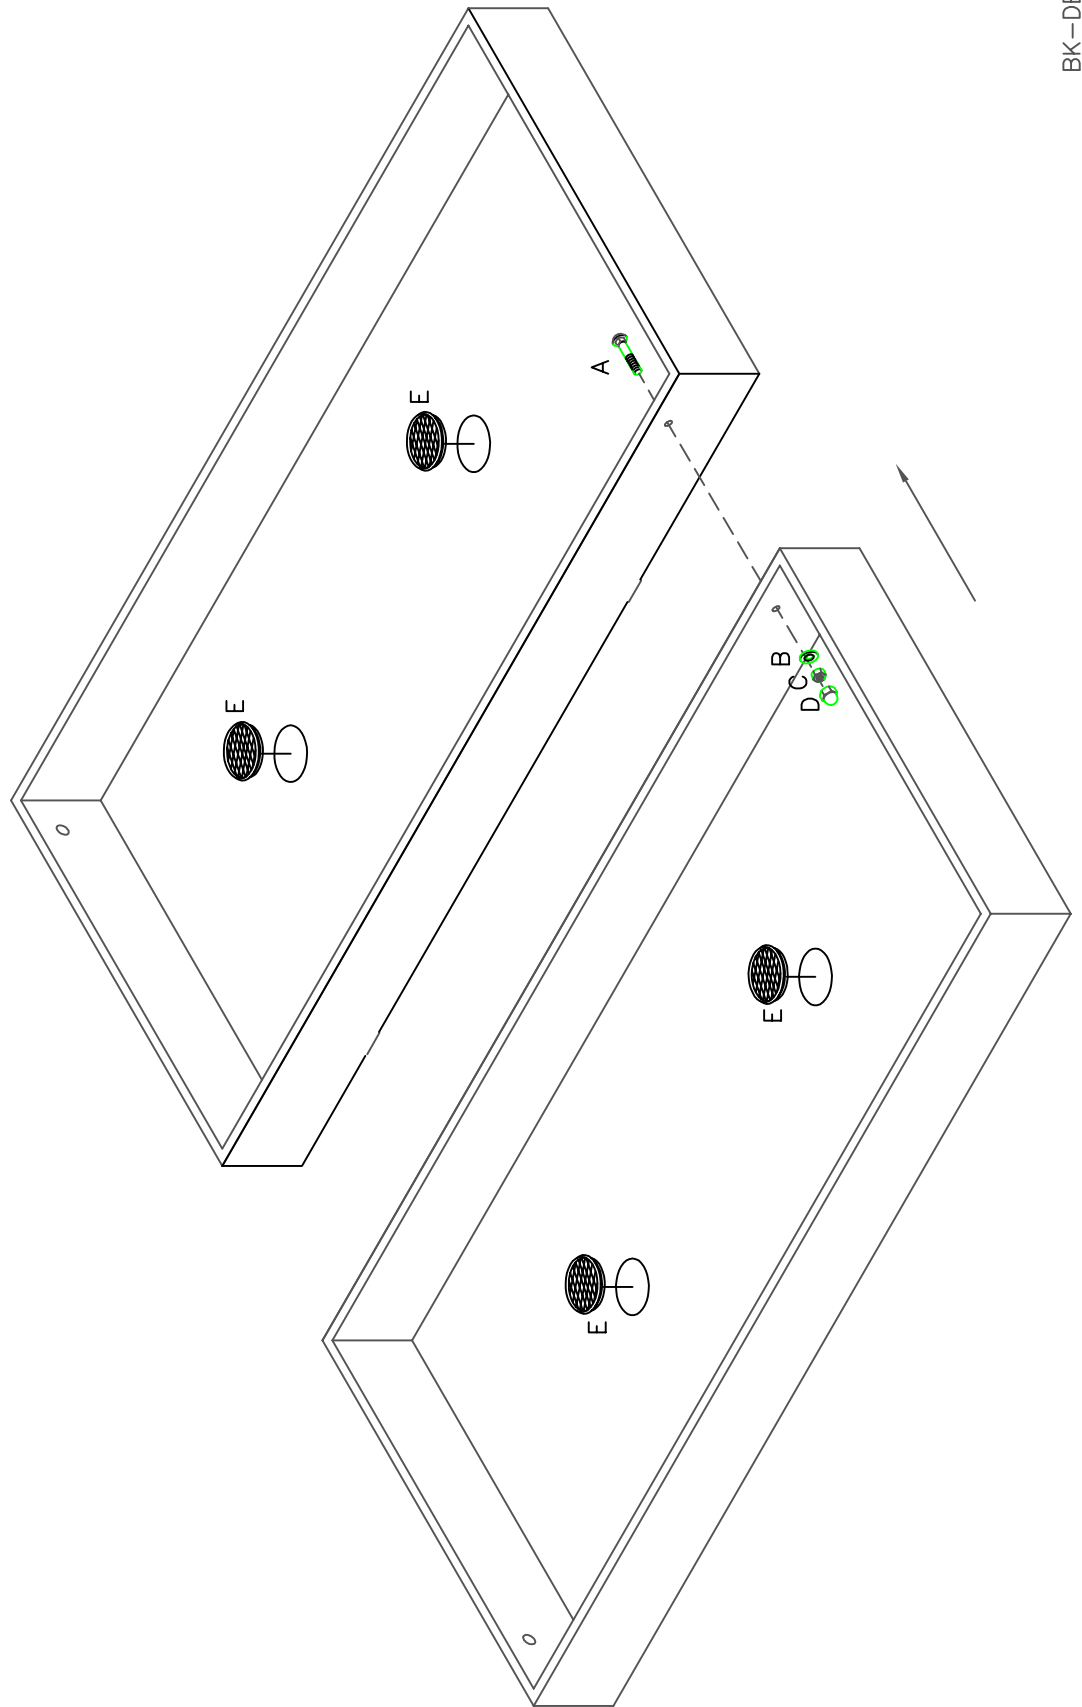



 4x 8x60	 4x M8		Achtung! Schrauben nicht überdrehen FR Attention! Ne serrez pas trop CZ Dávej Pozor! Nepřetahujte RO Ai Grija! Nu strângeți PL Uwaga! Nie dokręcać zbyt mocno HU Vigyázz! Ne húzza túl	GB Watch Out! Do not over tighten NL Let Op! Niet te vast IT Attenzione! Non stringere RU Осторожно! Не затягивайте SK Dávaj Pozor! Nepreťahujte TR Dikkat! Üzerinde sıkmayın
--	--	--	---	--

