











# Parma



- (DE) Montageanleitung
- (PL) Instrukcja montażu
- (NL) Handleiding voor de montage
- (GB) Assembly instructions
- (TR) Montaj talimatı
- (RU) Инструкция по монтажу
- (IT) Istruzioni di montaggio
- (FR) Notice de montage
- (RO) Instrucțiuni de asamblare
- (SK) Montážny návod
- (CZ) Montážní návod
- (HU) Szerelési útmutató




2x (M8x60) a	5x (M8x90) k	12x j	9x Ø8 b	9x r	9x M8 c	9x (4x16) d	4x s
6x (5x50) t	2x (M6x35) g	8x 50mm y	2x (M8x70) e		1x 35cm 50cm 3	1x 45cm 45cm 2	5x 65cm 45cm 1

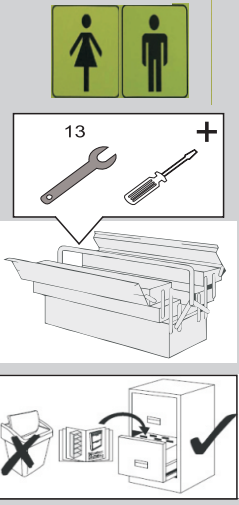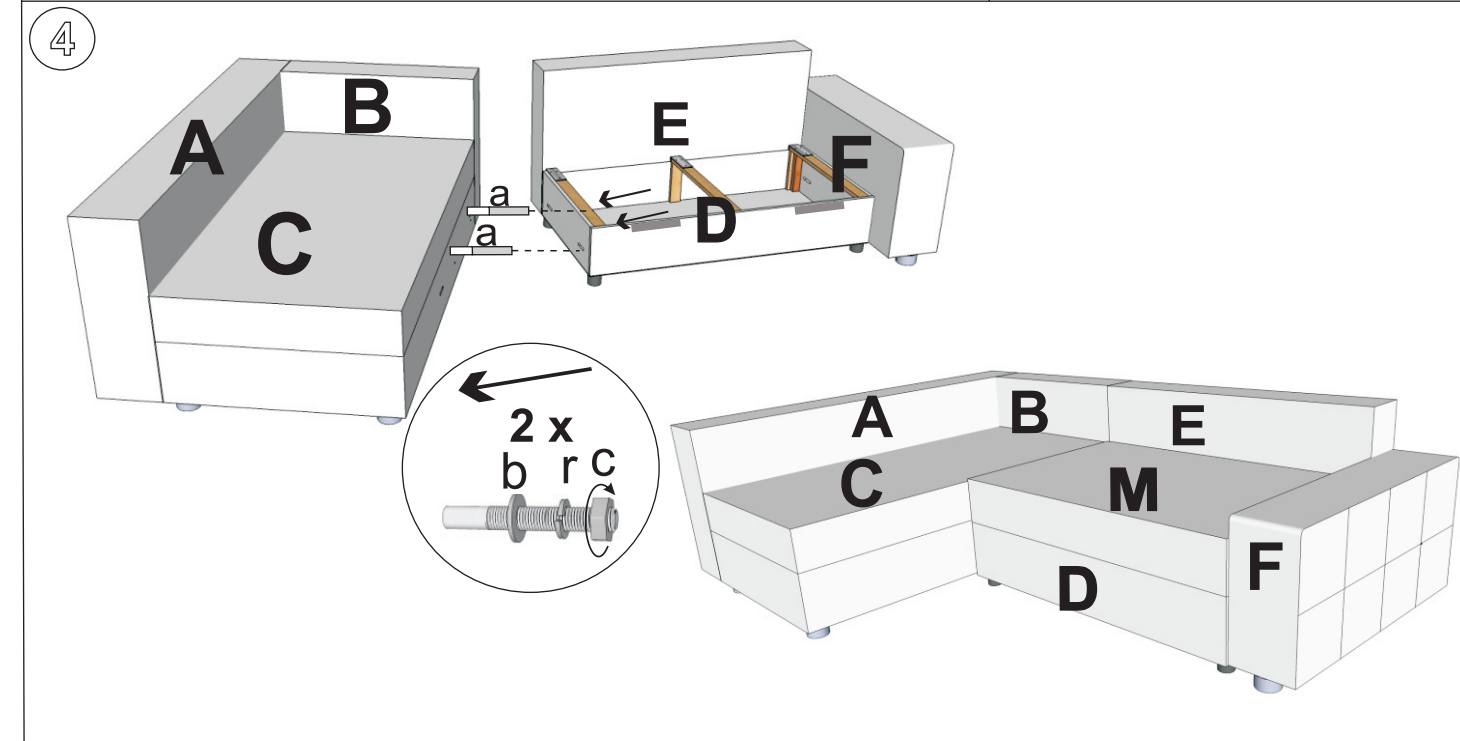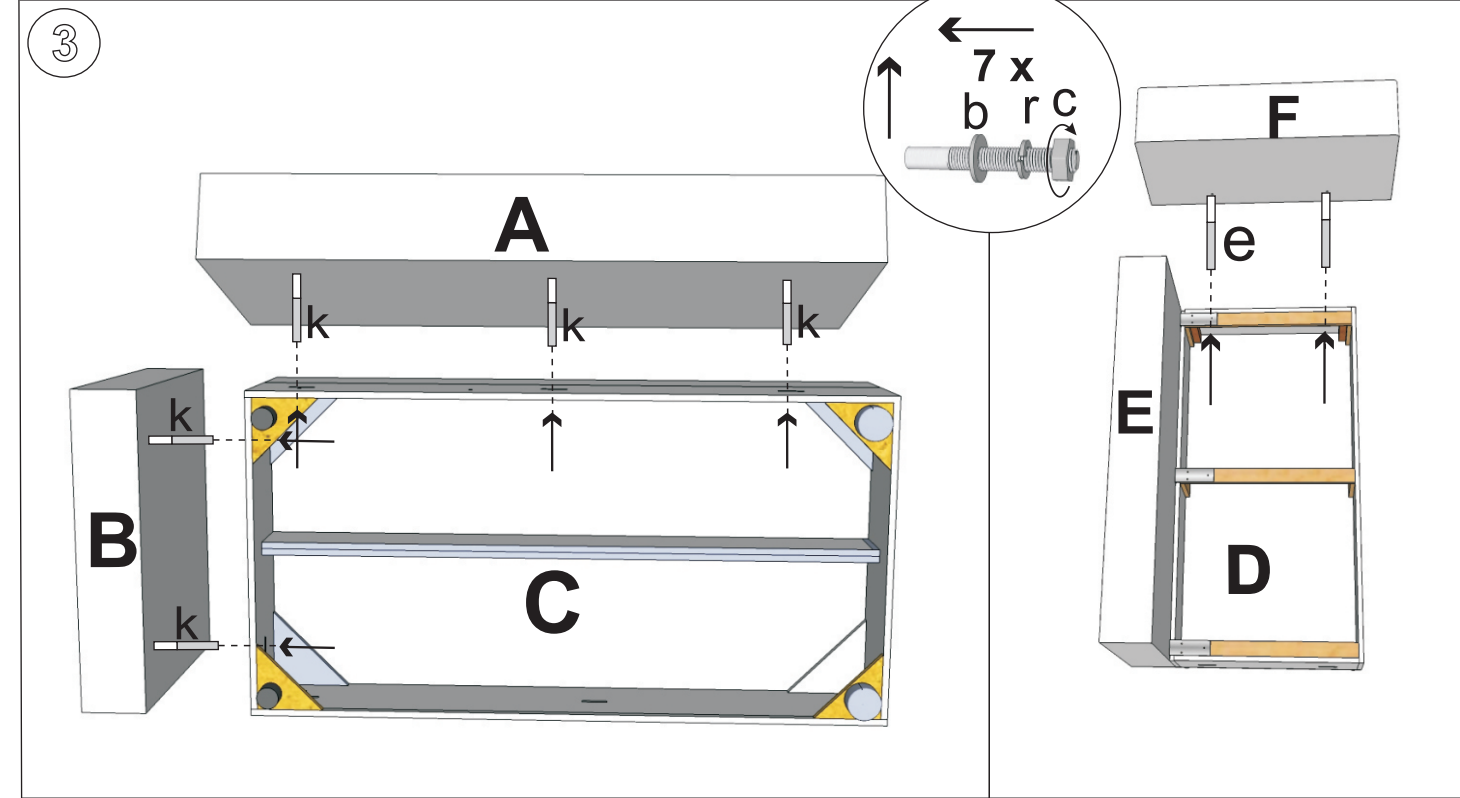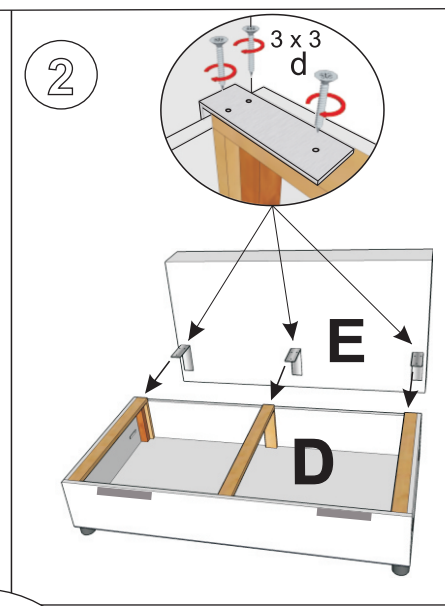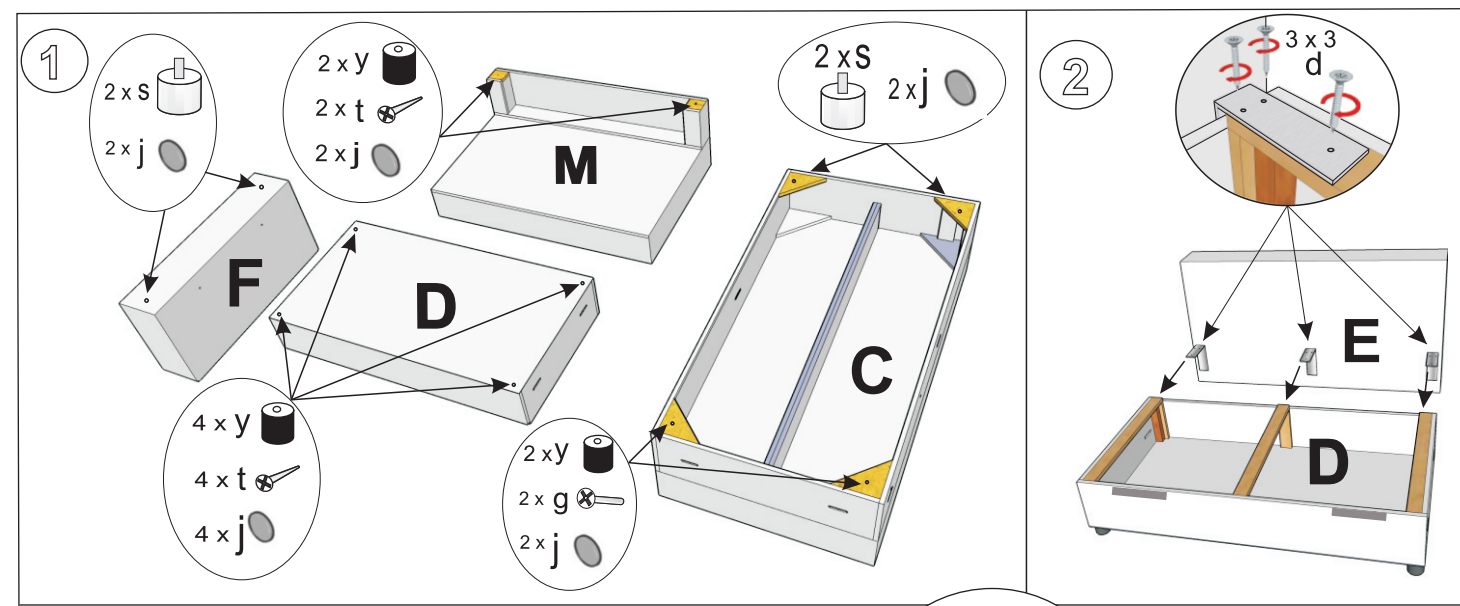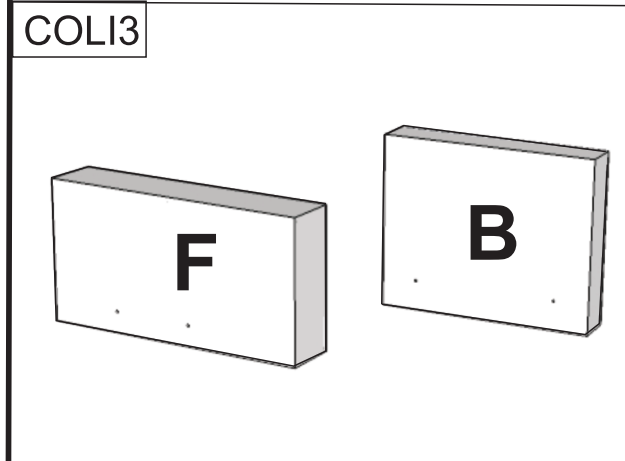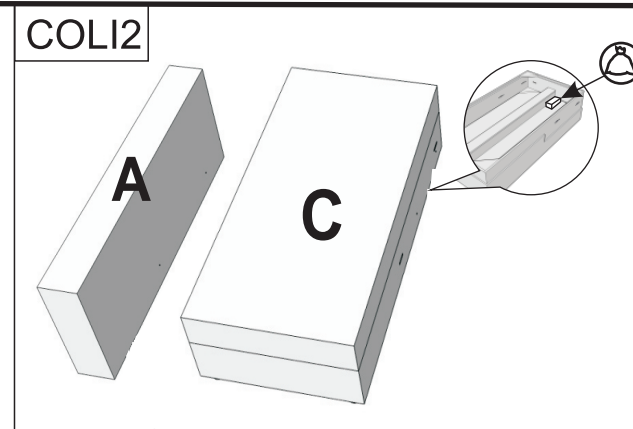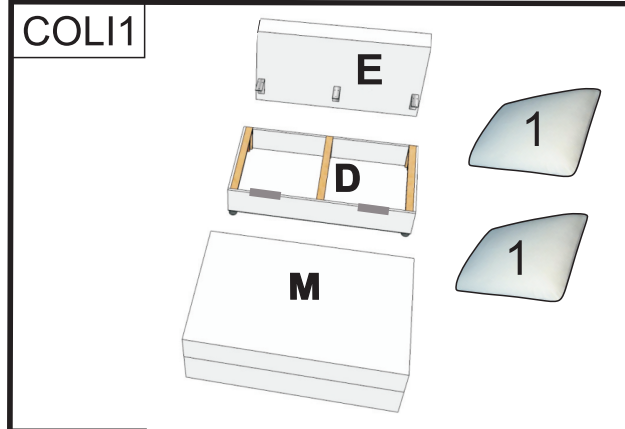

# Parma




- (DE) Montageanleitung
- (IT) Istruzioni di montaggio
- (PL) Instrukcja montażu
- (FR) Notice de montage
- (NL) Handleiding voor de montage
- (RO) Instrucțiuni de asamblare
- (GB) Assembly instructions
- (SK) Montážny návod
- (TR) Montaj talimatı
- (CZ) Montážní návod
- (RU) Инструкция по монтажу
- (HU) Szerelési útmutató

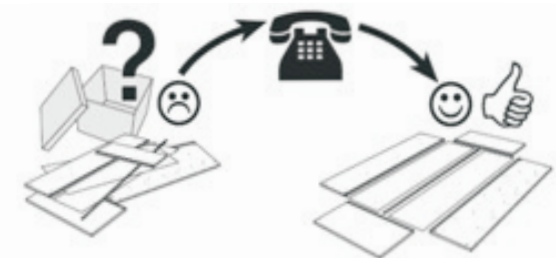


**2:R**

2x (M8x60) a	5x (M8x90) k	12x j	9x Ø8 b	9x r	9x M8 c	9x (4x16) d	4x s
6x (5x50) t	2x (M6x35) g	8x 50mm y	2x (M8x70) e		1x 35cm 3	1x 45cm 2	5x 45cm 1

COLI1

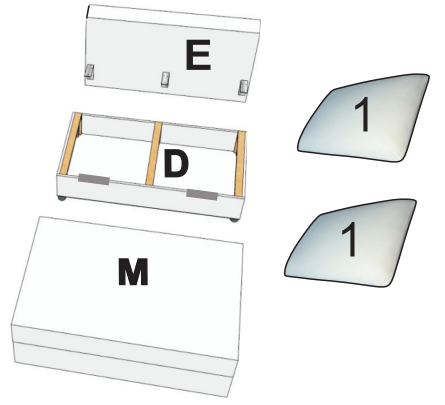

COLI2

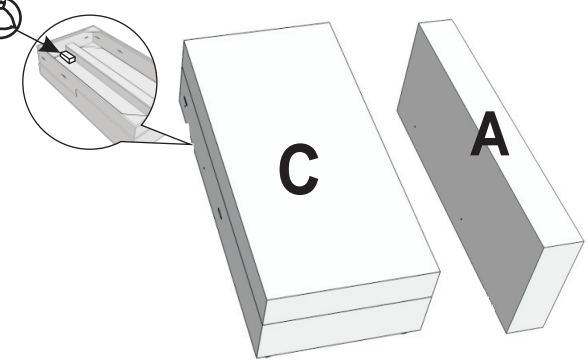

COLI3

