

# PARMA CORD




- (DE) Montageanleitung
- (PL) Instrukcja montażu
- (NL) Handleiding voor de montage
- (GB) Assembly instructions
- (TR) Montaj talimatı
- (RU) Инструкция по монтажу
- (IT) Istruzioni di montaggio
- (FR) Notice de montage
- (RO) Instrucțiuni de asamblare
- (SK) Montážny návod
- (CZ) Montážní návod
- (HU) Szerelési útmutató




2x (M8x60) <b>a</b>	5x (M8x90) <b>k</b>	12x <b>j</b>	9x Ø8 <b>b</b>	9x <b>r</b>	9x M8 <b>c</b>	9x (4x16) <b>d</b>	4x <b>s</b>
6x (5x50) <b>t</b>	2x (M6x35) <b>g</b>	8x 50mm <b>y</b>	2x (M8x70) <b>e</b>		1x 35cm <b>3</b>	1x 45cm <b>2</b>	5x 65cm <b>1</b>







COLI1

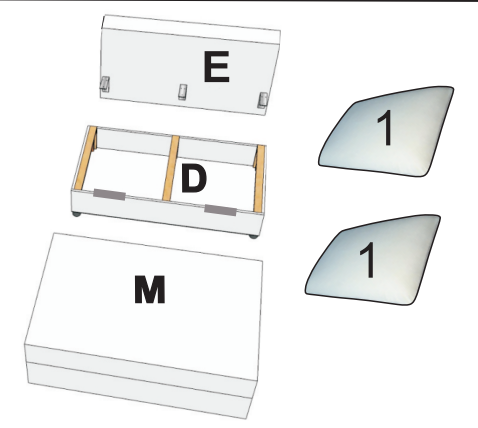

COLI2

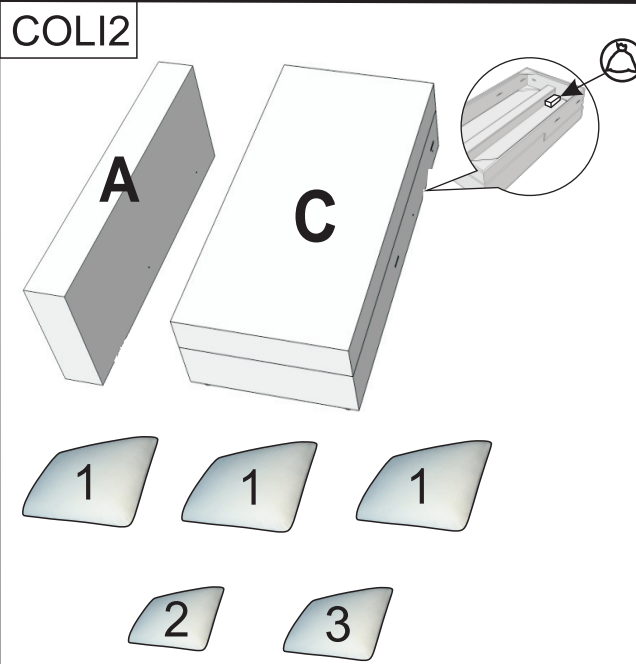


COLI3

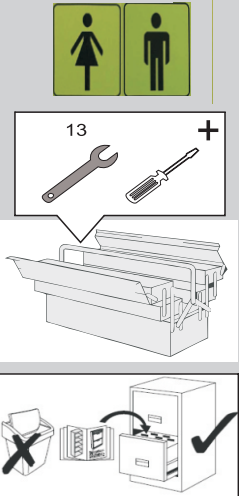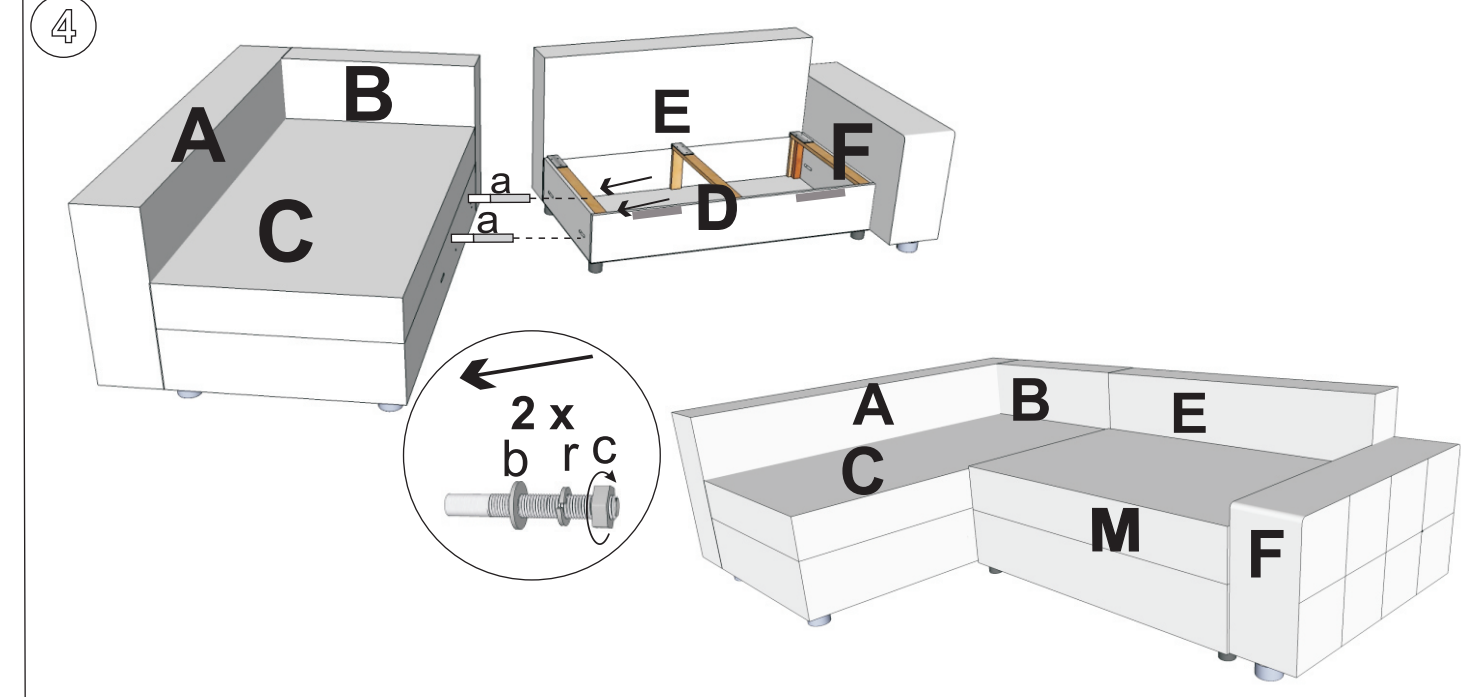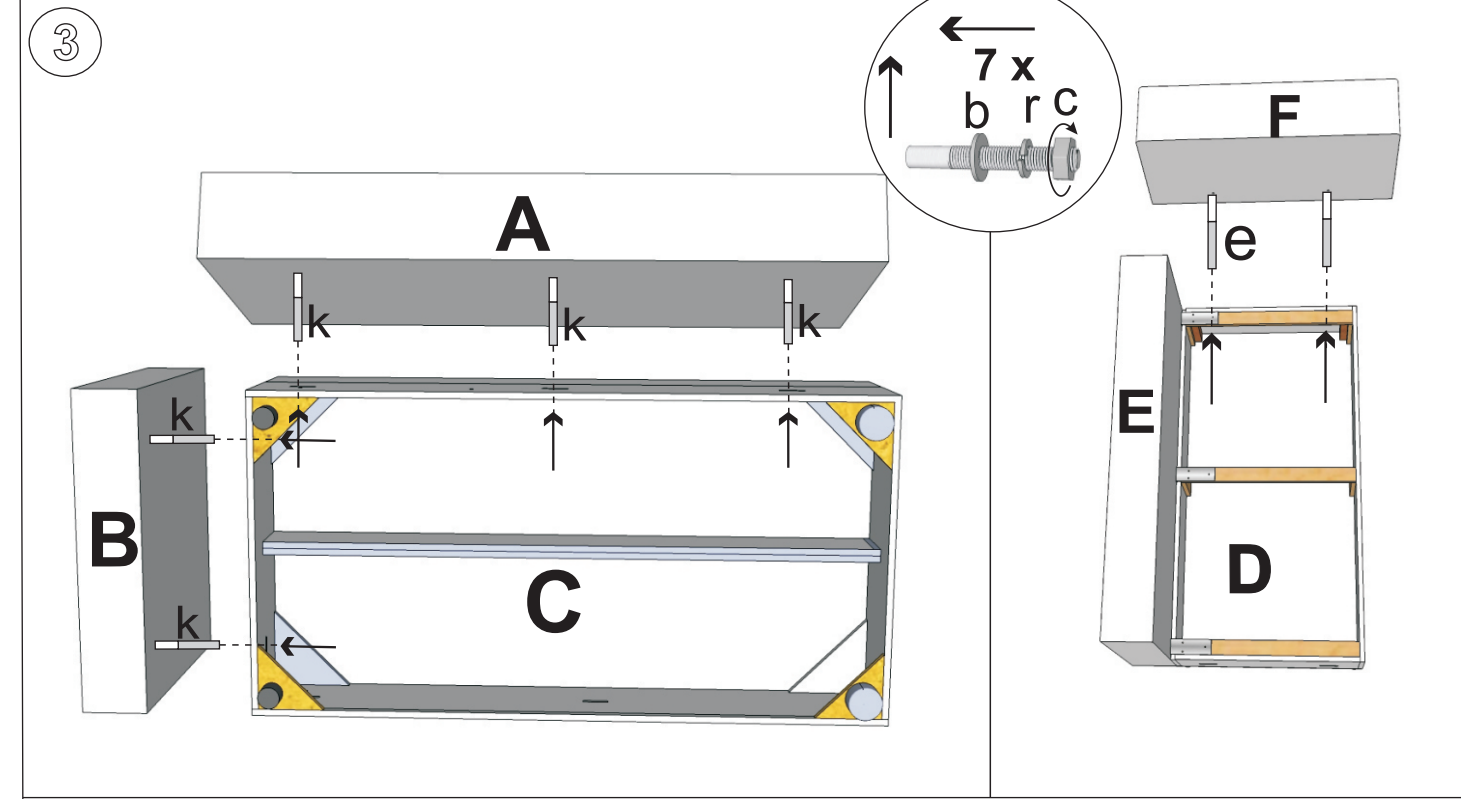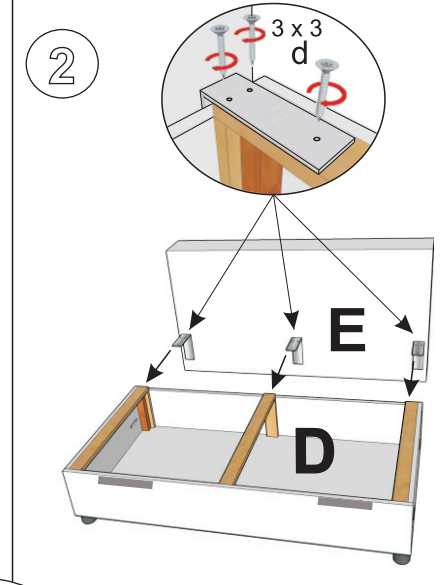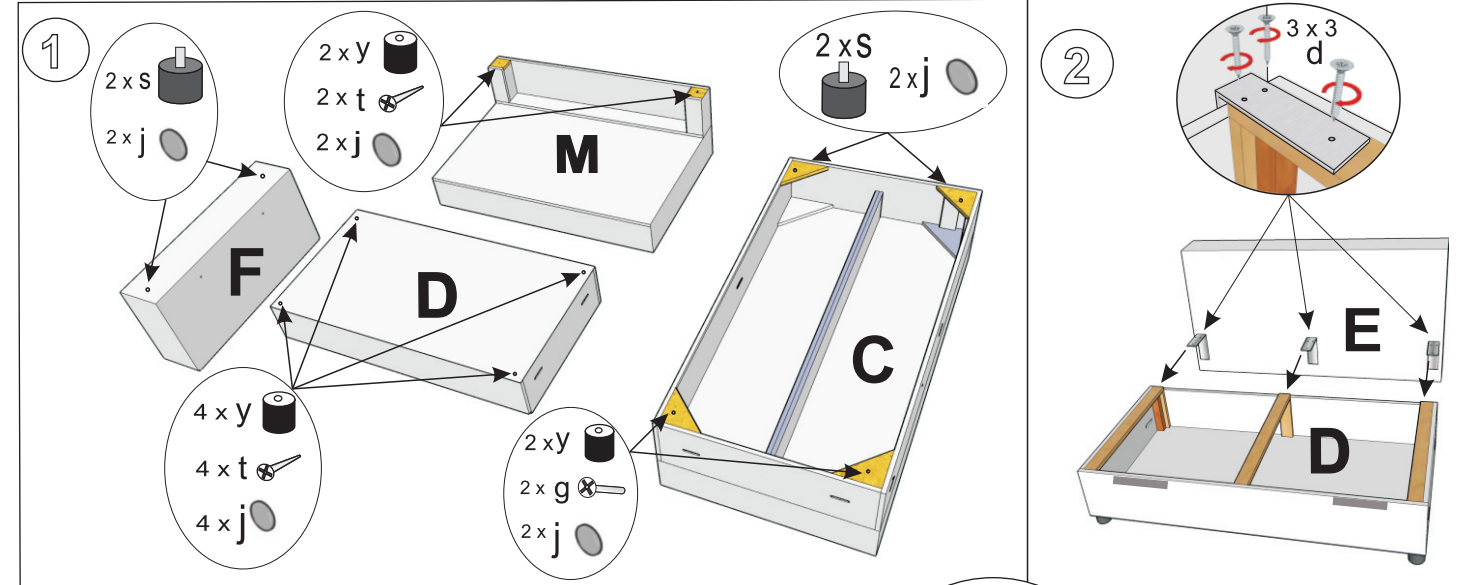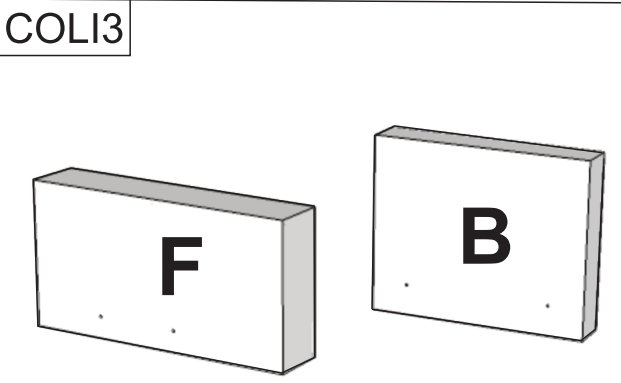

# PARMA CORD



- (DE) Montageanleitung
- (PL) Instrukcja montażu
- (NL) Handleiding voor de montage
- (GB) Assembly instructions
- (TR) Montaj talimatı
- (RU) Инструкция по монтажу
- (IT) Istruzioni di montaggio
- (FR) Notice de montage
- (RO) Instrucțiuni de asamblare
- (SK) Montážny návod
- (CZ) Montážní návod
- (HU) Szerelési útmutató

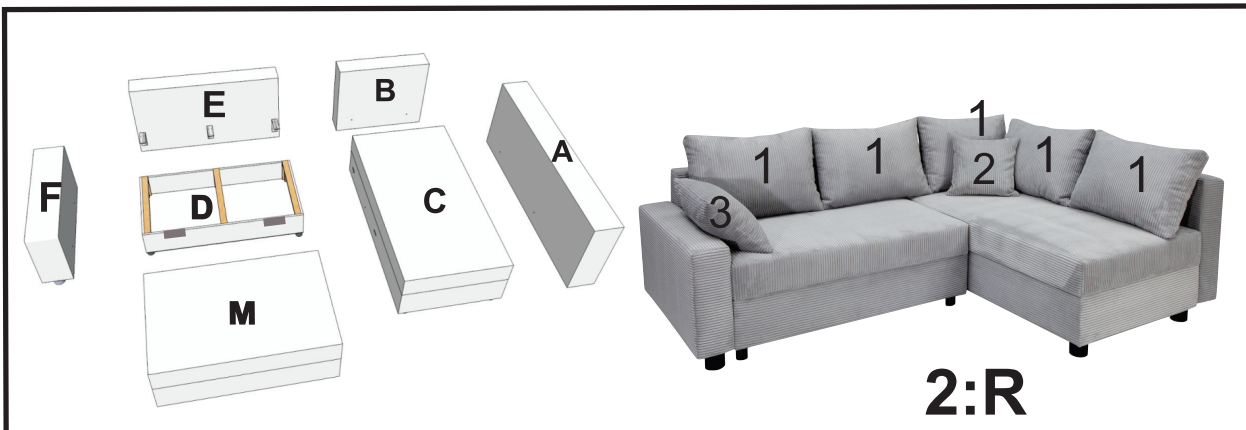

2x (M8x60) a	5x (M8x90) k	12x j	9x Ø8 b	9x r	9x M8 c	9x (4x16) d	4x s
6x (5x50) t	2x (M6x35) g	8x 50mm y	2x (M8x70) e		1x 35cm 3	1x 45cm 2	5x 65cm 1

