



D Montageanleitung	GB Assembly Instructions	NL Handheling voor de montage	PL Instrukcja montażu	HU Szervíz útmutató	RO Instrucții de montaj
FR Notice de montage	IT Istruzioni di montaggio	CZ Montážní návod	SK Návod na montáž	TR Montaj talimatı	RU Инструкция по монтажу

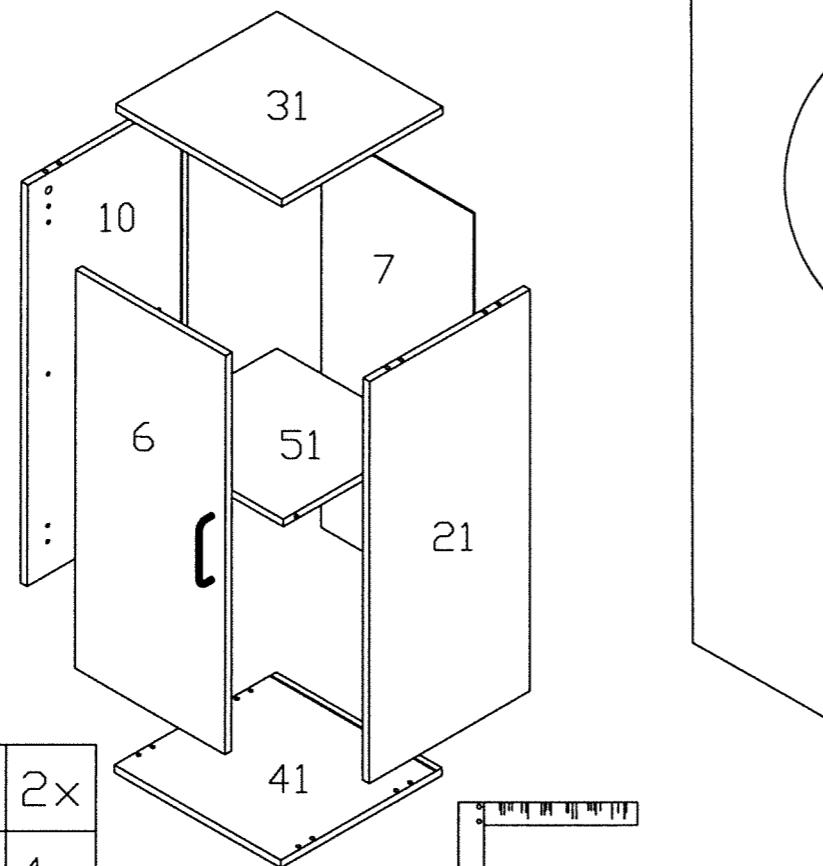

10. ASL 804x370x15mm	1
21. ASR 804x370x15mm	1
31. BL 381x370x15mm	1
41. BO 381x370x15mm	1
51. ZB 350x335x15mm	1
6. TR 798x346x15mm	1
7. RW 816x362x3mm	1



A7	15mm ↗	2x	r4	8x40	2x
b3	KA37	2x	s3	4x21	4x
e11	24,3	8x	s6	4x27	2x
f1		8x	t1	3,5x15	2x
k9	Blattschraube	2x	v	↘	1x
l		4x	x		4x
n	8x30mm	8x	y14	↗	8x
		z			10x

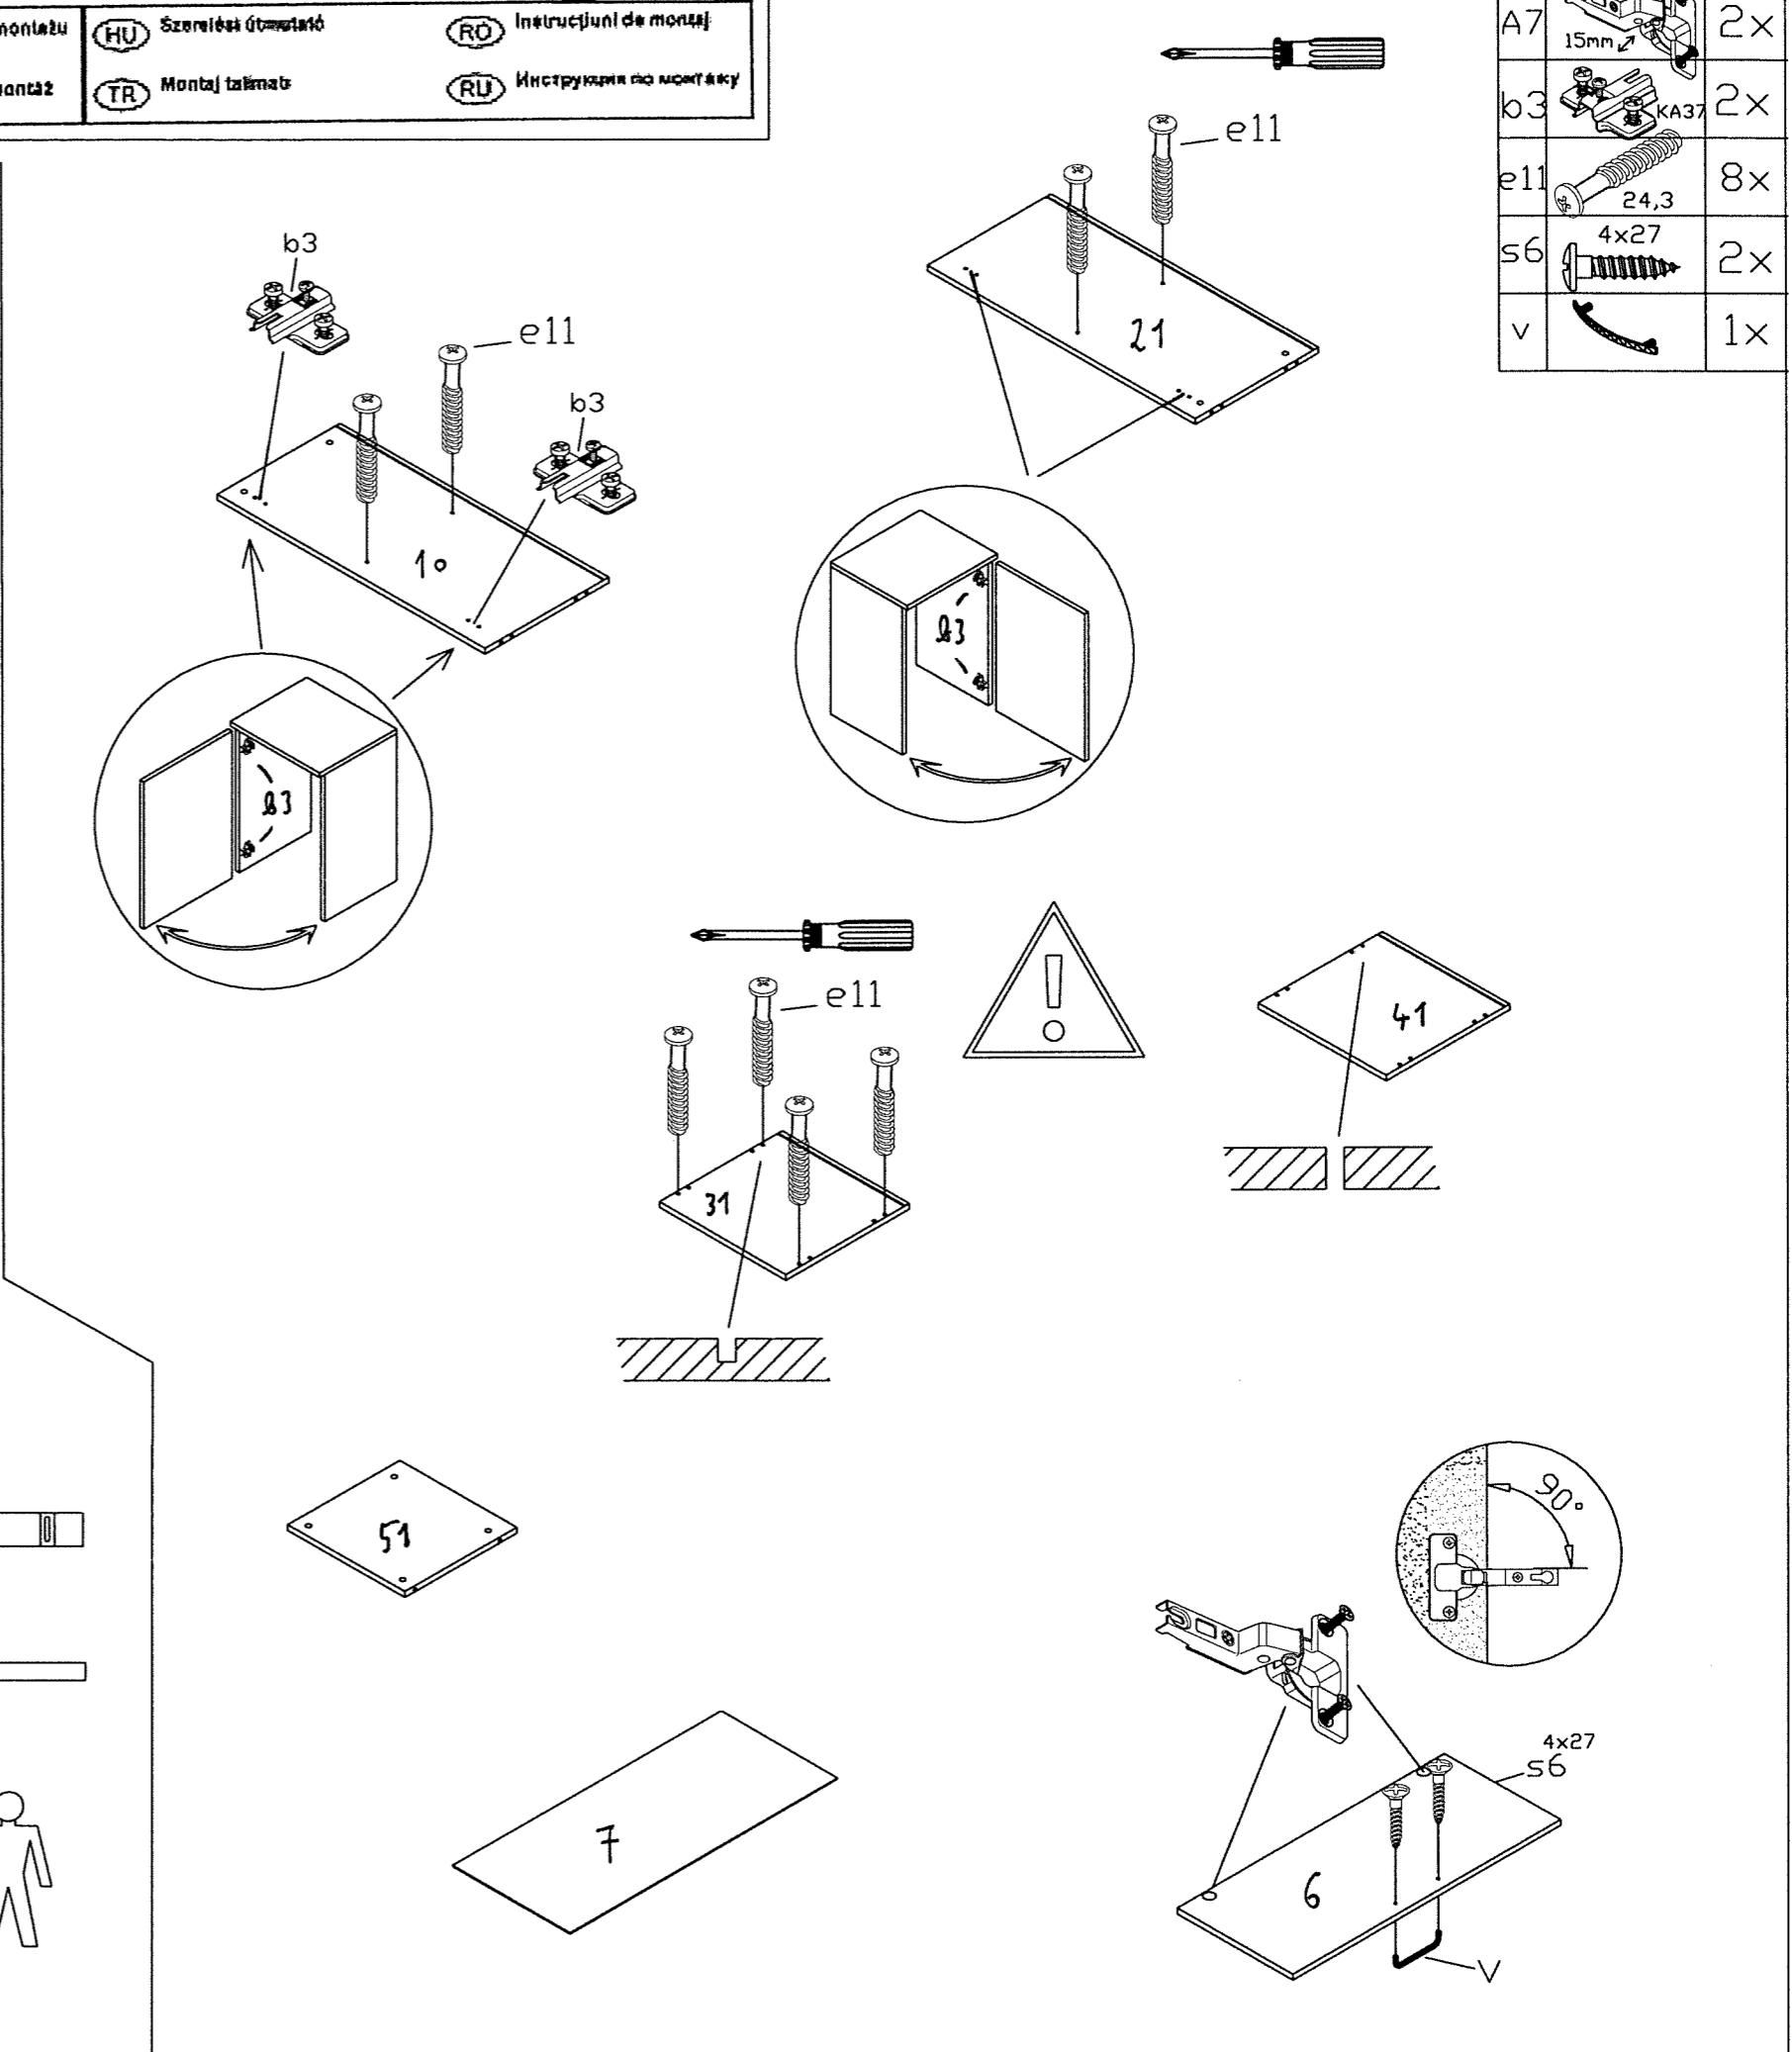

A7	15mm ↗	2x
b3	KA37	2x
e11	24,3	8x
s6	4x27	2x
v	↘	1x

