

D Aufbauanleitung

NL Handleiding voor de Montage

PL Instrukcja montażu

SK Montážny návod

RO Instrucțiuni de asamblare

GB Assembly Instruction

TR Montaj Talimatları

CZ Shromazďování instrukce

I Istruzioni per il montaggio



F Instructions de montage

RU Инструкция по монтажу


H Gennyesevés utasítások

Boxspringbett Madrid Variante mit Topper

Polsterbett-Gestoffteerde bed-Tapicerowane łóżko-Tapizata pat-Upholstered bed-Мягкая кровать-yataк kapitone-Letto imbottito-Lit rembourré
Čakuné postele čalounené postele kárpitovaný ágy

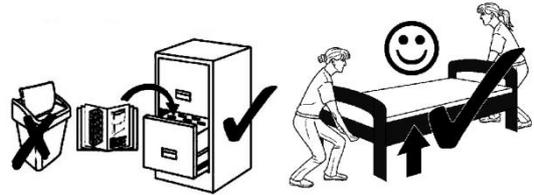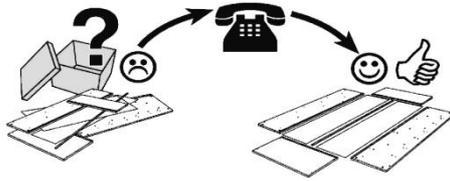


90cm, 100cm, 120cm




4 X

1 X

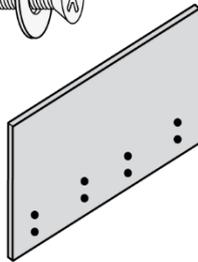


1 X

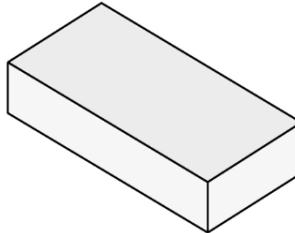


4 X



1 X

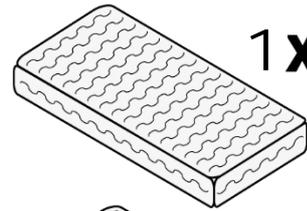


1 X

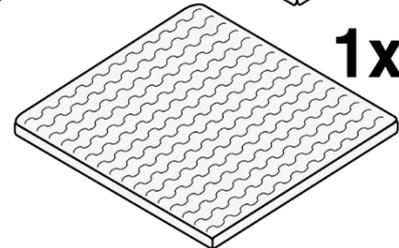


Schrauben in der Kopfteilverpackung enthalten

140 cm




8 X

1 X

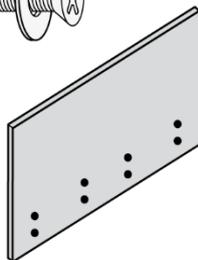


2 X

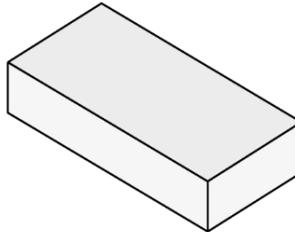


8 X



1 X

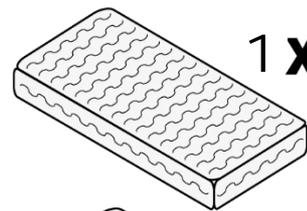


1 X

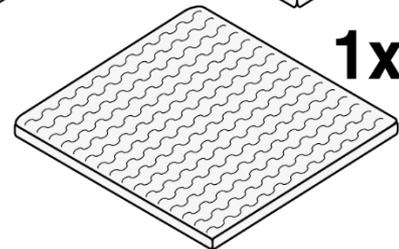


Schrauben in der Kopfteilverpackung enthalten

160cm, 180cm, 200cm




8 X

1 X

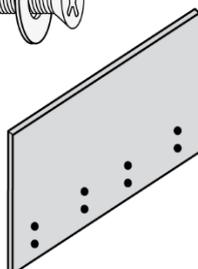


2 X

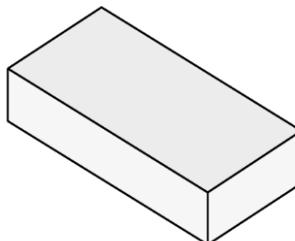


8 X







2 X

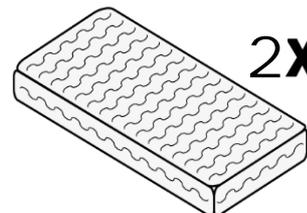

1 X

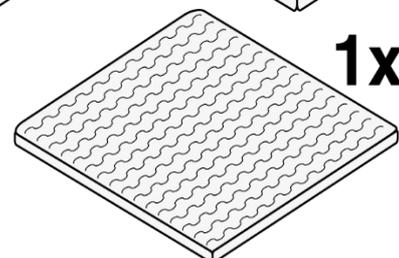

Schrauben in der Kopfteilverpackung enthalten

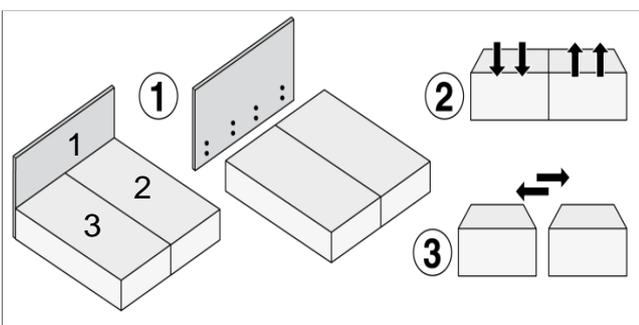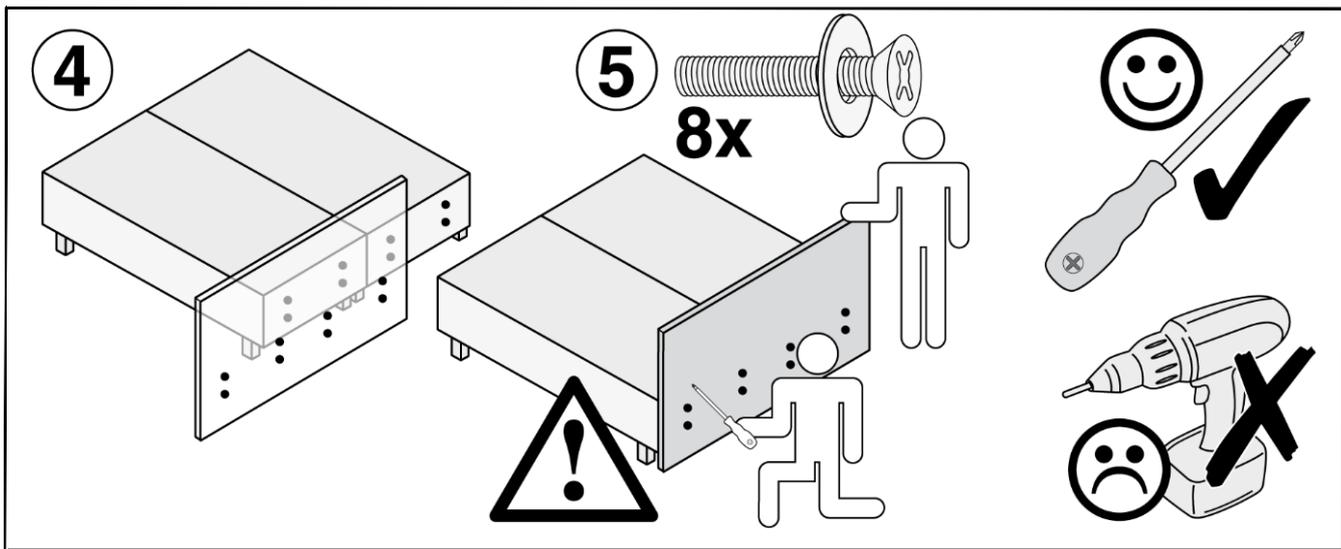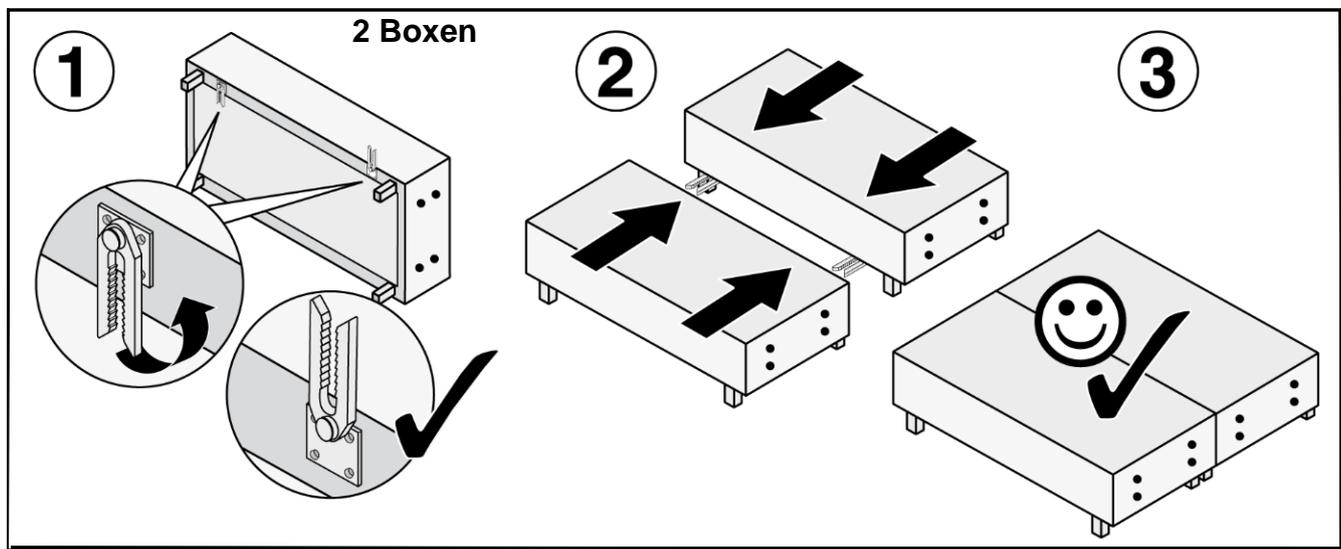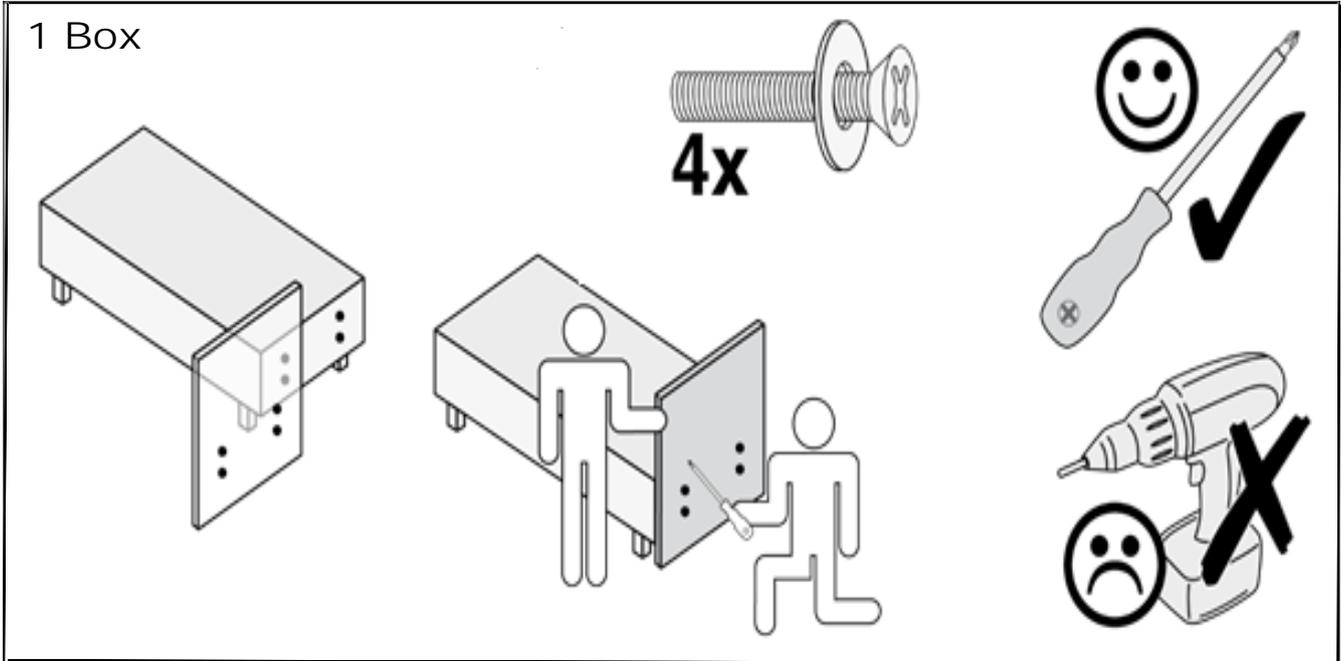

WESTFALIA
Polsterbetten

Made in Germany

Elastoflex GmbH
Löhner Straße 123
32584 Löhne
info@elastoflex-betten.de